



**Schneider**  
Electric

**SIEMENS**

**LS** ELECTRIC

**HYUNDAI**

**IS35**  
Ideal Selection Best Solution

**CHINT**

**Autonics**  
Sensors & Controllers

**SHIVA** **Amvaj**



آدرس : تهران ، خیابان لاله زار نو، بالاتر از خیابان منوچهری، مجتمع تجاری البرز ۲۰ ، طبقه اول ، واحد ۲۳۵  
تلفن : ۹۲ - ۰۲۱-۶۶۳۴۱۰۹۰      فروشگاه اینترنتی : [www.peoe.ir](http://www.peoe.ir)

@peoe\_iran

peoe\_iran

Right choice for ultimate yield

LSIS strives to maximize customers' profit in gratitude of choosing us for your partner.

# SV-iV5 User Manual

2.2~37kW (200VAC) / 2.2~375 kW (400VAC)  
/ 5.5~375kW (400VDC)

iV5 New Controller



## Safety Instructions

- Read this manual carefully before installing, wiring, operating, servicing or inspecting this equipment.
- Keep this manual within easy reach for quick reference.

**LSIS**

## **This User's Manual is aimed at.....**

Describing specification, installation, operation, function, and maintenance of SV-iV5 series inverter provided for the users who are familiar with and having basic experience in the inverter.

Be sure to understand function, performance, installation, and operation of the product by reading through this User's Manual completely prior to your use of SV-iV5 series inverter that you have purchased. In addition, you are required to have this User's Manual properly delivered to the end-user and maintenance manager.

### **■ Option Module Guide**

The following Option Module Guides will be provided when you purchase the applicable Option Module. In addition, if you access our homepage <http://www.lsis.biz/> [Customer Support] - [Download Data Room], you can download it in PDF file.

- IV5 EL (Elevator) I/O Option Module Guide (Korean)
- IV5 SYNC Option Module Guide (Korean)
- IV5 SIN/COS Encoder Card Option Module Guide (Korean)
- IP5A/IV5 RS-485 & Modbus-RTU Option Module Guide (Korean)
- IS5/IP5A/IV5 Profibus-DP Card Option Module Guide (Korean)
- IS5/IP5A/IV5 DeviceNet Card Option Module Guide (Korean)
- IP5A/IV5 CC-Link Card Option Module Guide (Korean)

## Safety Instructions

To prevent injury and property damage, follow these instructions. Incorrect operation due to ignoring instructions will cause harm or damage.

The seriousness of which is indicated by the following symbols.

Symbol		Meaning
	Warning	This symbol indicates the possibility of death or serious injury.
	Caution	This symbol indicates the possibility of injury or damage to property.

### Remark

- Even if the instructions are indicated as 'Caution', it can cause a serious result according to the kind of operation and the environment.

The meaning of each symbol in this manual and on your equipment is as follows.

Symbol	Meaning
	This is the safety alert symbol. Read and follow instructions carefully to avoid dangerous situation.
	This symbol alerts the user to the presence of "dangerous voltage" inside the product that might cause harm or electric shock.

After reading this manual, keep it in the place that the user always can contact easily.

This manual should be given to the person who actually uses the products and is responsible for their maintenance.

### WARNING

- **Do not remove the cover while power is applied or the unit is in operation.**  
Otherwise, electric shock could occur.
- **Do not run the inverter with the front cover removed.**  
Otherwise, you may get an electric shock due to high voltage terminals or charged capacitor exposure.
- **Do not remove the cover except for periodic inspections or wiring, even if the input power is not applied.**  
Otherwise, you may access the charged circuits and get an electric shock.
- **Wiring and periodic inspections should be performed at least 20 minutes**

### WARNING

**after disconnecting the input power and after checking the DC link voltage is discharged with a meter (below DC 30V).**

Otherwise, you may get an electric shock.

- **Operate the switches with dry hands.**

Otherwise, you may get an electric shock.

- **Do not use the cable when its insulating tube is damaged.**

Otherwise, you may get an electric shock.

- **Do not subject the cables to scratches, excessive stress, heavy loads or pinching.**

Otherwise, you may get an electric shock.

- **This inverter must be earthed/grounded.**

### CAUTION

- **Install the inverter on a non-flammable surface. Do not place flammable material nearby.**

Otherwise, fire could occur.

- **Disconnect immediately the input power if the inverter gets damaged.**

Otherwise, it could result in a secondary accident and fire.

- **After the input power is applied or removed, the inverter will remain hot for a couple of minutes.**

Otherwise, you may get bodily injuries such as skin-burn or damage.

- **Do not apply power to a damaged inverter or to an inverter with parts missing even if the installation is complete.**

Otherwise, electric shock could occur.

- **Do not allow lint, paper, wood chips, dust, metallic chips or other foreign matter into the drive.**

Otherwise, fire or accident could occur.

## Caution for Use

### ■ Transportation and Installation

- Be sure to carry inverter in a proper way suitable for its weight, or it may result in damage to inverter.
- Be sure to use heat-treated wooden crate when you adopt wooden packaging for the product.
- Do not pile up inverters above allowable limit.
- Be sure to install the inverter as directed in this instruction manual.
- Do not turn off the power supply to the damaged inverter.
- Do not open the front cover while carrying the inverter.
- Do not place the heavy material on the inverter.
- The direction of installation should be observed properly as criterions specified in this manual show.
- Make sure that you should not put screw, metal material, water, oil and the inflammable something else.
- Keep in mind that inverter is very vulnerable to drop from the mid air and strong shock.
- Don't let the inverter exposed to rain, snow, fog, dust, etc.
- Do not cover, nor block, the ventilating system having cooling fan. It may cause the inverter overheated.
- Be sure to check the power is off when installing the inverter.
- To prevent the risk of fire or electric shock, keep the connected wire in a sound condition. Use the wire that meets the standard in a recommended length.
- Be sure to ground the inverter. (Under 10 Ω to 200V class, Under 100 Ω to 400V class)
- Be certain to use the inverter under the following conditions.

Environment	Description
Ambient Temperature	- 10 ~ 40 °C (Non-frozen) (Less than 80% load is recommended at 50 °C.)
Ambient Humidity	Below 90% RH (Dewdrop should not be formed)
Storage Temperature	-20 ~ 65 °C
Ambient Condition	Free of corrosive gas, inflammable gas, oil sludge and dust, etc
Altitude/Vibration	Below 1000m above sea level, Below 5.9m/sec <sup>2</sup> (=0.6g)
Ambient Air Pressure	70 ~ 106 kPa

### ■ Wiring

#### Caution

- **A professional installer should have done the wiring and checking.**

- Do wiring after installing the inverter body.
- Do not connect phase-leading capacitors, surge filter, radio noise filter to the output of inverter.
- Output terminals (terminals named U, V, W respectively) should be connected in a proper phase sequence.
- Make sure that there is not any short circuit terminal, wrong wiring. It may cause spurious operation or failure.
- Refrain from using a cable other than the cable shielded when you connect control circuit wiring.
- Adopt the shielded wire only when wiring the control circuit. It may cause the failure of inverter in its operation. Use the twisted pair shield wire for the ground terminal of the inverter.

#### Warning

- **To prevent an electric shock, be sure to check if MCCB and MC are switched OFF before wiring**  
Otherwise, it may cause an electric shock.

### ■ Adjustment before starting trial operation

- Do not supply the excessive range of voltage displayed in the user manual to the each terminal. It may cause damage to the inverter.
- Current hunting can be occurred in the low speed territory during testing. It occurs where the capacity is above 110kW with no-load and the axis is not connected. The current hunting has a gap according to the motor characteristic. It will be disappeared when the load is connected and it is not the indication of abnormal condition.  
If the hunting is occurred seriously, please stop the testing and operates with the load.
- Be sure to check relevant parameters for the application before starting trial operation.

### ■ How to Use

- Be sure not to approach the machine when retry function is selected. The machine may start working suddenly.
- Stop key on the keypad should be set to be in use. For safety, additional emergency stop circuit should be required.
- Inverter restarts if alarm condition is cleared while FX/RX signal is on. Therefore, be sure to operate the alarm reset switch after checking if FX / RX signal is off.
- Never modify the inverter for inappropriate use.
- When a magnetic contactor is installed on the power source, do not frequently start or stop using this magnetic contactor. It may cause the failure of inverter.

- Noise filter should be used for the minimization of troubles by electro-magnetic noise. Electronic equipments close to the inverter should be protected against the damage caused by troubles.
- Be sure to install the AC reactor at the input of inverter in case of input voltage unbalance. Otherwise, generator or phase-leading capacitors may be destroyed by the harmonic current from inverter.
- If 400V class motor is used with the inverter, insulation-enforced motor should be used or countermeasures against the suppression of micro-surge voltage generated by the inverter should be carried out. Otherwise, micro-surge voltage is generated across input terminal for the motor and this voltage lowers allowable insulation break-down voltage and then, may cause the destruction of the motor.
- Be sure to set the parameters once more, in case of initialization of parameters, all values of parameters is set to values of factory setting.
- High speed operation can be set easily, therefore be sure to check the performance of motor or machine before changing parameter value.
- DC braking function cannot produce a zero-servo torque. If required, additional equipment should be installed.
- When inverter trip or emergency stop (BX) occurs without keypad connected, LED on the control board will blink by the interval of 0.5 sec. But LED will blink by 1 sec when keypad is connected. This function displays which trip will be occurred according to the connection of keypad.
- Do not change wiring, nor disconnect connector or option card during the operation of inverter.
- Do not disconnect the motor wiring while the voltage of inverter is output. Mishandling may cause damage to the inverter.
- Be sure to handle the inverter and option care in the order recommended in the Electro Static Discharge (ESD) Countermeasure. Mishandling may lead to damage to the circuit on the PCB caused by ESD.

### ■ Countermeasure against malfunction troubles

- If inverter is damaged and then gets into uncontrollable situation, the machine may lead to the dangerous situation, therefore to avoid this situation, be sure to install the additional equipments such as brake.

### ■ Maintenance, inspection and parts replacement

- Do not perform the megger (insulation resistance check) test on the control board.
- Please refer to intervals for parts replacement on Chapter 8.

### ■ Disposal

- Handle the inverter as an industrial waste when disposing of it.
- Our inverter contains the raw material of value that can be recycled from the aspect of energy and resource preservation. All the package materials and metal parts are recyclable. Plastics are also recyclable, but may be burnt under the controllable environment depending on the local regulation.

### ■ General Instruction

- The drawing in this user manual is represented the details of the inner inverter, so, the drawing is described without cover part and circuit breaker. But, cover and circuit breaker should be mounted before the operation following to the instruction of user manual.
- Turn off the power of inverter when the inverter is not used.

### ■ Cleaning

- Be sure to operate the inverter under a clean condition.
- When cleaning the inverter, be sure to check the inverter is off. Start cleaning it with all the plugs connected with the inverter socket removed.
- Never clean the inverter using wet cloth or water. Wipe the stained area softly using the cloth completely wet with a neutral detergent or ethanol.
- Never use the solution such as acetone, benzene, toluene, alcohol, etc. They may cause the coating on the surface of the inverter to peel off. In addition, do not clean LCD display, etc. using detergent or alcohol.

### ■ Storage

- Be sure to keep the inverter under the following conditions if you don't use it for a long period of time.
- Make sure that you satisfy the recommended storage environment. (See page v.)
- If the storage period exceeds 3 months, be sure to keep it at the ambient temperature of  $-10 \sim +30^{\circ} \text{C}$  to prevent 『Deterioration by Temperature』 of electrolytic condenser.
- Be sure to keep it in a proper package to prevent moisture, etc. Put the desiccant (Silica Gel), etc., in the package so that the relative humidity in the package can be maintained at 70% or less.
- When it is exposed to moisture or dust (mounted on the 『System』 or 『Control Panel』, etc. installed at the construction site), remove it and then keep it under the environmental condition specified in the page v.

#### Caution

- **If the inverter has been left long with electric current not charged, the nature of electrolytic condenser can be deteriorated. So be sure to have it plugged in for 30 ~ 60 minutes once a year. Do not perform wiring and operation of the output side (secondary side).**

## Chapter 1 - Introduction

This instruction manual is designed for **LS STARVERT-iV5 series Vector Control Inverters**, which have excellent characteristics in speed and torque control with pulse encoder mounted on the shaft of 3 phase induction motor, and covers installation, maintenance, wiring and operation for these inverters.

### 1.1 Key Features

- Current Controlled Vector Control Inverter with Speed Sensor using IGBT as Power Semiconductor Device.
- Tension/Torque Control and Wide Variety of Process Control
- Process PI Control, Draw Control, Droop Control, Synchronous Control, WEB Control etc.
- Auto-tuning of Motor Parameters for Precise Speed/Torque Control: Rotational/Standstill mode
- Encoder error (H/W and S/W) Detection Function
- Auxiliary Battery Function and Emergent Operation by Battery Operation
- Various Option for Communication and Application
- Inverter Application

Application	Applicable Machine/System	Features
Process Control	Steel Strip Paper Mill Textile Film Coater Printing Machine	Tension Control Wide Range of Speed Control
Hoisting Control	Lifts (Elevators) Parking Stacker Crane Crane Hoist	High Speed Operation High Starting Torque Positioning Wide Range of Speed Control
Machine Control	Machine Tool Wire Drawing Extruder Warper	High Speed Operation High Starting Torque Positioning
Others	Conveyor Industrial Washing Machine	High Speed Operation Positioning



## Chapter 2 - Specification

### 2.1 Standard Specification

#### 2.1.1 200V Class (AC power input type)

SV□□□□iV5-2(DB)		022	037	055	075	110	150	185	220	300	370
Max. applicable motor output Note1)	[HP]	3	5	7.5	10	15	20	25	30	40	50
	[kW]	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37
Output	Capacity [kVA] <sup>(Note2)</sup>	4.5	6.1	9.1	12.2	17.5	22.5	28.2	33.1	46	55
	Rated current [A]	12	16	24	32	46	59	74	88	122	146
	Speed	0 ~ 3600(rpm)									
	Voltage	0 ~ 200V (230V <sup>(Note3)</sup> )									
Input	Voltage	3φ 200 ~ 230V(-10% ~ +10%)									
	Frequency	50 ~ 60Hz(±5%)									
Inverter weight [kg(lbs)]		6 (13)	6 (13)	14 (30)	14 (30)	27.5 (60)	27.5 (60)	28 (61)	28 (61)	42 (93)	42 (93)

#### 2.1.2 400V Class (AC power input type)

SV□□□□iV5-4(DB)		022	037	055	075	110	150	185	220	300	370	450
Max. applicable motor output Note1)	[HP]	3	5	7.5	10	15	20	25	30	40	50	60
	[kW]	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45
Output	Capacity [kVA] <sup>(Note2)</sup>	4.5	6.1	9.1	12.2	18.3	22.9	29.7	34.3	46	57	70
	Rated Current [A]	6	8	12	16	24	30	39	45	61	75	91
	Speed	0 ~ 3600(rpm)										
	Voltage	0 ~ 380V (480 <sup>(Note3)</sup> )										
Inverter weight [kg(lbs)]		6 (13)	6 (13)	14 (30)	14 (30)	27 (59)	28 (61)	28 (61)	28 (61)	42 (93)	42 (93)	63 (139)
Input	Voltage	3φ 380 ~ 480V(-10% ~ +10%) <sup>(Note4)</sup>										
	Frequency	50 ~ 60 Hz (±5%)										

SV□□□□iV5-4(DB)		550	750	900	1100	1320	1600	2200	2800	3150	3750
Max. applicable motor output Note1)	[HP]	75	100	120	150	175	215	300	373	420	500
	[kW]	55	75	90	110	132	160	220	280	315	375
Output	Capacity [kVA] <sup>(Note2)</sup>	85	116	140	170	200	250	329	416	468	557
	Rated Current [A]	110	152	183	223	264	325	432	546	614	731
	Speed	0 ~ 3600(rpm)									
	Voltage	380 ~ 480V <sup>(Note3)</sup>									
Inverter weight [kg(lbs)]		63 (139)	68 (150)	98 (216)	98 (216)	122 (269)	122 (269)	175 (386)	243 (536)	380 (838)	380 (838)
Input	Voltage	3φ 380 ~ 480V(-10% ~ +10%) <sup>(Note4)</sup>									
	Frequency	50 ~ 60 Hz (±5%)									

※ The electrical specifications of the MD type (2.2~22kW Class) are the same as the above.  
(In case of 2.2 and 3.7 KW products, refer to the weight in above table.)

SV□□□□iV5-2/4DB(MD)		055	075	110	150	185	220
Inverter weight [kg(lbs)]		7.7(16.9)	7.7(16.9)	13.7(30.2)	13.7(30.2)	20.3(44.7)	20.3(44.7)

### 2.1.3 400V Class (DC power input type)

SV□□□iV5-4DC		055	075	110	150	185	220	300	370	450	550
Max. applicable motor output Note1)	[HP]	7.5	10	15	20	25	30	40	50	60	75
	[kW]	5.5	7.5	11	15	18.5	22	30	37	45	55
Output	Capacity [kVA] <sup>Note2)</sup>	9.1	12.2	18.3	22.9	29.7	34.3	46	57	70	85
	Rated Current [A]	12	16	24	30	39	45	61	75	91	110
	Speed	0 ~ 3600(rpm)									
	Voltage	0 ~ 380V (480V <sup>note3)</sup> )									
Input rated voltage		DC 540 ~ 680V(+10%) <sup>note5)</sup>									
Inverter weight [kg (lbs)]		12 (26)	12 (26)	24 (53)	24.5 (54)	25 (55)	25 (55)	38.5 (84)	38.5 (84)	50 (110)	50 (110)

SV□□□iV5-4DC		750	900	1100	1320	1600	2200	2800	3150	3750	
Max. applicable motor output Note1)	[HP]	100	120	150	175	215	300	373	420	500	
	[kW]	75	90	110	132	160	220	280	315	375	
Output	Capacity [kVA] <sup>Note2)</sup>	116	140	170	200	250	329	416	468	557	
	Rated Current [A]	152	183	223	264	325	432	546	614	731	
	Speed	0 ~ 3600(rpm)									
	Voltage	0 ~ 380V (480V <sup>note3)</sup> )									
Input rated voltage		DC 540 ~ 680V(+10%) <sup>note5)</sup>									
Inverter weight [kg (lbs)]		55 (121)	79 (174)	79 (174)	98.5 (217)	98.5 (217)	154.5 (340)	206 (454)	343 (756)	343 (756)	

**Note)**

1. It represents the output capacity of maximum applicable motor in case 4 poles of motor are used.  
(200V is based on 220V and 400V is based on 440V.)
2. Rated capacity (=  $\sqrt{3} \cdot V \cdot I$ ) is calculated based on 220V for 200V class, 440V for 400V class.
3. Maximum output voltage cannot be generated above specified input voltage.
4. Derate the rated current by 10% when the input voltage is in the range above 480V.
5. Rated current is derated by 10 % above 680 VDC of input voltage.

\* 500kW AC/DC input type will be released soon.

2.2 Common Specification

Items		Detailed Specification
Inverter type		Voltage source inverter using IGBT
Control	Control method	<ul style="list-style-type: none"> <li>Field oriented vector control inverter with speed sensor attached, Sensorless vector control inverter</li> </ul>
	Speed control accuracy	<ul style="list-style-type: none"> <li>Analog setting: <math>\pm 0.01\%</math>(<math>25 \pm 10^\circ\text{C}</math>) of max. Speed (1,800 rpm)</li> <li>Digital setting: <math>\pm 0.01\%</math>(<math>0 \sim 40^\circ\text{C}</math>) of max. Speed (1,800 rpm)</li> </ul>
	Speed setting resolution	<ul style="list-style-type: none"> <li>Analog setting: <math>\pm 0.1\%</math> of maximum Speed</li> <li>Digital setting: 0.1 rpm</li> </ul>
	Cut-off frequency of ASR	50Hz
	Torque control accuracy	3%
	Overload Capacity	CT: 150%/1Min
	Accel/Decel	Time setting
Combination		4 Combinations of acceleration/Deceleration Time
Pattern		Linear, S-Curve
Braking	Braking method	Dynamic braking using external resistors
	Braking torque	150%
	Braking resistor	External braking resistor should be provided.
Input	Speed settings	<ul style="list-style-type: none"> <li>Digital setting via keypad</li> <li>Multi-step speed setting by input terminal selection</li> <li>Analog input settings of <math>-10\sim 10\text{V}</math> or <math>4\sim 20\text{mA}</math></li> <li>Remote setting by option card</li> </ul>
	Analog input	<ul style="list-style-type: none"> <li>3 channels (AI1, AI2, AI3*, (AI4,AI5: Extended I/O))</li> <li><math>-10\rightarrow 10\text{V}</math>, <math>10\rightarrow 10\text{V}</math>, <math>0\rightarrow 10\text{V}</math>, <math>10\rightarrow 0\text{V}</math>, <math>0\rightarrow 20\text{mA}</math>, <math>20\rightarrow 0\text{mA}</math>, (*AI3(AI5:Extended I/O): Motor NTC selectable)</li> <li>Selectable among 16 different user-defined functions</li> <li>AI3, AI5(Motor NTC):only available with HIGEN motors.</li> </ul>
	Contact input	<ul style="list-style-type: none"> <li>FX, RX, BX, RST, P1, P2, P3, P4, P5, P6, P7</li> <li>Selectable among 46 different user-defined input functions</li> </ul>
Output	Analog output	<ul style="list-style-type: none"> <li>2 channels (AO1, AO2)</li> <li><math>-10\text{V} \rightarrow 10\text{V}</math>, <math>10 \rightarrow -10\text{V}</math>, <math>0 \rightarrow 10\text{V}</math>, <math>10 \rightarrow 0\text{V}</math> output</li> <li>Selectable among 39 different user-defined functions</li> </ul>
	Contact output	<ul style="list-style-type: none"> <li>2 channels (1A-1B, 2A-2B)</li> <li>Fault alarm relay: 1 channel (30A-30C, 30B-30C)</li> </ul>
	Open Collector	1 Channel (OC1/EG)
Protection		Overcurrent, Overvoltage, Low voltage, Inverter overheat, Inverter thermal sensor malfunction, Motor overheat, Motor thermal sensor malfunction, Overspeed, Instantaneous IGBT gate block (BX), Fuse blown open, External Trip, Pulse encoder malfunction, Electronic thermal function, Inverter overload, Ground fault current, IGBT short, Communication error, FAN power error, Input/Output open-phase
Environ-ment	Installation condition	Indoor, Free of Corrosive gas and Direct sunlight (Pollution Degree 2)
	Ambient temperature	$-10 \sim 40^\circ\text{C}$ (Non-frozen condition)
	Humidity	Below RH 90% (Dewdrop should not be formed)

Items	Detailed Specification
Cooling method	Forced ventilation by cooling fan
IP Type	IP00: 2.2 ~ 22 kW (MD), 30 ~ 375 kW IP20: 5.5 ~ 22 kW (Press)
Altitude, Vibration	Below 1000m above sea level, Below 5.9m/s <sup>2</sup> (=0.6G)

preorder

## Chapter 3 – Installation and Wiring

**This chapter describes general items for the installation and wiring of an inverter and includes instruction for wiring to power terminal and control one and caution in case of wiring, and also explains the function of each terminal for both power and control.**

Be sure to check mechanical and electrical installation environment before you start the inverter. Read through the checking list below. Be sure to read through the Caution for Safety on this User's Manual prior to the operation of inverter.

### Checking List

- Mechanical Installation Checking List
  - Be sure to check the surrounding environment is allowed for operation. (Read through the 'Caution on Installation')
  - Inverter is a heat-generating device. Be sure to sufficiently secure the surrounding space to prevent thermal saturation phenomenon.
  - Be sure to check air is circulated in a normal condition.
  - Be sure to check motor and drive system are ready to start.
- Electrical Installation Checking List
  - Make sure that the protective grounding is properly done.
  - Replace the condenser with new one if it lasted longer than two years.
  - Set the input voltage to the nominal input voltage of the inverter.
  - Check if the input voltage connected with R, S, T and then fasten them tightly using an accurate torque wrench.
  - Check if input power fuse and circuit breaker are properly installed.
  - Install the motor cable away from the other cable.
  - Check if the ext. input/output is properly connected.
  - Check if the input voltage is properly connected with the output terminal of inverter.


### 3.1 Caution on Installation

#### 3.1.1 Do not install the inverter in a location where excessive vibration is present.

Be cautious when installing on presses or moving equipment.

#### 3.1.2 Caution on ambient temperature

Ambient temperature greatly affects inverter lifetime, therefore be sure to keep the ambient temperature of installation location at  $-10$  to  $40^{\circ}\text{C}$ .

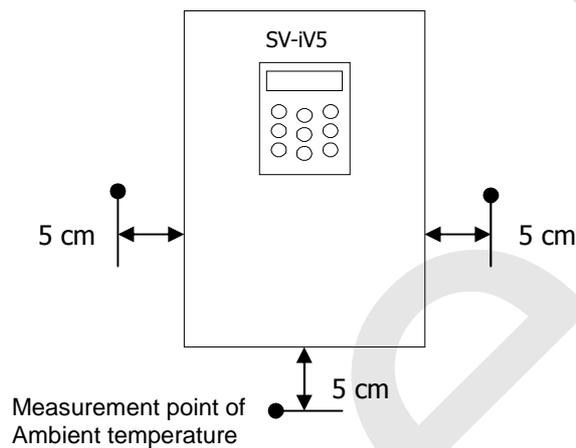

#### 3.1.3 Install the inverter on the unflammable material. The inverter operates at high-temperature.


#### 3.1.4 Avoid a humid and hot location.

#### 3.1.5 Install the inverter in a location free of oil mist and dust.

Totally enclosed panel can be used to protect the inverter against that materials.

Cooling air must be clean, free from corrosive materials and electrically conductive dust.

#### 3.1.6 Secure the installation space enough to protect the inverter against the overheating.

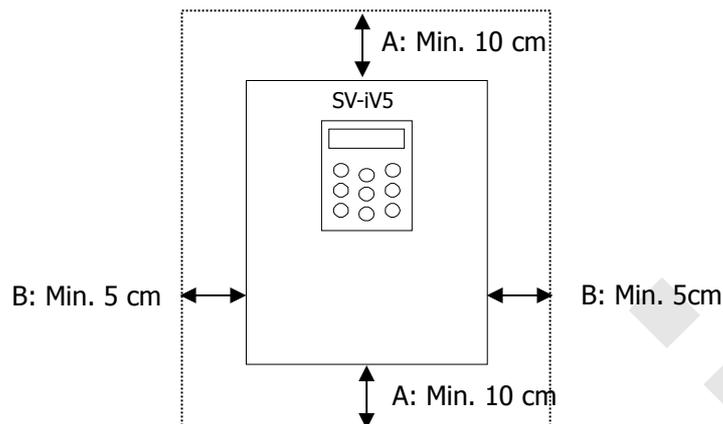

At least the room that 30 cm from upper and lower of inverter and 20 cm from left and right of inverter is required for installing more than 30 kW products.

#### 3.1.7 Special care should be taken in case the inverter is to be installed in the panel.

In case more than 2 inverters are to be installed or ventilation fan is to be installed in the panel, make sure that inverter and ventilation fan is properly installed. If they are poorly installed, it causes the increase of an ambient temperature and less effective ventilation. Therefore, be sure to keep the ambient temperature of inverter below the allowable temperature.


#### 3.1.8 Install the inverter tightly not to get loose using proper sized bolt or screw.

### 3.2 Basic Wiring

Do the wiring of inverter and then check the wiring of main circuit and control circuit before starting it. Read through the checking list as below.

Checking List
<p><b>Is the inverter supplied in the form as ordered?</b></p> <ul style="list-style-type: none"> <li>• Are the type and numbers of peripherals (Resistance, DC reactor, Noise filter, etc.) supplied as ordered?</li> <li>• Is the type of option supplied as supplied?</li> </ul> <p><b>Place of the inverter to be installed and how to install it</b></p> <ul style="list-style-type: none"> <li>• Is the inverter installed on a right place in a right way?</li> </ul> <p><b>Power voltage, Output voltage</b></p> <ul style="list-style-type: none"> <li>• Is power voltage within the range of inverter input voltage specified?</li> <li>• Does the rated output comply with the inverter output specification?</li> <li>• Is the rating done properly?</li> </ul> <p><b>Main Circuit Wiring</b></p> <ul style="list-style-type: none"> <li>• Is the power input using the circuit breaker?</li> <li>• Is the rating of the circuit breaker done properly?</li> <li>• Is the power wiring input properly to the inverter input terminal? [If the input power is connected with the input terminal (U, V, W) it may cause damage to the inverter]</li> <li>• Is the motor wiring connected with the inverter output terminal in a proper phase sequence? (Otherwise, the motor will be rotated adversely.)</li> <li>• Is 600V vinyl insulation wire adopted for the power and motor wires?</li> <li>• Is the main circuit wire in a proper size?</li> <li>• Is the ground line installed in a proper way?</li> <li>• Are the screws of the main circuit terminal and the ground terminal fastened tightly?</li> <li>• In the event several motors are operated with one inverter, does each motor have a overload protecting circuit?</li> <li>• In the event it adopts braking resistance or braking resistance unit, is an electronic contactor installed at the inverter power side so as to isolate the inverter from the power by protecting the resistance from overload?</li> <li>• Isn't power condenser, surge killer, or radio noise filter connected with the output side?</li> </ul> <p><b>Control Circuit Wiring</b></p> <ul style="list-style-type: none"> <li>• Is a twisted pair shielded wire adopted for the inverter control circuit wiring?</li> <li>• Is the covered wire with shield connected with the ground terminal?</li> <li>• In the event it is operated in 3-Wire sequence, is the control circuit wiring done after the parameter of multi-function contact input terminal is modified?</li> <li>• Is the wiring of the optional devices done properly?</li> <li>• Aren't there any wiring mis-connected?</li> <li>• Are the inverter control circuit terminal screws fastened tightly?</li> <li>• Aren't there any wire fragments or screw left?</li> <li>• Doesn't the remaining wire connected with the terminal contact the terminals nearby?</li> <li>• Is the control circuit wiring isolated from the main circuit wiring in the duct or control panel?</li> <li>• Doesn't the length of wiring exceed 50m?</li> <li>• Doesn't the wiring of safety input exceed 30m?</li> </ul>

- AC Power Input Type:**  
**SV022, 037, 055, 075, 110, 150, 185, 220iV5-2(DB)**  
**SV022, 037, 055, 075, 110, 150, 185, 220iV5-4(DB)**

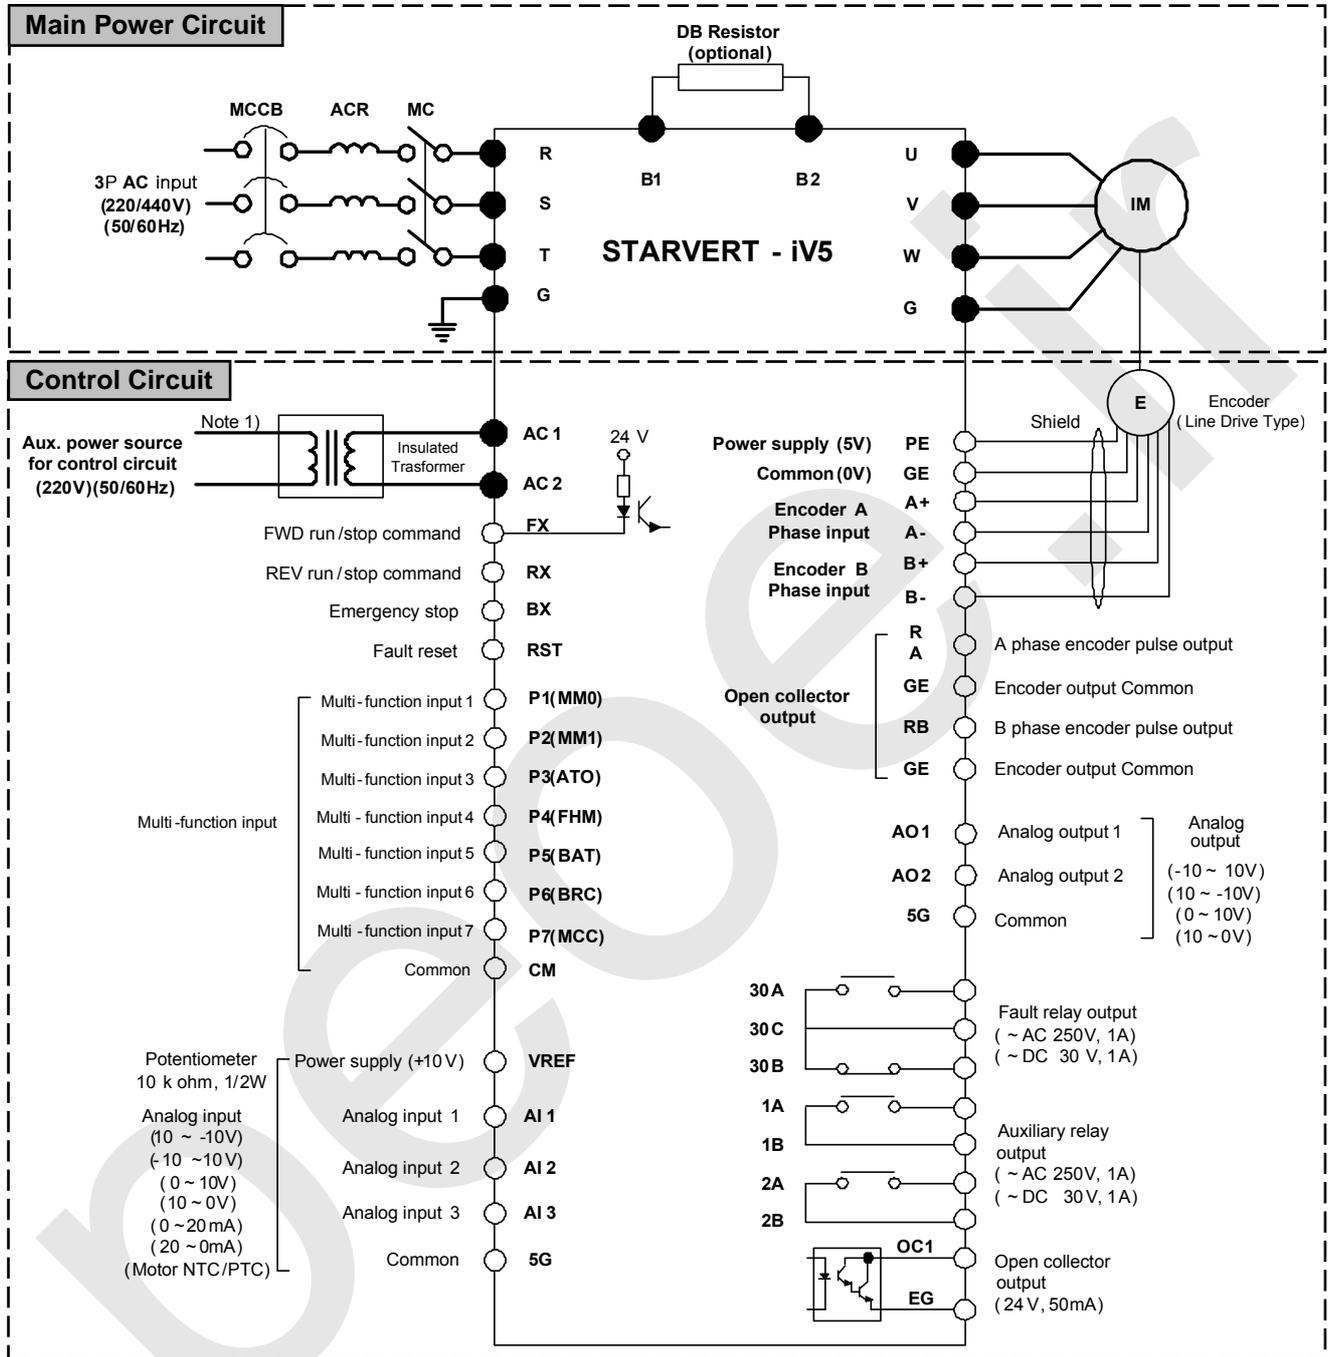

Note) ● : Main circuit ○ : Control circuit


Note 1) It is used when inverter control circuit is energized from auxiliary power source (220 VAC) separated from main power supply. Use insulated transformer to separate from main power supply. (Transformer capacity: Above 100VA recommended)

#### ■ AC Power Input Type

##### SV300, 370iV5-2

##### SV300, 370, 450, 550, 750, 900, 1100, 1320, 1600, 2200, 2800, 3150, 3750iV5-4

Note: AC Fans for 300~2200iV5-4 series should be changed the input power source of transformer 1<sup>st</sup> tap corresponding with that of inverter. (Factory default is 380VAC)

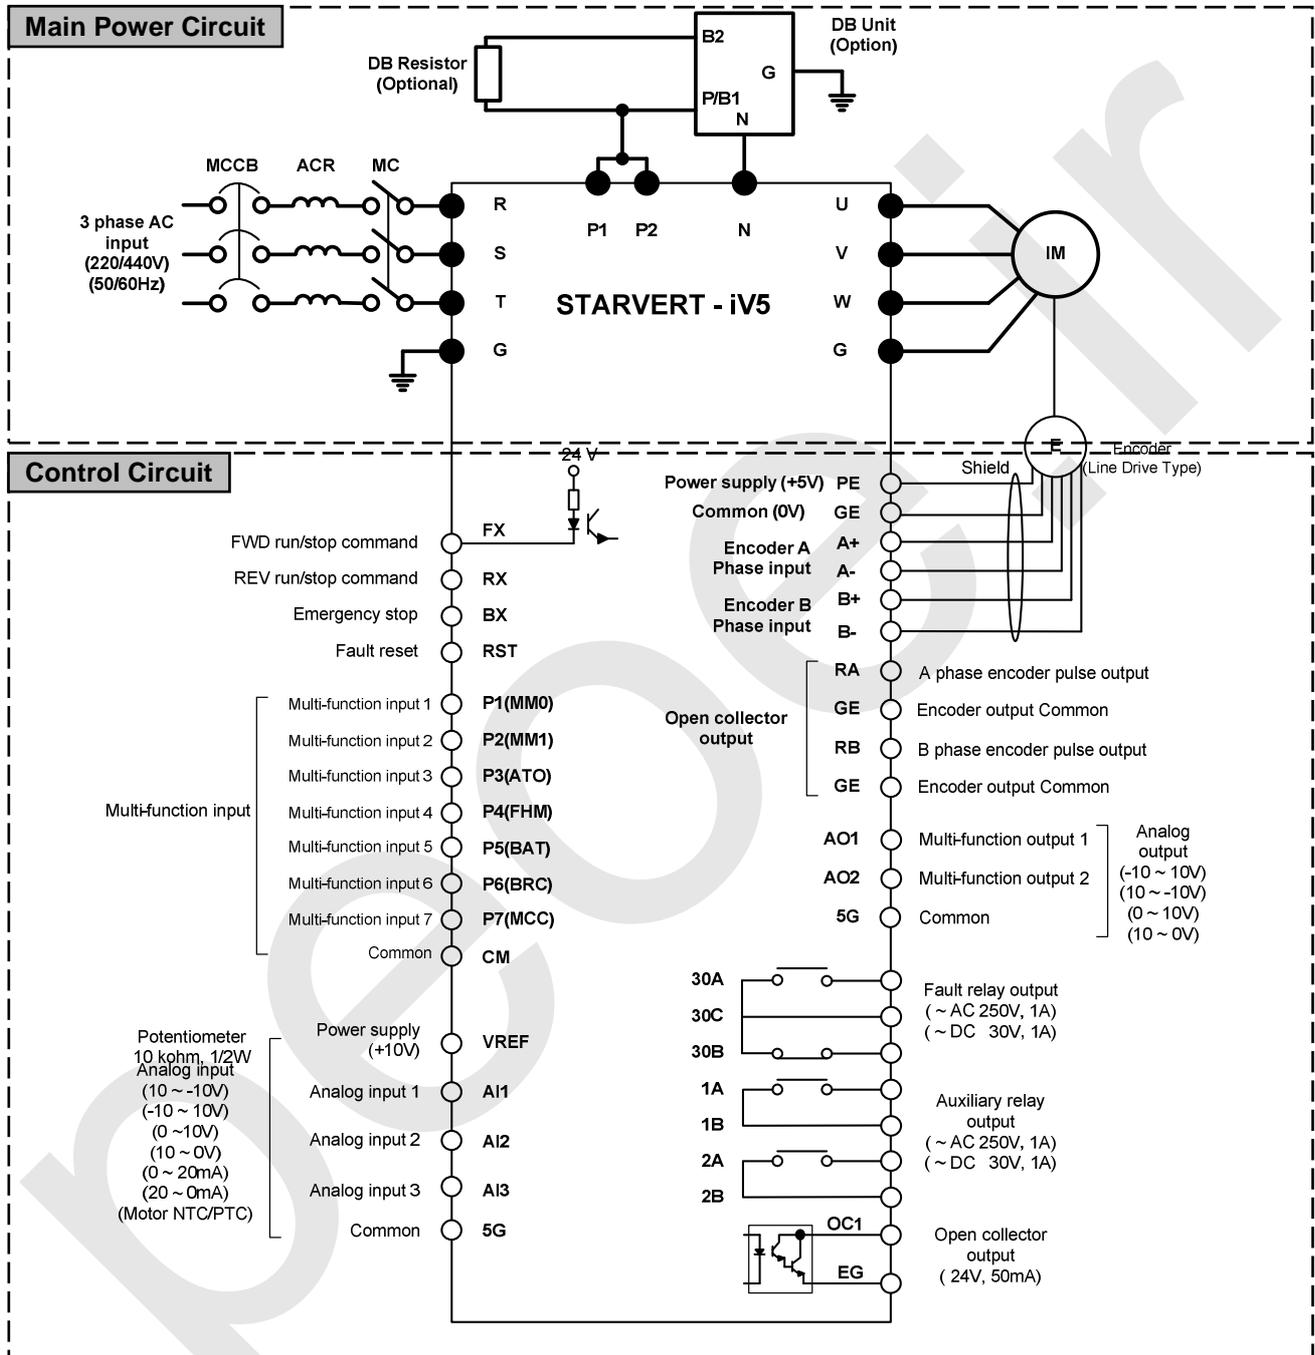


Note) ● : Main circuit, ○ : Control circuit

※ SIO terminal indication for SV2800~3750iV5: PE → PENT, GE → G24X

Note 1) It is used when inverter control circuit is energized from auxiliary power source (220 VAC) without main power supply. Use insulated transformer to separate from main power supply. (Transformer capacity: above 100VA recommended)

■ DC Power Input Type:

SV055, 075, 110, 150, 185, 220, 2800, 3150, 3700iV5-4DC

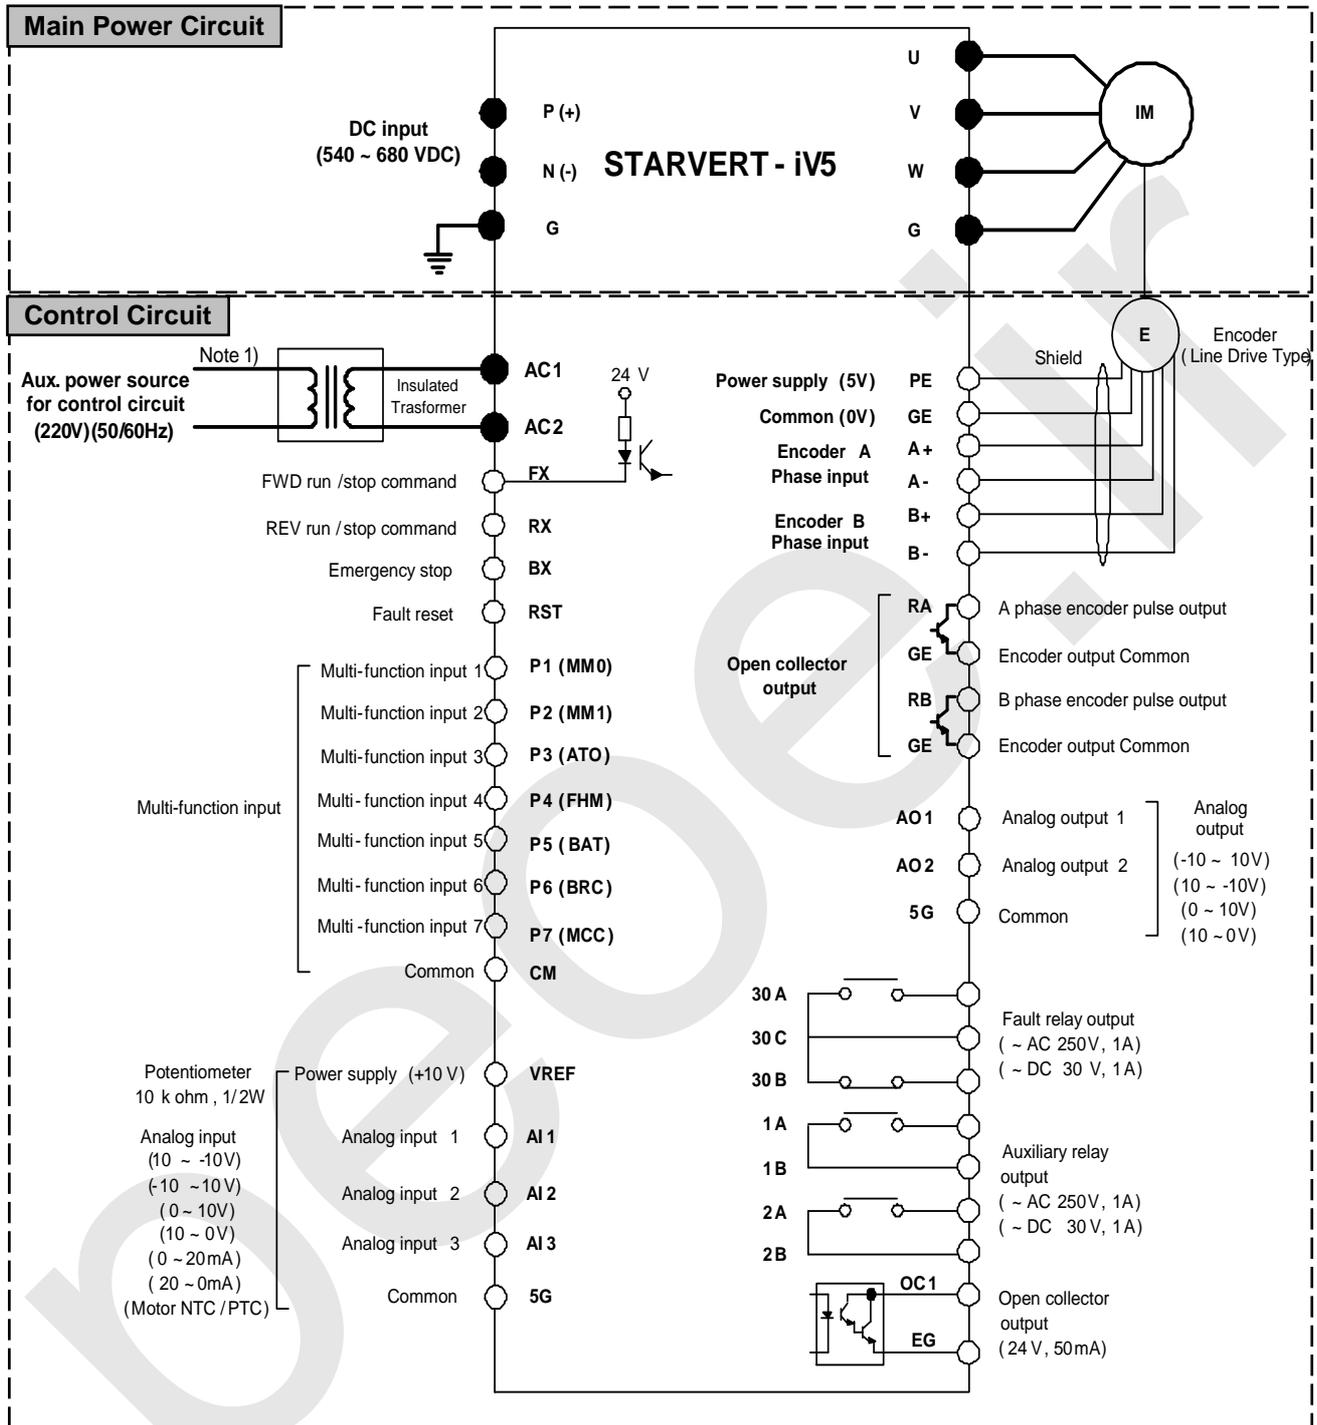

Note) ● : Main circuit ○ : Control circuit

※ SIO terminal indication for SV2800~3750iV5: PE → PENT, GE → G24X


Note 1) It is used when inverter control circuit is energized from auxiliary power source (220 VAC) without main power supply. Use insulated transformer to separate from main power supply. (Transformer capacity: above 100VA recommended)

- **DC Power Input Type:**  
SV300, 370, 450, 550, 750, 900, 1100, 1320, 1600, 2200iV5-4DC

**Warning** It must be energized AC220V (50/60Hz) to terminal of FAN1 and FAN2 because 30 ~ 160 kW-4DC series have a cooling fan for AC power drive and MC. If not, Trip (30~160kW: "FAN/MC PWR", 220kW: "FAN PWR") will be occurred. The inverter is not operated unless trip is released after AC220V inputs. The recommended order of power input and cutoff is as shown below.

(The order of power On: 220VAC → Main power of P(+)/N(-) → Run

The order of power Off: Operation stop → Main power of P(+)/N(-) → 220VAC)

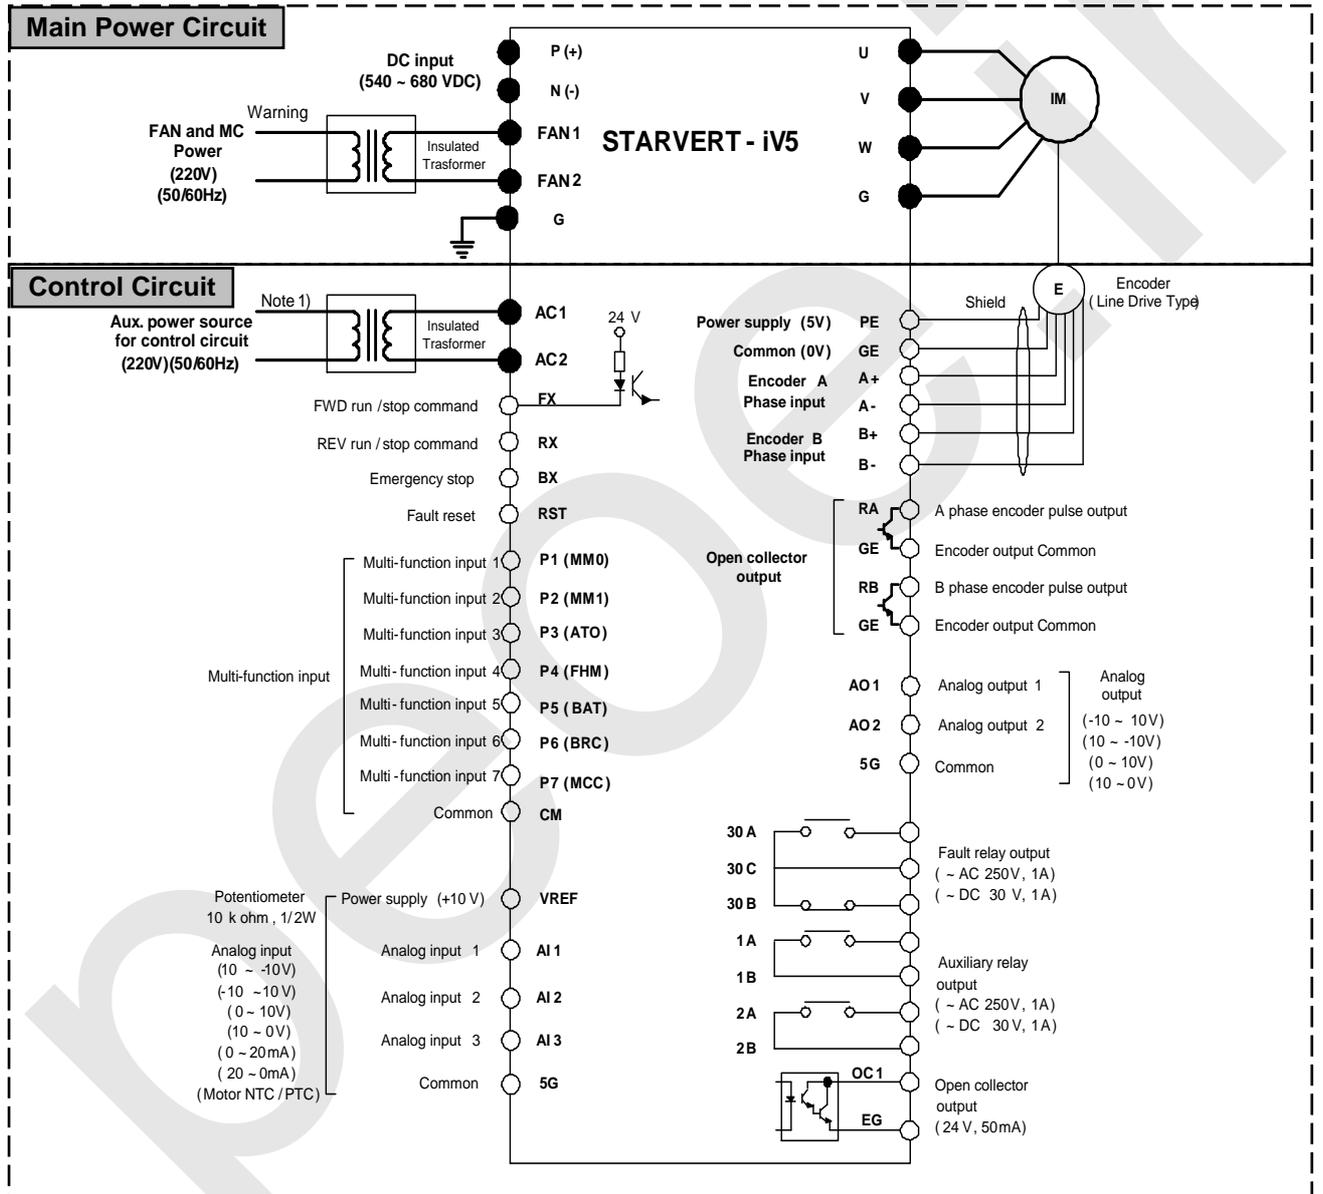

Note) ● : Main circuit, ○ : Control circuit

Note 1) It is used when inverter control circuit is energized from auxiliary power source (220 VAC) without main power supply. Use insulated transformer to separate from main power supply. (Transformer capacity: above 100VA recommended)

Note 2) The power of 220VAC is must be supplied for the operation of internal cooling fan and/or Magnetic contactor. Use insulated transformer to separate from main power supply.

(30 ~ 160 kW: for the operation of FAN and MC, 220kW: for the operation of FAN)

(Transformer capacity: above 30~75kW(100VA), 90~160kW(150VA), 220kW(500VA) recommended )

### 3.3 Power Circuit Terminal

#### 3.3.1 Power circuit terminal arrangement

##### (1) AC power input type

	<b>CAUTION</b>
Be sure that "N" is not Neutral Line but DCN(-) and P is DCP(+) G means the ground terminal of inverter frame and it has the symbol " $\perp$ ".	

- SV022, 037, 055, 075, 110, 150, 185, 220iV5-2(DB)  
SV022, 037, 055, 075, 110, 150, 185, 220iV5-4(DB)





- SV110, 150, 185, 220iV5-2(DB)(MD)  
SV110, 150, 185, 220iV5-4(DB)(MD)

\*(MD) : Mold Type




- SV300, 370iV5-2  
SV300, 370, 450, 550, 750iV5-4

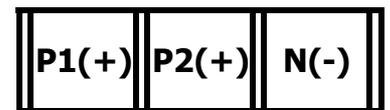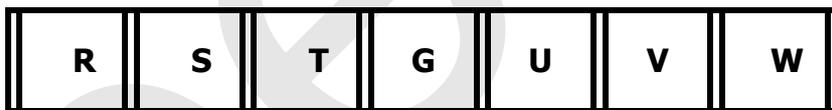

- SV900, 1100, 1320, 1600, 2200iV5-4



- SV2800, 3150, 3750iV5-4

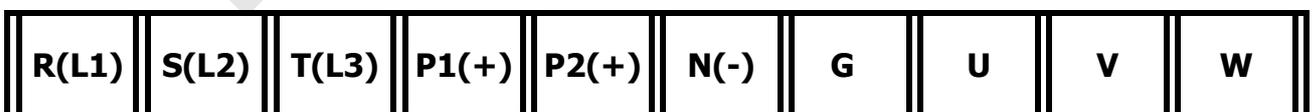

(2) DC power input type


■ SV055, 075iV5-4DC




■ SV110, 150, 185, 220iV5-4DC



■ SV300, 370,450,550,750,900,1100,1320,1600,2200iV5-4DC

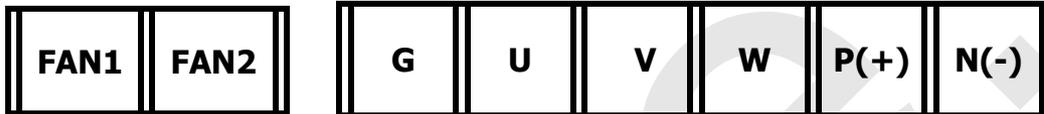

■ SV2800, 3150, 3750iV5-4DC

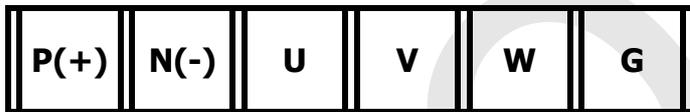

3.3.2 Power circuit terminal description

(1) AC power input type

Name	Function	Description
R, S, T	3 Phase input power supply	Connected to 3 phase input power supply
U, V, W	Inverter Output	Connected to 3 phase induction motor
G	Grounding	Used for inverter frame earth ( $\perp$ )
B1, B2	Braking Resistor connection	Connected to braking resistor
P1(+), P2(+)	DC Reator and DB Unit connection	Used for DC Reactor, DB Unit and DC link common connection
P(+)	DC Link common connection	DC link common connection
N(-)	DB Unit connection	Used for DB Unit and DC link common connection


(2) DC power input type

Name	Function	Description
P(+), N(-)	DC input power	Connected to DC input power source Connected from DC power supply (PWM converter) within max. 30m
U, V, W	Inverter Output	Connected to the cable of 3-phase induction motor
G	Grounding	Used for inverter frame earth
FAN1, FAN2	Internal cooling fan and MC drive power source	Connected to single-phase 220V AC power source <small>note1)</small>


note1) This setting is applied to AC input type of iV5 500kW product.

#### 3.3.3 Cautions to be required for wiring to power circuit terminal

① Connect terminals (R, S and T) to 3 phase input power supply after checking inverter nameplate attached on the inverter. Never connect terminals (U, V and W) to 3 phase input power supply. It results in lethal damage to the inverter.

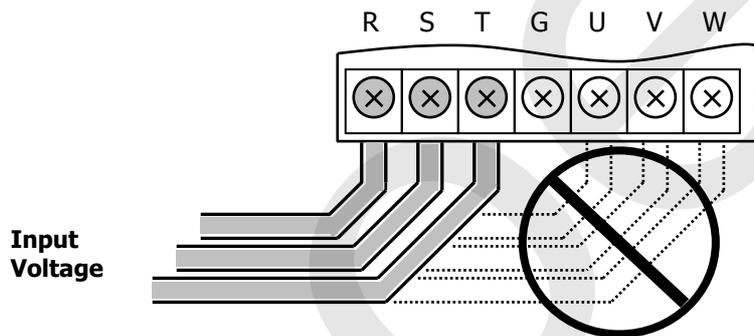

② Never connect the phase advancing capacitor to the inverter output. If already installed, remove the phase-advanced capacitor clearly.

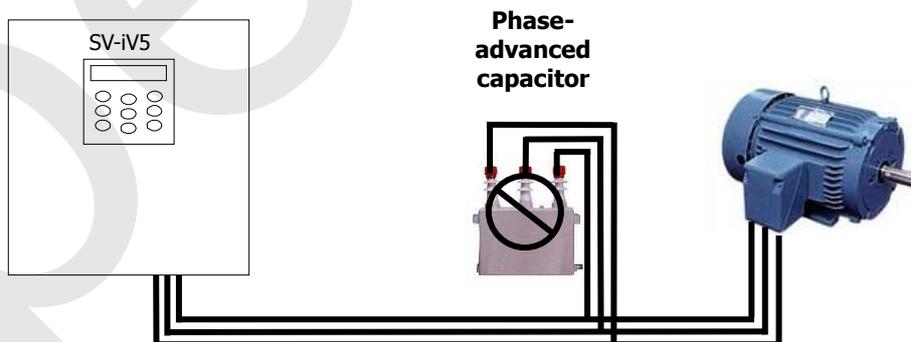

③ Cable between inverter output and motor should be less than 300m long. If cable gets long, surge voltage appears across motor terminals depending on the cable parameters. Especially, in 400V class motor case, insulation withstanding voltage may be decreased. Use an insulation-reinforced motor or surge reduction filter when 400V class motor is used.

### 3. Installation and Wiring

Distance between inverter and motor	Up to 50m	Up to 100m	Over 100m
Permitted Carrier Frequency	Below 10kHz	Below 5kHz	Below 2.5kHz

(In case of below 3.7 kW, use the cable of output within 100 m)

- ④ Crimp terminal with insulation cap should be used for the input power supply and the motor.
- ⑤ After wiring finished, be certain to remove all the wire or cable scraps inside the inverter.
- ⑥ Use the shield cable or twist-paired wire for control circuit terminal. Do not put them into the same wiring duct for the power terminal.
- ⑦ When wiring is changed after operating the inverter, be sure to check LCD window on the keypad or indicating lamp for charging is turned off. Capacitors inside inverter are charged with high voltage and it may result in lethal injury.
- ⑧ Below 22kW inverter, B1 and B2 on the power terminal should not be connected to anything else other than DB resistors.

#### 3.3.4 Main power circuit wire sizes and grounding wire size

##### ① Main Power Circuit Wire Sizes

If wiring for the main power terminal is not performed properly, it may cause severe damage to inverter or lethal injury to inverter operator. **Be sure in compliance with the cable standard for IEC60227-3, or UL508C.**

Inverter Capacity		Wire Size (Cabling standards of IEC 60227-3 or UL508C)			
		mm <sup>2</sup>		AWG or kcmil	
		R, S, T	U, V, W	R, S, T	U, V, W
200V	2.2 kW	2.5	2.5	12	12
	3.7 kW	4	4	10	10
	5.5 kW	6	6	8	8
	7.5 kW	10	10	6	6
	11 kW	16	16	4	4
	15 kW	25	25	3	3
	18.5 kW	35	35	2	2
	22 kW	35	35	2	2
	30 kW	50	50	1/0	1/0
37 kW	70	70	2/0	2/0	
400V	2.2/3.7 kW	2.5	2.5	12	12
	5.5 kW	4	4	10	10
	7.5 kW	4	4	10	10
	11 kW	6	6	8	8
	15 kW	10	10	6	6
	18.5 kW	16	16	4	4
	22 kW	16	16	4	4
	30 kW	35	25	3	3
	37 kW	25	25	2	2
	45 kW	50	35	2	2
	55 kW	50	50	1	1

Inverter Capacity	Wire Size (Cabling standards of IEC 60227-3 or UL508C)			
	mm <sup>2</sup>		AWG or kcmil	
	R, S, T	U, V, W	R, S, T	U, V, W
75 kW	70	70	2/0	2/0
90 kW	120	120	4/0	4/0
110 kW	150	150	300	300
132 kW	185	185	350	350
160 kW	240	240	500	500
220 kW	400	400	800	800
280 kW	2 X 240	2 X 240	2 X 500	2 X 500
315 kW	2 X 240	2 X 240	2 X 500	2 X 500
375 kW	2 X 300	2 X 300	2 X 600	2 X 600


- 1) Apply the rated torque to terminal screws. Loose screws can cause of short circuit or malfunction. Tightening the screws too much can damage the terminals and cause a short circuit or malfunction.

② Grounding Wire Size and Caution to be taken


- Inverter operates to high-speed switching, so it causes the leakage of current. To prevent from electric shock, inverter and motor have to be grounded.
- Be sure to ground the motor and the inverter to prevent electric shock injury. (200V class: ground impedance below 100Ω, 400V class: ground impedance below 10Ω)
- Connect the inverter ground to the ground terminal exclusively used for the inverter. Do not use the case of inverter of sash screw for ground.
- It is strongly recommended that as thick a grounding wire as possible be used and wire be short. Place the position of ground close to the inverter as possible.

Motor Capacity	Ground wire size( mm <sup>2</sup> )	
	200V Class	400V Class
2.2 ~ 3.7 kW	4	2.5
5.5 ~ 7.5 kW	6	4
11 ~ 15 kW	16	10
18.5 ~ 22 kW	25	16
30 ~ 37 kW	25	16
45 ~ 75 kW	-	25
90 ~ 132 kW	-	35
160 ~ 220 kW	-	95
280 ~ 315 kW	-	185
375 kW	-	240


3.3.5 Wiring DC Reactor (Option) (AC power input: 30kW and higher)

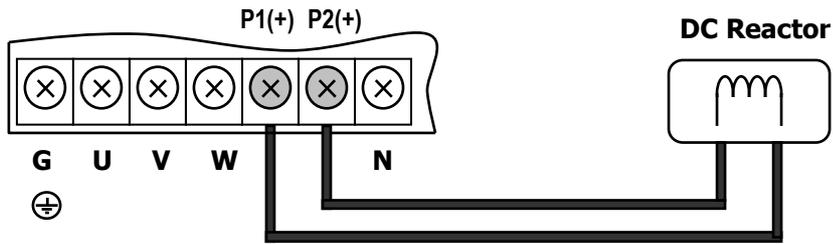

3.3.6 Wiring DB Unit (Option) (AC power input: 30kW and higher)

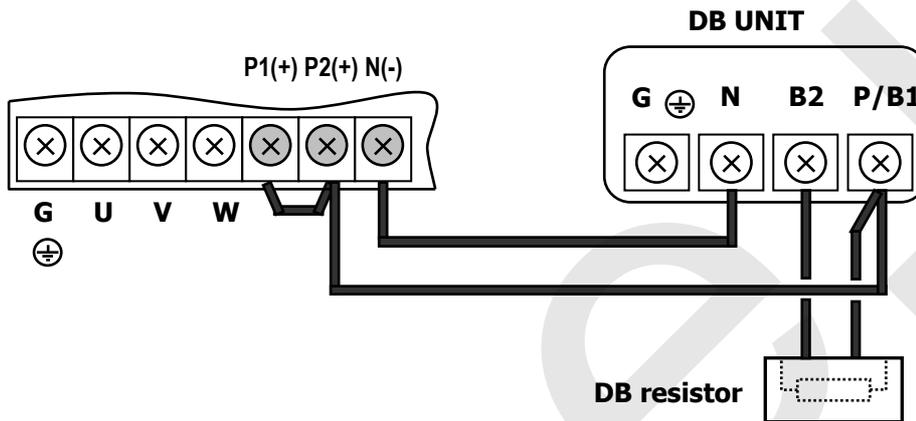


3.3.7 Wiring guide when using both of DC reactor (Option) and DB Unit(option) (30kW and higher) (AC power input: 30kW and higher)

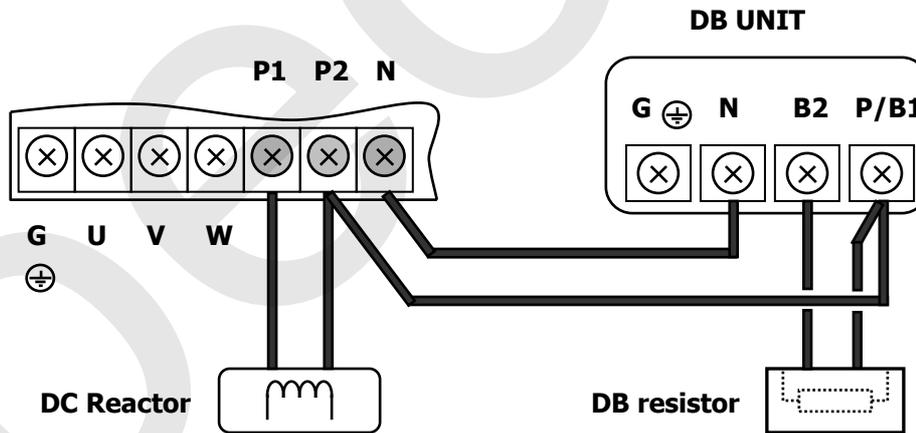

### 3.4 Control Board and Terminal

#### 3.4.1 Control circuit terminal arrangement

■ SV022 ~ 3750iV5

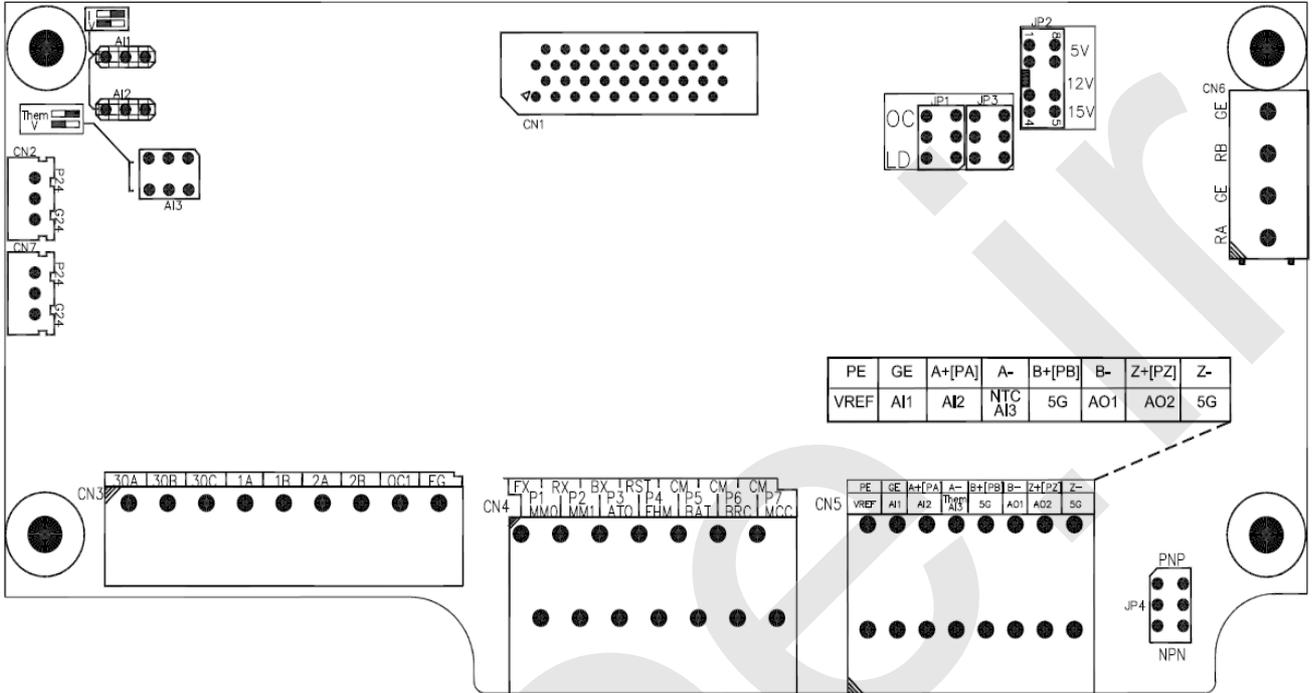

#### 3.4.2 Control circuit terminal function description

Item	Name	Function	Description
Contact Input	FX	Forward Run /Stop Command	<ul style="list-style-type: none"> <li>Forward/Reverse RUN Command is ON when closed to CM in NPN input mode.</li> <li>Motor stops when FX/RX terminal turns ON or OFF concurrently.</li> </ul>
	RX	Reverse Run/Stop Command	
	BX	Emergency Stop	<ul style="list-style-type: none"> <li>ON when closed to CM in NPN input mode, Free-run to Stop and deceleration to stop. It does not trigger fault alarm signal.</li> </ul>
	RST	Fault Reset	Resets when fault condition is cancelled.
	P1(MM0)	Multi-function input contact	<ul style="list-style-type: none"> <li>1 function can be selected among 46 different functions as shown below.</li> <li>(Multi-step speed Upper/Middle/Lower, Jog, MOP Up / Down / Save/ Clear, Analog Hold, Main Drive, 2nd function, Accel./Decel. Time selection, 3 Wire RUN, External trip (B contact), Power failure prevention, Reverse rotation prevention, Process PI Disable, Timer input, Soft start cancel, ASR P/PI Gain switch-over, ASR P/PI switch-over, Flux command value switch-over, Pre-excitation, Speed/Torque control, Torque limit ON/Off, Torque bias ON/Off, Battery operation On/Off, Low voltage trip detection prevention, etc.)</li> </ul>
	P2(MM1)		
	P3(AT0)		
	P4(FHM)		
	P5(BAT)		
	P6(BRC)		
	P7(MCC)		
CM	COMMON	<ul style="list-style-type: none"> <li>In NPN input mode, it turns On when each contact is connected to CM terminal.</li> <li>In PNP input mode, it turns On when each contact is inputted to external 24V input.</li> </ul>	
Analog Input	VREF	Power supply for analog setting	<ul style="list-style-type: none"> <li>Reference voltage by variable resistor ( + 10V ) : 10kΩ</li> </ul>
	AI1	Voltage/ Current Signal Input	<ul style="list-style-type: none"> <li>Voltage input (-10→10V, 10→-10V, 0→10V, 10→0V) current input (0→20mA, 20→0mA), Motor NTC are selectable via Multi-function Analog input.</li> <li>Jumper setting in Voltage Input: <b>Jumper set as default</b>)                             <ul style="list-style-type: none"> <li>→ AI1, AI2: Jumper set on left side,</li> <li>AI3: Switch set on left ("V") side</li> </ul> </li> <li>Jumper setting in Current Input                             <ul style="list-style-type: none"> <li>→ AI1, AI2: Jumper set on right side</li> </ul> </li> <li>S/W setting in motor NTC (Higen motor)/PTC input                             <ul style="list-style-type: none"> <li>→ AI3: switch set on right ("Them") side.</li> </ul> </li> <li>Selectable 17 functions as following:                             <ul style="list-style-type: none"> <li>(Speed command, Auxiliary speed command, Process PID command, Process PI controller feedback, Draw, Torque, Magnetic flux, Torque bias, Torque limit, Motor NTC input, etc.)</li> </ul> </li> </ul>
	AI2		
	AI3/Them	Voltage input Motor NTC Input	<ul style="list-style-type: none"> <li>S/W setting in motor NTC (Higen motor)/PTC input                             <ul style="list-style-type: none"> <li>→ AI3: switch set on right ("Them") side.</li> </ul> </li> <li>Selectable 17 functions as following:                             <ul style="list-style-type: none"> <li>(Speed command, Auxiliary speed command, Process PID command, Process PI controller feedback, Draw, Torque, Magnetic flux, Torque bias, Torque limit, Motor NTC input, etc.)</li> </ul> </li> </ul>
	5G	COMMON	<ul style="list-style-type: none"> <li>COMMON terminal for Analog input</li> </ul>
Encoder Input	PE	P/S (Power supply) for Pulse Encoder <sup>1)</sup>	+5V Line Drive Power
	GE		0V
	A+	Encoder A-phase signal	<ul style="list-style-type: none"> <li>A, B signal for Line Drive Type Encoder.</li> <li>Set the JP2 switch at "P5" on I/O PCB and set the JP4 switch to "LD" for the use of Line Drive.</li> </ul>
	A-		
	B+	Encoder B-phase signal	<ul style="list-style-type: none"> <li>※ <b>Jumper set as default</b></li> </ul>
	B-		
	PE	P/S for Open Collector <sup>Note1)</sup>	+15V Open Collector Power
	GE		0V
	PA	Encoder A-phase signal	<ul style="list-style-type: none"> <li>A, B signal for Complementary or Open Collector Type Encoder.</li> <li>Set the JP2 switch at "P15" on I/O PCB and set the JP4 switch to "OC" for the use of Open Collector.</li> </ul>
	PB	Encoder B-phase signal	
Z+(PZ)	Encoder Z-phase signal	<p><b>Caution) The usages of Z-phase signal are as follows and its functions will be available soon.</b></p> <ul style="list-style-type: none"> <li>Use for Z-phase pulse provided encoders.</li> </ul>	

### 3. Installation and Wiring

Item	Name	Function	Description	
	Z-		<ul style="list-style-type: none"> <li>Z+ and Z- signals are used for Line Drive type, so set the JP5 switch to "LD".</li> <li>PZ signal is used for Open Collector type, so set the JP5 switch to "OC".</li> </ul>	
Encoder Output	RA	Encoder signal output : A-phase	Encoder A, B phase signal output – Open Collector Type <sup>Note4)</sup>	
	GE	Output Common		
	RB	Encoder signal output : B-phase		
	GE	Output Common		
Analog Output	AO1	Analog Output 1	<ul style="list-style-type: none"> <li>-10V → 10V, 10 → -10V, 0 → 10V, 10 → 0V output</li> <li>Selectable among 39 functions</li> </ul>	
	AO2	Analog Output 2	(Analog input value, Pre Ramp Reference, Post ramp reference, ASR Input Reference, Motor Rotating Speed, Speed Deviation, ASR Output, Torque bias, Positive Trq Limit, Negative Trq Limit, Regeneration Trq Limit, Torque Reference, Torque current ref., Torque current, Flux reference, Flux Current ref. , Flux Current, ACR output of axis Q, ACR output of axis D, Voltage reference of axis D, Voltage reference of axis Q, Output current, Output voltage, Output power, DC LINK voltage, Process PI reference, Process PI Feedback, Process PI output, Line speed, Tension output, Motor temperature(NTC), Inverter temperature, Inverter i2t, etc.)	
	5G	COMMON	● COMMON terminal for Analog Output	
Relay output	1A	Multi-function relay output 1 (A Contact)	<ul style="list-style-type: none"> <li>Selectable among the following 22 functions;</li> </ul> (Inverter ready, Zero speed detection, Speed detection, Speed detection (ABS), Speed arrival, Timer out, Low voltage alarm, run, regenerating, Motor overheat warning, Inverter overheat warning, Speed agree, Touque detection, Torque limit detection, Overload warning, Stop, Steady run, Brake output, WEB brake, UP to speed, False core, MC output)	
	1B			
	2A	Multi-function relay output 2 (A Contact)		
	2B			
	OC1	Open Collector Ouput		
	EG			
	30A	Fault alarm A contact		● Outputs when fault occurs.
	30B	Fault alarm B contact		● Deactivated in BX condition.
30C	COMMON	● COMMON for A, B		
Switch	JP1	Encoder Input-pulse Type	LD (Line Drive) / OC (Open Collector or Complementary)	
	JP2 <sup>Note3)</sup>	Encoder Power Supply	DC +5V / +12V / +15V selectable usages	
	JP4 <sup>Note4)</sup>	PNP/NPN Input mode	PNP/NPN contact input mode selection	

Note 1) Wire Encoder power source according to series I/O board as below:


SV022~2200iV5 Class: PE: "+", GE: "--"

SV2800~3750iV5 Class: PENT: "+", G24X: "--"

Note 2) I/O board of SV2800~3750iV5 Class is classified into 2 types: 24V and 5/12/15V Encoder power  
Encoder power is set by PIN(AI4(24V), AI5(5V), AI6(12V), AI7(15V))

Note 3) NPN/PNP input mode selection are not supported for SV2800~3750 iV5 series' I/O board.

Note 4) Example wiring of Encoder output

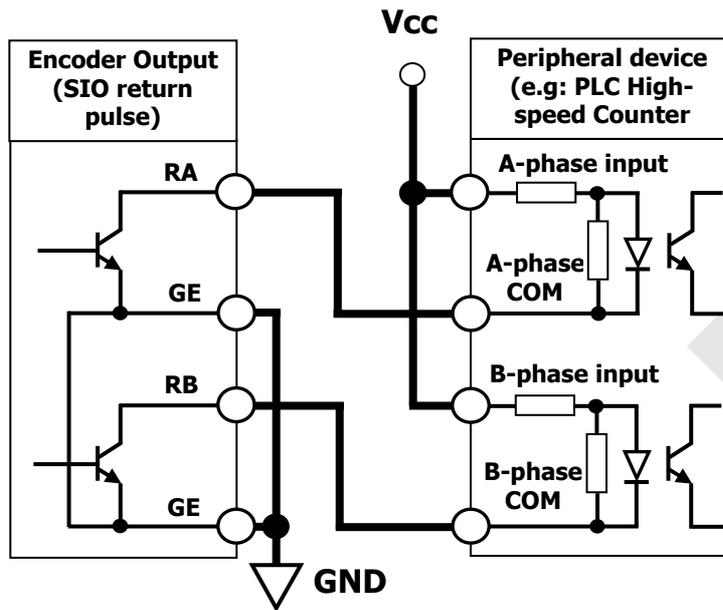

#### Warning


Wiring must be considered with input circuit because encoder output is open collector type. The figure is shown the wiring when inverter is connected with High-speed counter of our PLC.

#### • Additional Functions of Extended I/O(EXTN \_ I/O) Control board terminal

Item	Name	Function	Description
Analog Input	AI1	Voltage Input Current Input	<ul style="list-style-type: none"> <li>Extended I/O(EXTN_I/O) board is added analog input <u>AI4</u> and <u>AI5</u>.</li> <li>How to use terminal Pin:                             <ul style="list-style-type: none"> <li>- Voltage Input : AI1, AI2,AI3, AI4, AI5</li> <li>- Current Input : AI1, AI2, AI3, AI4</li> <li>- Motro NTC input : AI5</li> </ul> </li> <li>Note) Jumper setting and functions are explained at I/O control terminal description.</li> </ul>
	AI2		
	AI3		
	AI4		
	AI5/Them	Voltage Input Motor NTC Input	
5G	COMMON	COMMON terminal for Analog Input	

### 3.4.3 Wiring the control circuit terminal


- ① Shield wire or vinyl insulated wire are highly recommended to be used for the control circuit terminal.
- ② Be sure to use twisted shield wire if wiring distance gets too long.
- ③ Wire should be at least as thick as  $0.2 \sim 0.8 \text{ mm}^2$  (18 ~ 26 AWG).
- ④ Screwing torque limit should be kept under 5.2 lb-in.
- ⑤ Maximum interrupting capacity of auxiliary contact 1, 2 and 3 is of AC 250V/1A, DC 30V/1A.
- ⑥ Maximum interrupting capacity of fault alarm relay A, B contact is of AC 250V/1A, DC 30V/1A.
- ⑦ Open collector output 1, 2, 3 and encoder output can be used below maximum of 24V/100mA.
- ⑧ Wires for the control circuit terminal should be separated from ones for the power circuit terminal, if possible and in case wires for both control circuit terminal and the power circuit one cross each other, they should be crossed at right angles (90°).

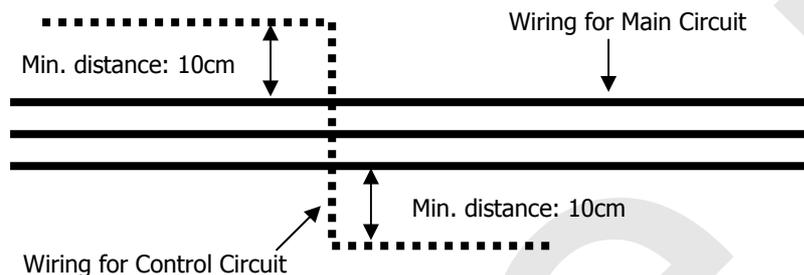


### 3.4.4 Caution on wiring pulse encoder

- 1) Check-up of the coupling and alignment of motor shaft and encoder shaft
  - ① Be sure to mount the pulse encoder at the location where it rotates with same speed as the motor does. (e.g. on the opposite shaft of load side of motor, on the opposite shaft of motor at traction machine)
  - ② In case there is speed slip between the motor shaft and encoder shaft, the motor may not start or it causes mechanical vibration.
  - ③ Poor alignment of motor and encoder shaft results in torque ripple and causes mechanical vibration which has the same frequency as the motor speed at the constant speed region.
  
- 2) Wiring the pulse encoder
  - ① Be sure to **use twist paired shield wire** and **ground shield wire to screw for earth on the I/O PCB.**
  - ② Signal wires should be separated from the power lines, if possible. Electromagnetic noise may affect the pulse encoder output signals.

#### 3.4.5 Encoder wiring and switch setting method (+15V Complementary / Open Collector Type)

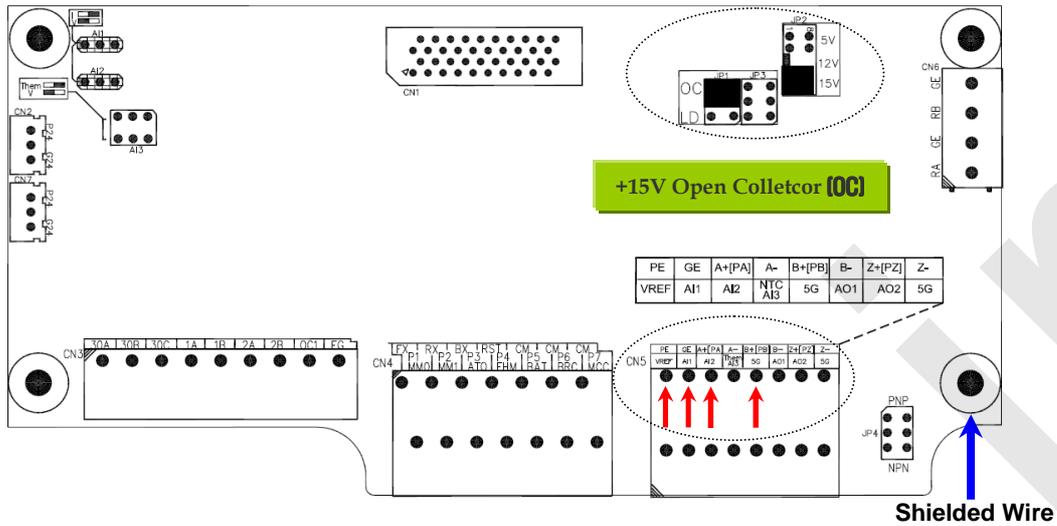

#### 3.4.6 Encoder wiring and switch setting method (+5V Line Drive) ※ Jumper set as default

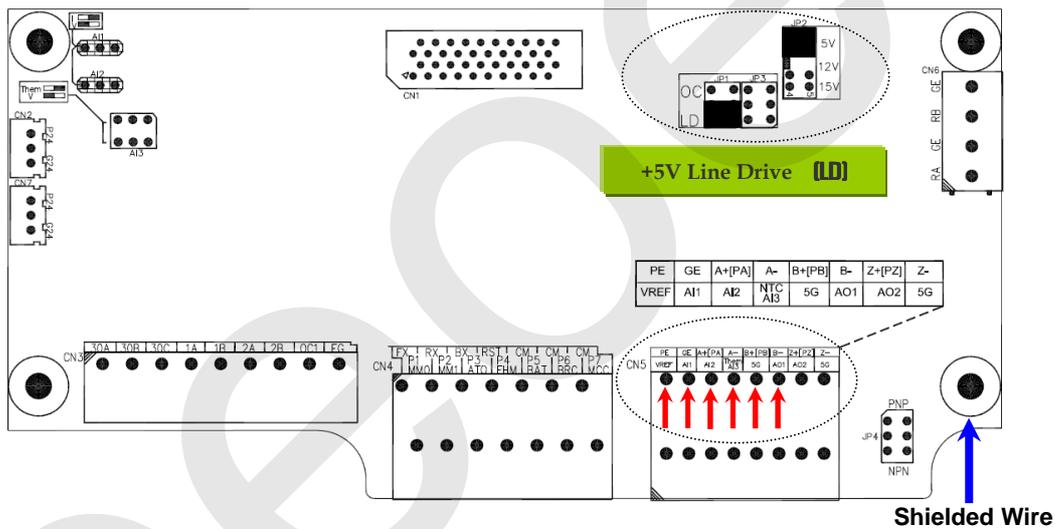


### CAUTION



- NEVER change the switch setting for Encoder Type during inverter run. Otherwise, it may cause inverter trip, it can affect to the entire system.  
Therefore, verify the switch is correctly set before operation and then operates the inverter.

#### 3.4.7 Analog input jumper setting (Voltage/Current/Motor NTC Input) and PNP/NPN input mode switch setting

※ Jumper set as default : Voltage Input (Left)

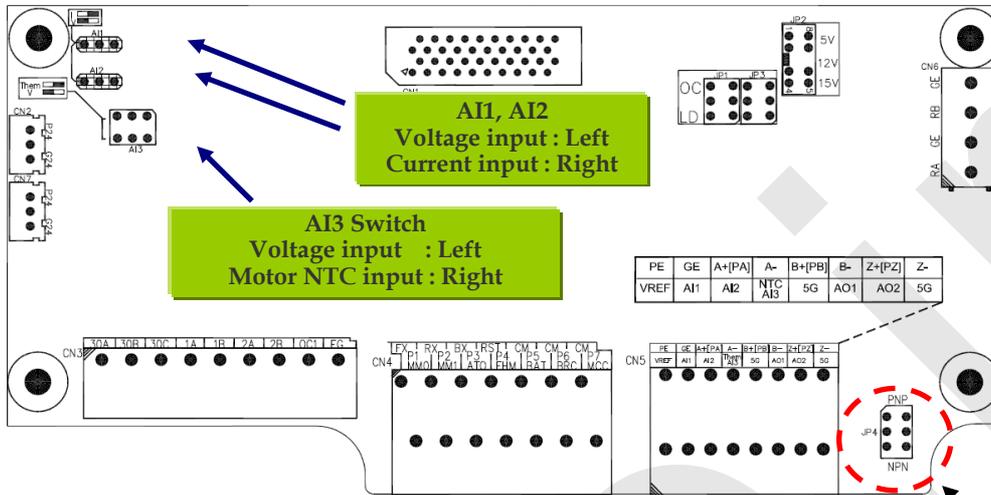

※ Factory Default Jumper Setting: NPN (down side)

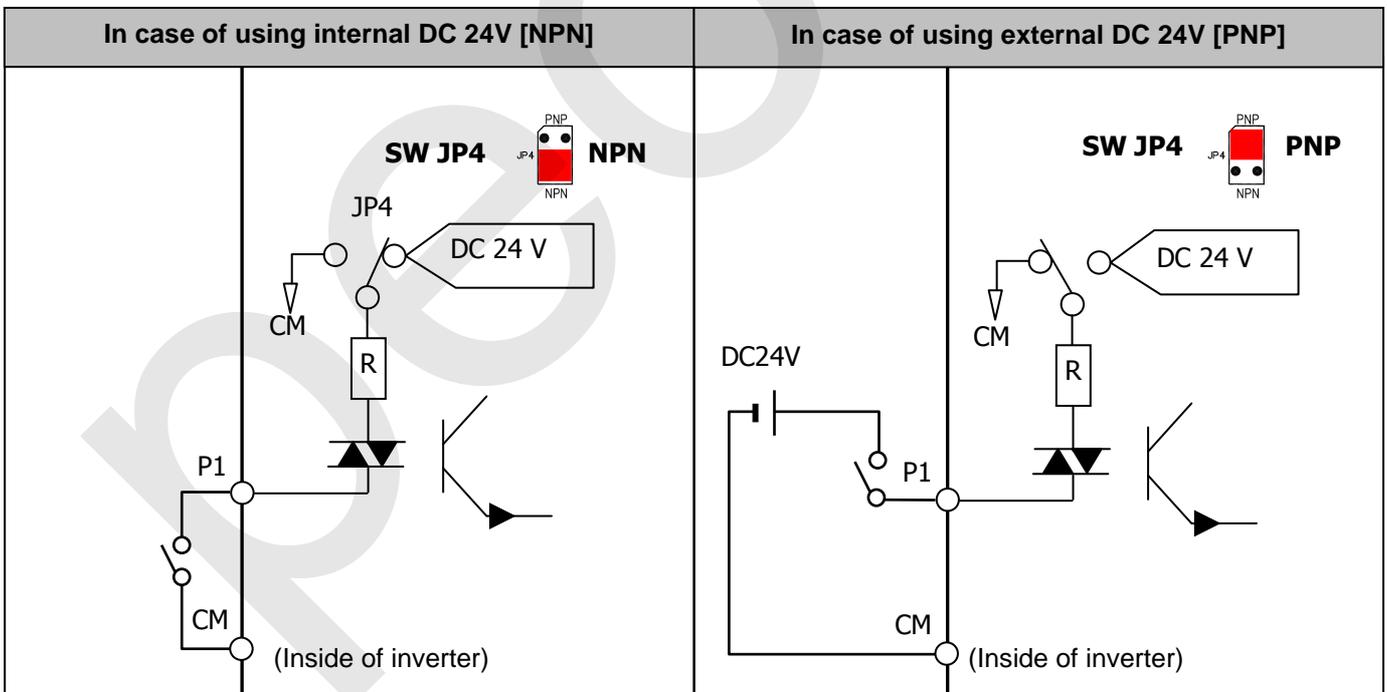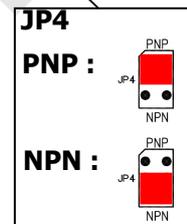

- Guaranteed PNP type input voltage (external DC 24V): On voltage (DC 19~25.2 V)/ Off voltage (DC 7V or less)



## CAUTION


- NEVER change the jumper setting during inverter run. Otherwise, it may cause inverter trip, it can affect the entire system.
- Motor NTC input for Analog Input 3 (AI3) is ONLY available when HIGEN Motor is connected.  
If user use a motor other than Higen motor with different NTC specification and use this function, it will lead to motor overheat and damage to the motor.
- Do not change the setting of PNP/NPN input switch during inverter operation. It can influence to the system since contact input is changed. Set the switch correctly before inverter operation.

### 3.5 Terminal of the Auxiliary Power Supply.

#### 3.5.1 The position of the terminal


It can operate the control board with only auxiliary power supply(220VAC) evenif it has not main power supply(R/S/T).

#### ■ SV055 ~ 750iV5(Press) (for AC/DC products)

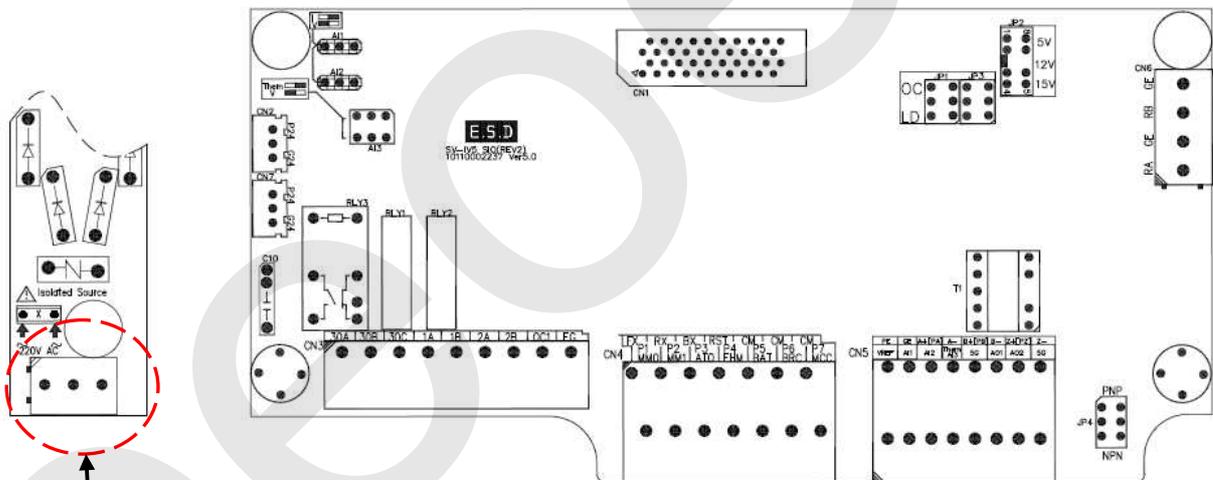


**Terminal of the Auxiliary Power**

#### ■ SV055 ~ 750iV5 (Mold)

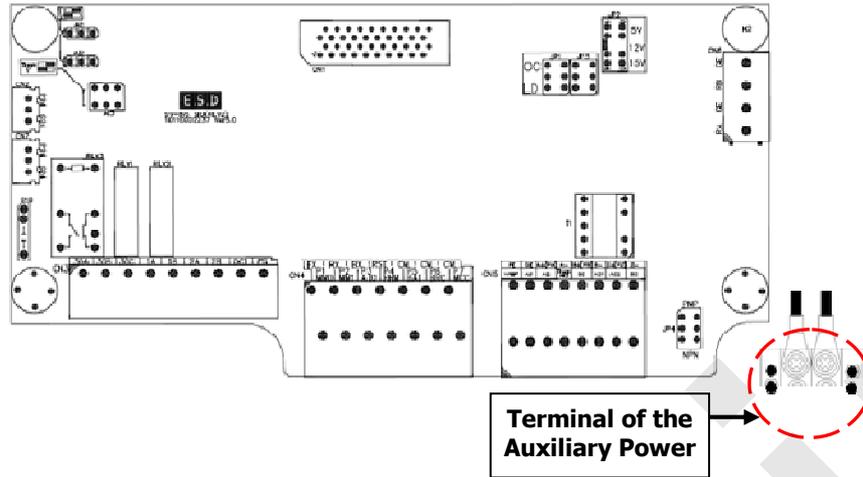


■ SV110 ~ 220iV5 (Mold)

■ SV900 ~ 2200iV5(Press) (for AC/DC products)

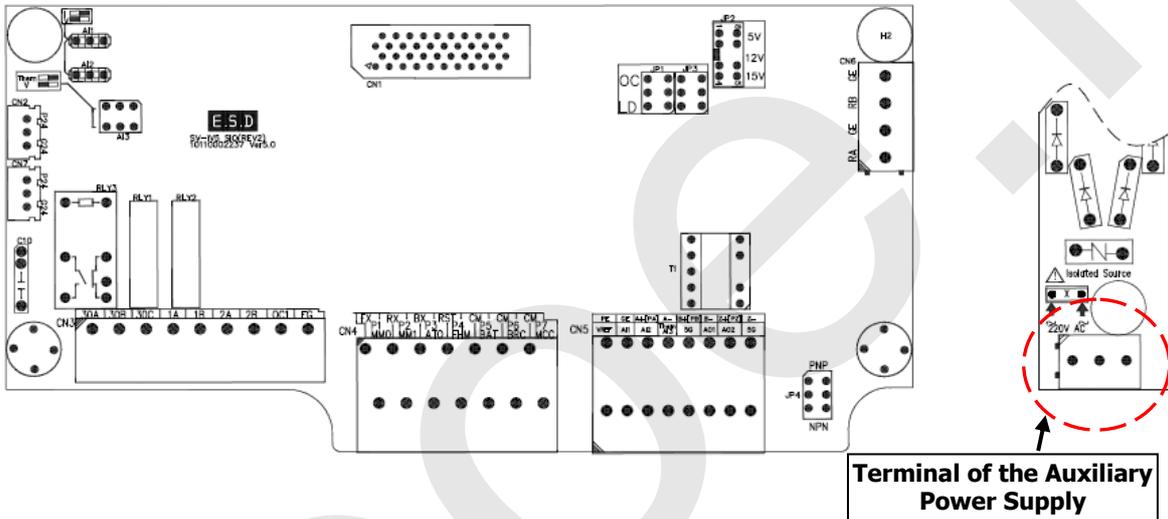

■ SV2800 ~ 3750iV5(Press) (for AC/DC products)

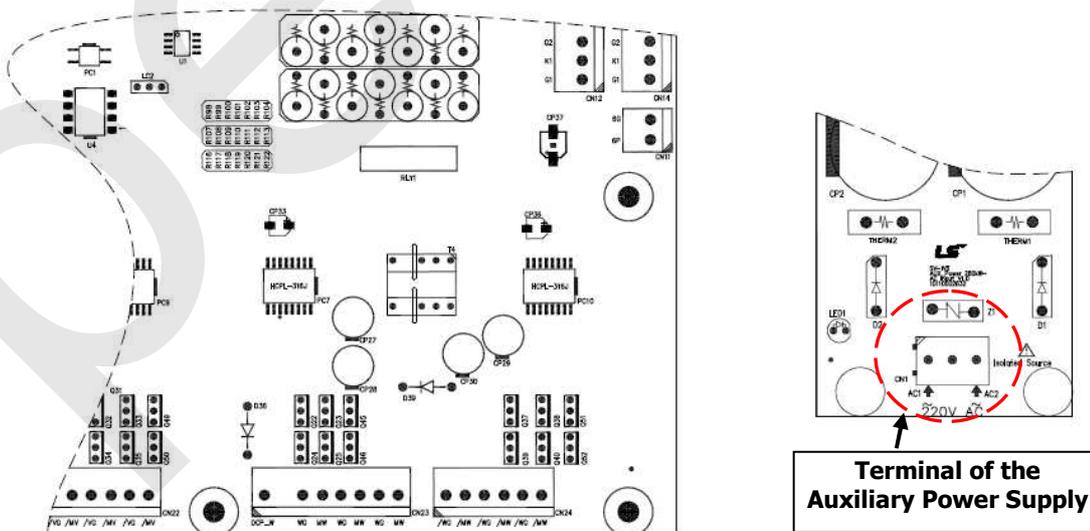

#### 3.5.2 Function description of auxiliary terminal block

Symbol	Terminal Name	Terminal Description	Input Power
AC1, AC2	Auxiliary power input	Inputs single-phase AC input source	220V (-10 ~ +10%), 50/60Hz

#### 3.5.3 Wiring and Precaution of auxiliary terminal block


- ① Connect the auxiliary power supply through insulated transformer separated with main power supply.
- ② Use polyvinyl chloride insulated wire for auxiliary power cable.
- ③ Use the cable above  $0.5\text{mm}^2$  (20 AWG).

## Chapter 4 - Trial Operation

### 4.1 Keypad Operation

LCD Keypad can display up to 32 alphanumeric characters and monitor or set parameter values to operate the inverter and the motor properly. As follows are keypad view and explanation on each key/LED on the keypad.


#### <Keypad View>

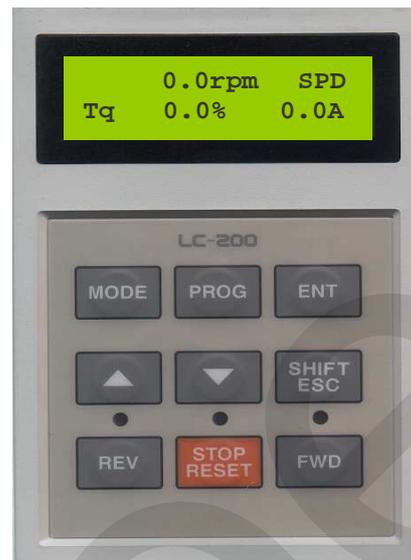

Items	Name	Function	Description
Key	MODE	Mode	Enables to move to the other groups (Initial Screen → DIO → PAR → FUN...) and go to the first code in the same group.
	PROG	Program	Enables to modify setting values.
	ENT	Enter	Enables to move to the other groups (Initial Screen ← DIO ← PAR ← FUN...) and save the changed setting values.
	▲(Up)	Up	Moves to the next code or increments setting values.
	▼(Down)	Down	Moves to the next code or decrements setting values.
	SHIFT/ESC	Shift/ESC	Acts as Shift key in a setting mode and as ESC key in other mode.
	REV	Reverse RUN	Reverse RUN command is enabled.
	STOP/RESET	Stop/Reset	Stop key during inverter operation. Resets fault when inverter returns to normal after fault has occurred.
LED	(REV)	Reverse RUN	Light up when motor is in reverse revolution. Blinks on acceleration/deceleration, lit in a constant speed
	(STOP/RESET)	Stop/Reset	Light up when the motor stops. Blinks when fault has occurred.
	(FWD)	Forward RUN	Light up when motor is in forward revolution. Blinks on acceleration/deceleration, lit in a constant speed


## 4.2 Keypad LCD Display

### 4.2.1 LCD Start-up display

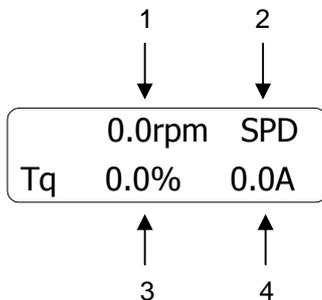

No.	Function	Description
1	Motor speed	Real motor speed in RPM (Revolution Per Minute)
2	Motor control Mode	SPD: Speed control mode TRQ: Torque control mode WEB: WEB control mode SLS: Sensorless control mode BX: Emergency stop BAT : Battery-operated mode
3	Generating torque	Displays % ratio to the rated torque of a motor.
4	Output current	Inverter output current in RMS

### 4.2.2 Group display

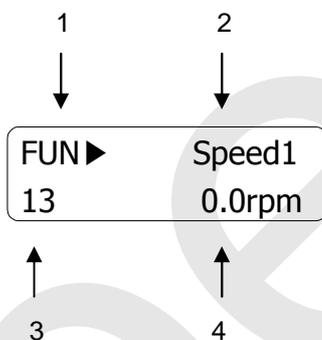

No.	Function	Description
1	Parameter group	Displays the name of each parameter group. There are DIS, DIO, PAR, FUN, CON, AIO, USR and 2 <sup>nd</sup> 1), E/L 2), SYN 3), WEB 4), SLS 5) group.
2	Code type	Displays a code type to be set.
3	Code number	Displays a code number to be set.
4	Code data and unit	Displays a code data and a code unit to be set.

- 1) Can be displayed when DIO is 2<sup>nd</sup> Func to use second motor.
- 2) Can be displayed when CON\_02 is Elevator and EL I/O option board is mounted.
- 3) Can be displayed when CON\_02 is Synchro and Synchro option board is mounted.
- 4) Can be displayed when CON\_02 is WEB Control to use WEB control.
- 5) Can be displayed when CON\_01 is Sensorless control mode.

### 4.3 Setting of Parameter Values

In case inverter is to be in use using a keypad, proper parameter values can be set depending on the load and operation condition. For more detailed information, refer to Chapter 6.

First, move on to the code in a group where is intended to change parameter value. cursor (■) blinks by pressing [PROG] key. Parameter value can be set using (SHIFT/ESC), [▲(Up)] and [▼(Down)] keys and then can be saved by entering [ENT] key.

Note) In some cases, data will not be changed for the following two reasons.

- \* Some data cannot be changed during inverter operation.
- \* Parameter data lock function is set. (PAR\_04 [Parameter Lock] is enabled)

Example) In case the 1st acceleration time is to be changed from 10(sec) to 15(sec), it can be set as shown below.

0.0rpm	SPD
Tq	0.0%
	0.0A

Initial Display

FUN▶	Jump code
00	1

Move to FUN Group by using [MODE] Key

FUN▶	Jump code
00	40

Press [PROG] Key → Enter 40 by [(SHIFT/ESC)], [▲(Up)], [▼(Down)] Key →[ENT]

FUN▶	Acc Time-1
40	10.00 sec

Acc time 1 is settable.

FUN▶	Acc Time-1
40	■10.00 sec

Press [PROG] Key.  
Setting Mode(Cursor(■) appears and blinks)

FUN▶	Acc Time-1
40	10.00 sec

Move the Cursor(■) to the position to be changed using [(SHIFT/ESC)] key.

FUN▶	Acc Time-1
40	15.00 sec

Set the data using [▲(Up)], [▼(Down)]

FUN▶	Acc Time-1
40	15.00 sec

Save the changed data by pressing [ENT] key. (Cursor disappears.)

## 4.4 Data Groups

SV-iV5 series inverters use LCD keypad for user's convenience. Data groups are divided into 12 groups for easy access depending on the inverter application.


Name	LCD keypad (on the upper left)	Description
Display group	<b>DIS</b>	Motor speed, Motor control mode, Generating torque, Output current, User selection display, Process PID output/reference/feedback value, Fault display, User group display setting and so on.
Digital I/O group	<b>DIO</b>	Digital input parameters, Digital output parameters and so on.
Parameter group	<b>PAR</b>	Parameter initialization, Parameter read / write / lock /password, Motor related constants, Auto-tuning and so on.
Function group	<b>FUN</b>	Operating frequency, Operation mode, Stop mode, Acceleration /deceleration time and pattern, Carrier frequency, Electronic thermal selection and so on.
Control group	<b>CON</b>	Control mode, ASR PI gain, Process PID gain, Draw control setting, Droop control related constants, Torque control related constants, V/F control related constants and so on.
Exterior group	<b>EXT</b>	Communication setting parameter for built-in 485 communication and external option board
Analog I/O group	<b>AIO</b>	Analog Input or Output Parameter and so on.
User group	USR	User macro function, macro function save, macro function recall
2 <sup>nd</sup> function group	2 <sup>nd</sup> 1)	2 <sup>nd</sup> motor control mode, 2 <sup>nd</sup> motor accel./decel.time, 2 <sup>nd</sup> motor parameters and so on.
Elevator group	E/L <sup>2)</sup>	It is displayed when EL_I/O option board is installed, Elevator operation function setting parameter and so on.
Synchronous group	SYNC <sup>2)</sup>	It is displayed when SYNC_I/O option board is installed. Synchronous operation function setting parameter and so on.
WEB group	WEB <sup>3)</sup>	Diameter and Tension control setting parameter while WEB control.
Sensorless control group	SLS <sup>4)</sup>	Setting parameter of open loop control without position sensor like encoder or resolver, etc.

It is a basic group to display as a **Group name**.

- 1) It is displayed when Multi-function input in DIO group is 2<sup>nd</sup> Func.
- 2) It is displayed when option board is mounted. For detailed description, please refer to user manual for option.  
Description for group is explained at chapter 6 Function Description.
- 3) Refer to the description of Chap. 7 for more information about WEB group.
- 4) It is displayed when CON\_01 is Sensorless.

● **Group transfer in the keypad**

For transfer to another group, [MODE] key is used and ▲(Up), ▼(Down) key is used to move up and down in the same group.

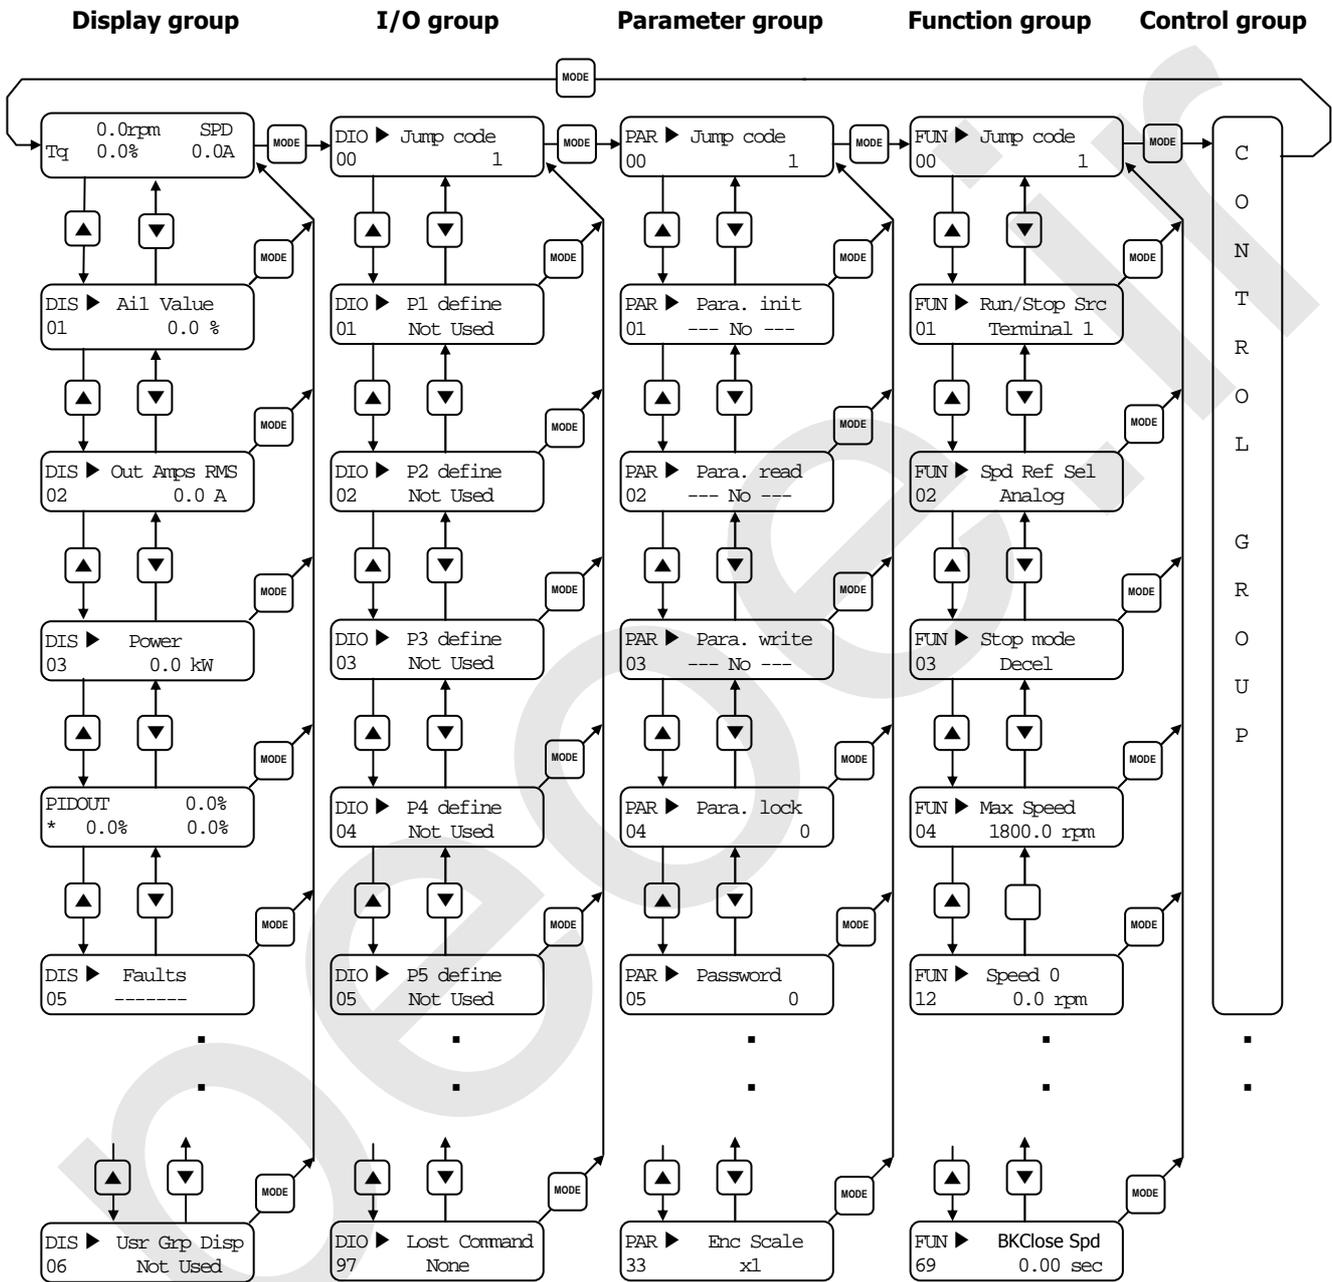

● In these group transfers, User Group, 2<sup>nd</sup> Group, AIO Group and WEB Group are omitted.

## 4.5 Auto-Tuning

Parameters such as stator resistance ( $R_s$ ), stator leakage inductance ( $sL$ ), flux current (IF), rotor time constant ( $\tau_r$ ) and stator self-inductance ( $L_s$ ) are indispensable for obtaining an excellent control performance in the vector control and are automatically measured and set using auto-tuning function.

- SV-iV5 features two types of Auto-tuning: 1) Rotational Auto Tuning  
2) Standstill Auto Tuning

### 4.5.1 Motor & encoder parameter setting for auto-tuning

The Motor capacity, Basic speed, Rating voltage, Pole number, Efficiency, Rating slip and Rating current on the nameplate of the motor and the pulse number of encoder should be set before operation.

LCD Display	Description
PAR ▶ Motor select 07 kW	<ul style="list-style-type: none"> <li>▪ Enter the motor capacity.</li> <li>▪ Basic capacity is same as Inverter capacity</li> <li>▪ Enter directly in the PAR_08 after selecting "User Define" if there is no Motor capacity.</li> </ul>
PAR ▶ UserMotorSel 08 kW	<ul style="list-style-type: none"> <li>▪ Enter the motor capacity directly at PAR_08 incase that select "User Define" at PAR_07.</li> </ul>
PAR ▶ Enc Pulse 10 [][][]	<ul style="list-style-type: none"> <li>▪ Set the pulse numbers per revolution of pulse encoder coupled to the motor shaft.</li> </ul>
PAR ▶ Base Speed 17 rpm	<ul style="list-style-type: none"> <li>▪ Set the motor base speed.</li> <li>▪ Note) It is not rating current of name plate. Base Speed = 120 X Base Frequency/ Pole number</li> </ul>
PAR ▶ Rated Volt 18 V	<ul style="list-style-type: none"> <li>▪ Set the rated voltage of the motor. (Voltage value on the name plate)</li> </ul>
PAR ▶ Pole number 19 []	<ul style="list-style-type: none"> <li>▪ Set the number of poles of the motor.</li> </ul>
PAR ▶ Efficiency 20 %	<ul style="list-style-type: none"> <li>▪ Set the efficiency of the motor. If you cannot find the efficiency in name plate, Do not set the Efficiency.</li> </ul>
PAR ▶ Rated-Slip 21 rpm	<ul style="list-style-type: none"> <li>▪ Set the rated slip speed of the motor. (Rated slip=synchronous speed-rated speed)</li> </ul>
PAR ▶ Rated-Curr 22 A	<ul style="list-style-type: none"> <li>▪ Set the rated current of the motor.</li> </ul>

## 4.5.2 Rotational auto-tuning

## 1) Precautions

 <b>CAUTION</b>
<p>Be sure to remove the load connected to the motor shaft before performing rotational auto-tuning. Otherwise, it may lead to damage to the motor or bodily injury. DB resistor should be installed because the inverter repeats abrupt Accel/Decel many times to find the motor constant (Tr) during tuning.</p>

## 2) Rotational Auto-tuning procedure

LCD Display	Description	Tuning Time
PAR ▶ AutoTuneType 23 Rotational	Set it to " <b>Rotational</b> ".	-
PAR ▶ Auto tuning 24 ALL1	Auto-tuning starts when it is set to " <b>ALL1</b> ".	-
PAR ▶ Auto tuning 24 Enc Testing	Checks whether the encoder wiring is properly done and an encoder works well by rotating the motor at 1500 rpm in forward direction.	30 ~ 35(Sec)
PAR ▶ Auto tuning 24 Rs Tuning	Stator resistance (Rs) is measured without rotating the motor.	10 ~ 20(Sec)
PAR ▶ Auto tuning 24 sL Tuning	The leakage inductance (sL) of the motor is measured without rotating the motor.	5 ~ 20(Sec)
PAR ▶ Auto tuning 24 IF Tuning	The flux current (IF) is measured by rotating the motor at 1500 rpm.	30 ~ 60(Sec)
PAR ▶ Auto tuning 24 Ls Tuning	Stator self-inductance (Ls) is measured by rotating the motor at 1500 rpm.	50 ~ 60(Sec)
PAR ▶ Auto tuning 24 Tr Tuning	Accel/Decel is performed repeatedly to find motor constant (Tr) so that DB Resistor should be connected before starting tuning. Otherwise, "Over Voltage " trip will occur.	20 ~ 60(Sec)

LCD Display	Description	Tuning Time
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">           PAR ▶ Auto tuning 24            None         </div> <div style="border: 1px solid black; padding: 5px;">           PAR ▶ Auto tuning 24            [][] Error         </div>	<p>When auto-tuning is complete successfully, "None" is displayed. If error occurs during auto-tuning, "[][] Error" is displayed. In this case, <b>verify motor parameters and encoder setting is done properly</b> and redo the auto-tuning. If the problem persists, contact LS representative.</p>	<p><b>Total 3 ~ 5 (Min.) is required</b></p>

- FWD/REV LED on keypad will blink during Auto-tuning.
- If setting PAR\_24 (Auto tuning) to "ALL2 ", all procedure is same as "ALL1" except Encoder Testing will be skipped.
- Motor constants of each can be selected and separately tuned.  
(Encoder Test, Rs Tuning, Lsigma, Flux Curr, Ls Tuning, Tr Tuning)
- If encoder phase (A, B) or inverter output wiring (U, V, W) is switched during Auto-tuning, " Enc AB Chgd " message will be displayed. In this case, changing PAR\_11 (Enc Dir Set) setting from " A Phase Lead " to " B Phase Lead " (or oppositely) will erase the need for changing the wiring.

4.5.3 Standstill auto tuning

1) Precaution

Be sure to lock the motor shaft using magnetic brake.

2) StandStill Type Auto-tuning procedure

LCD Display	Description	Tuning Time
<div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ AutoTuneType 23 Standstill                 </div>	Set the auto-tuning type to "Standstill".	-
<div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ Auto tuning 24 ALL1                 </div>	Auto-tuning starts if <b>ALL1</b> is set.	-
<div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ Auto tuning 24 Rs Tuning                 </div>	Stator resistance ( $R_s$ ) is measured without rotating the motor.	20 - 30 Sec
<div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ Auto tuning 24 sL Tuning                 </div>	The leakage inductance (sL) of the motor is measured without rotating the motor.	5 - 10 Sec
<div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ Auto tuning 24 If/Tr/Ls Tuning                 </div>	Flux current (IF), rotor time constant ( $T_r$ ) and stator self-inductance ( $L_s$ ) is measured simultaneously without rotating the motor.	15 - 60 Sec
<div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ Auto tuning 24 None                 </div> <div style="border: 1px solid black; border-radius: 10px; padding: 5px; display: inline-block;">                     PAR ▶ Auto tuning 24 [[]] Error                 </div>	When auto-tuning is complete successfully, "None" is displayed. If error occurs during auto-tuning, "[[]] Error" is displayed. In this case, verify motor parameters and encoder setting is done properly and redo the auto-tuning. If the problem persists, contact LS sales representative.	Total: 1 - 2 minutes

- FWD/REV LED on keypad will blink during Auto-tuning.
- Motor constants of each can be selected and separately tuned.  
(Rs Tuning, Lsigma, If/Tr/Ls Tuning)

## 4.6 Pulse Encoder Check

### 4.6.1 The definition of forward rotation

Forward rotation is of counter-clockwise from the side view of motor shaft.



### 4.6.2 Forward rotation check

Be sure to check if positive(+) speed is displayed when inverter power is on and rotates the motor in the forward direction.

+ [ ] [ ] . [ ] rpm	SPD
Tq	% A

### 4.6.3 Reverse rotation check

Be sure to check if negative(-) speed is displayed when inverter power is on and rotates the motor in the reverse direction.

- [ ] [ ] . [ ] rpm	SPD
Tq	% A

- If speed is displayed 0.0 rpm or unchanged or speed polarity is reversed, check if wiring for the pulse encoder is properly done.
- In case the motor shaft cannot be rotated with hands, refer to next chapter.

## 4.7 Operation by Keypad

### 4.7.1 Parameter setting for keypad operation to rotate the motor at 100 rpm

FUN ▶ Run/Stop Src  
01 Keypad

① RUN/STOP command setting by keypad

FUN ▶ Spd Ref Sel  
02 Keypad1

② Operating speed reference setting by keypad

FUN ▶ Speed 0  
12 100.0 rpm

③ Operating speed setting

### 4.7.2 Forward / Reverse Run (FWD / REV)

① Low speed operation

- Check if motor speed is +100 rpm in the start-up LCD screen after pressing [FWD] key.

+100.0rpm SPD  
Tq % A

- Check if motor speed is -100 rpm in the start-up LCD screen after pressing [REV] key.

-100.0rpm SPD  
Tq % A

- The following table describes the cases of abnormal rotation due to the incorrect wiring of encoder and/or motor.

Command	Rotating direction	Speed display	Torque display	Wiring Status
FWD	Forward	+100.0(rpm)	Below +10%	Normal
REV	Reverse	-100.0(rpm)	Below -10%	
FWD	Forward	-10 ~ -40(rpm)	150% (Torque Limit)	Encoder wiring reversed
REV	Reverse	10 ~ 40(rpm)	-150% (Torque Limit)	
FWD	Reverse	-10 ~ -40(rpm)	150% (Torque Limit)	Phase V and W wiring reversed
REV	Forward	10 ~ 40(rpm)	-150% (Torque Limit)	
FWD	Reverse	+100.0(rpm)	Below +10%	Encoder and Motor all reversed
REV	Forward	-100.0(rpm)	Below -10%	

- If A and B phase of encoder or wiring of motor are reversed, be sure to replace A with B phase wire or output wiring of inverter after checking the wiring for encoder or output or inverter. Or user does not need to change wiring if PAR\_11(Enc Dir Set) setting value is changed from "A Phase Lead" to "B Phase Lead".
- Torque display is on the basis of the no load operation.

② High Speed Operation

Change the value of FUN\_12 to 1000.0(rpm) and Check the display LCD by pressing [FWD], [REV] keys shown below.

- When pressing [FWD] key;

+1000.0rpm	SPD
Tq	% A

- When pressing [REV] key;

-1000.0rpm	SPD
Tq	% A

### 4.8 Operation by Control Terminal

#### 4.8.1 Parameter setting

FUN▶ Run/Stop Src
01 Terminal 1

① Setting RUN/STOP command by terminal

FUN▶ Spd Ref Sel
02 Analog

② Setting Speed reference by Analog

FUN▶ Max Speed
04 1800.0 rpm

③ Setting Max. motor speed

AIO▶ Ai1 Define
01 Speed Ref


④ Ai1(Analog input terminal) define

AIO▶ Ai1 Source
02

⑤ Ai1(Analog input terminal) Source define : Select  
(-10 →10V, 10→-10V, 0→10V,10→0V, 0→20mA, 20→0mA)

#### 4.8.2 Wiring example when issuing speed reference using speed potentiometer on AI1 terminal

Connect the potentiometer to VREF, AI1 and 5G as shown below.

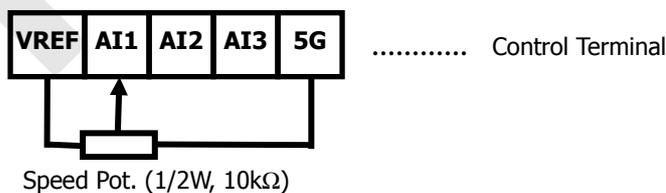

### 4.8.3 Adjusting Ai1 Gain and Bias (example of analog input Ai1 setting)

① Out Y2(Gain) Adjustment of Analog input

- Apply 10V or 20mA between AI1 ~ 5G (for setting by potentiometer, adjust it to Max).
- Adjust the other multi analog input terminals in same manner.

Key Handling	Loader Display	Description
	AIO▶ Ai1 Out Y2 06 100.00 %	Initial LCD display
<b>PROG</b>	AIO▶ Ai1 98.00 % 06 Gain 100.00 %	Pressing [PROG] key, shows the percentage of output compared with input in upper side and the gain value be set currently in low side of display.
<b>▲</b>	AIO▶ Ai1 100.00 % 06 Gain 102.00 %	If you try to adjust the gain to show 100.00% at 10V input, Press [▲(Up)] key repeatedly and set to be 102.00%.
<b>ENT</b>	AIO▶ Ai1 Out Y2 06 102.00 %	After adjusting Gain, if you enter [ENT] key, the adjusted gain value is displayed and saved.

② Out Y1(Bias) Adjustment of Analog input

- Apply 0V or 0mA between AI1 ~ 5G (for setting by potentiometer, adjust it to Min).
- Adjust the other multi analog input terminals in same manner.

Key Handling	Loader Display	Description
	AIO▶ Ai1 Out Y1 04 0.00 %	Initial LCD display
<b>PROG</b>	AIO▶ Ai1 0.18 % 04 Bias 0.00 %	Pressing [PROG] key, shows the percent of output compared with input in upper side and and the Bias value be set currently in low side.
<b>▲</b>	AIO▶ Ai1 0.00 % 04 Bias 0.18 %	If you try to adjust the Bias to show 0.00%, Press [▲(Up)] key repeatedly and set to be 0.00%.
<b>ENT</b>	AIO▶ Ai1 Out Y1 04 0.18 %	After adjusting Bias, if you enter [ENT] key, the adjusted Bias value is saved.

#### 4.8.4 FX / RX operation

##### 1) FX Operation (Forward Run Command by Control Terminal)

- ① Apply 0V between AI1 and 5G (for setting by potentiometer, adjust it to Min).
- ② Check the motor speed display in display group shows "+0.0rpm" after connecting the terminals FX and CM.
- ③ Increase AI1 voltage little by little and check the speed is increasing (for setting by potentiometer, turn the pot to max. smoothly).
- ④ To stop the motor, disconnect the FX and CM terminal.

##### 2) RX Operation (Reverse Run Command by Control Terminal)

- ① Apply 0V between AI1 and 5G (for setting by potentiometer, adjust it to Min).
- ② Check the motor speed display in display group shows "-0.0rpm" after connecting the terminals RX and CM.  
Increase AI1 voltage little by little and check the speed is increasing (for setting by potentiometer, turn the pot to max. smoothly).
- ③ To stop the motor, disconnect the RX and CM terminal.

- 3) The cases of abnormal rotation due to the wrong wiring of encoder and/or motor during low speed (about 100rpm) operation by control terminal.

Command	Rotating direction	Speed display	Torque display	Wiring Status	
FX	Forward	+100.0(rpm)	Below +10%	Normal	
RX	Reverse	-100.0(rpm)	Below -10%		
FX	Forward	-10 ~ -40(rpm)	150%(Torque Limit)	Encoder wiring reversed	Abnormal
RX	Reverse	10 ~ 40(rpm)	-150%(Torque Limit)	Phase V and W wiring reversed	
FX	Reverse	-10 ~ -40(rpm)	150%(Torque Limit)		
RX	Forward	10 ~ 40(rpm)	-150%(Torque Limit)		
FX	Reverse	+100.0(rpm)	Below +10%	Encoder and Motor all reversed	
RX	Forward	-100.0(rpm)	Below -10%		

- If A and B phase are reversed, be sure to replace A with B phase wire after checking the pulse encoder wiring.
- If motor wires are reversed, be sure to replace V with W phase wire after checking the motor output wiring.
- It does not need to change wiring if user changes the setting value of PAR\_11(Enc Dir Set) from "A Phase Lead" to "B Phase Lead".
- Torque display is on the basis of the no load operation.


Operation Example (1)	Speed Setting via Keypad + Run/Stop via Terminal (FX/RX)																												
<p><b>[Operation condition]</b></p> <ul style="list-style-type: none"> <li>- Control mode : Speed control</li> <li>- Ref. Speed : 1500[rpm] setting via keypad</li> <li>- Accel/Decel time : Accel - 10[sec], Decel - 20[sec]</li> <li>- Run/Stop Src : Run/Stop via FX/RX terminal, Control terminal: NPN mode</li> </ul>																													
<p><b>[Wiring]</b></p>																													
<p><b>[Related Function Code]</b></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 8%;">Step</th> <th style="width: 20%;">Parameter setting</th> <th style="width: 10%;">Code</th> <th style="width: 62%;">Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>RUN/STOP source select</td> <td>FUN_01</td> <td>Set it to 0 "Terminal 1".</td> </tr> <tr> <td>2</td> <td>Speed setting method</td> <td>FUN_02</td> <td>Set it to 1 "Keypad1".</td> </tr> <tr> <td>3</td> <td>Ref. Speed Setting</td> <td>FUN_12</td> <td>Set speed command 1500[rpm] via Keypad.</td> </tr> <tr> <td>4</td> <td>Accel/Decel time</td> <td>FUN_41 FUN_42</td> <td>Set Accel time to 10.00 [sec] in FUN_41. Set Decel time to 20.00 [sec] in FUN_42.</td> </tr> <tr> <td>5</td> <td>Terminal FX</td> <td style="text-align: center;">-</td> <td>Motor starts to rotate in Forward direction at 1500[rpm] with Accel time 10 [sec] when FX terminal is turned ON. Motor decelerates to stop with Decel time 20[sec] when FX terminal is turned OFF.</td> </tr> <tr> <td>6</td> <td>Terminal RX</td> <td style="text-align: center;">-</td> <td>When RX terminal is turned ON motor starts to rotate in Reverse direction at 1500[rpm] with Accel time 10 [sec]. When it is OFF, motor decelerates to stop with Decel time 20 [sec].</td> </tr> </tbody> </table>		Step	Parameter setting	Code	Description	1	RUN/STOP source select	FUN_01	Set it to 0 "Terminal 1".	2	Speed setting method	FUN_02	Set it to 1 "Keypad1".	3	Ref. Speed Setting	FUN_12	Set speed command 1500[rpm] via Keypad.	4	Accel/Decel time	FUN_41 FUN_42	Set Accel time to 10.00 [sec] in FUN_41. Set Decel time to 20.00 [sec] in FUN_42.	5	Terminal FX	-	Motor starts to rotate in Forward direction at 1500[rpm] with Accel time 10 [sec] when FX terminal is turned ON. Motor decelerates to stop with Decel time 20[sec] when FX terminal is turned OFF.	6	Terminal RX	-	When RX terminal is turned ON motor starts to rotate in Reverse direction at 1500[rpm] with Accel time 10 [sec]. When it is OFF, motor decelerates to stop with Decel time 20 [sec].
Step	Parameter setting	Code	Description																										
1	RUN/STOP source select	FUN_01	Set it to 0 "Terminal 1".																										
2	Speed setting method	FUN_02	Set it to 1 "Keypad1".																										
3	Ref. Speed Setting	FUN_12	Set speed command 1500[rpm] via Keypad.																										
4	Accel/Decel time	FUN_41 FUN_42	Set Accel time to 10.00 [sec] in FUN_41. Set Decel time to 20.00 [sec] in FUN_42.																										
5	Terminal FX	-	Motor starts to rotate in Forward direction at 1500[rpm] with Accel time 10 [sec] when FX terminal is turned ON. Motor decelerates to stop with Decel time 20[sec] when FX terminal is turned OFF.																										
6	Terminal RX	-	When RX terminal is turned ON motor starts to rotate in Reverse direction at 1500[rpm] with Accel time 10 [sec]. When it is OFF, motor decelerates to stop with Decel time 20 [sec].																										

**Operation Example (2) Analog Voltage Input(AI1) + Run/Stop via Terminal (FX/RX)**

**[Operation condition]**

- Control mode : Speed control
- Ref. Speed : 1500[rpm] analog input via AI1(Potentiometer)
- Accel/Decel time : Accel - 10[sec], Decel - 20[sec]
- Run/Stop Src : Run/Stop via FX/RX terminal, Control terminal: NPN mode

**[Wiring]**

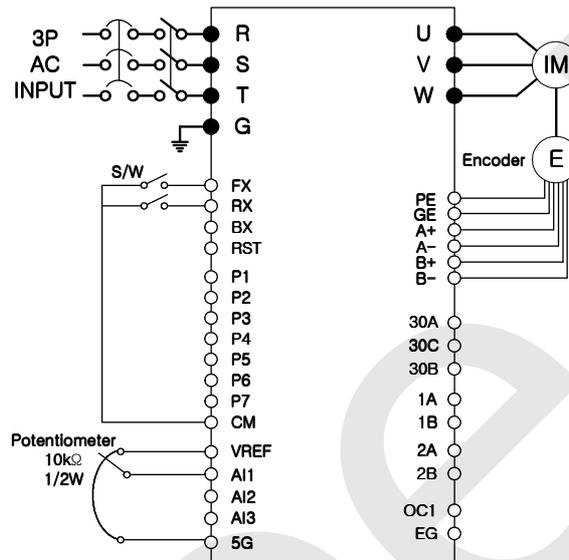

**[Related Function Code]**

Step	Parameter setting	Code	Description
1	RUN/STOP source select	FUN_01	Set it to 0 "Terminal 1".
2	Speed setting method	FUN_02	Set it to 0 "Analog".
3	Analog Input 1 Definition	AIO_01	Set it to 1 "Speed Ref".
4	Analog Input 1 Input Method Definition	AIO_02	Set it to 2 "0 → 10V".
5	Ref. Speed Setting	DIS_01	Set speed command 1500[rpm] via AI1(Potentionmeter) in DIS_01 PreRamp Ref.
6	Accel/Decel time	FUN_41 FUN_42	Set Accel time to 10.00 [sec] in FUN_41. Set Decel time to 20.00 [sec] in FUN_42.
7	Terminal FX	-	Motor starts to rotate in Forward direction at 1500[rpm] with Accel time 10 [sec] when FX terminal is turned ON. Motor decelerates to stop with Decel time 20[sec] when FX terminal is turned OFF.
8	Terminal RX	-	When RX terminal is turned ON motor starts to rotate in Reverse direction at 1500[rpm] with Accel time 10 [sec]. When it is OFF, motor decelerates to stop with Decel time 20 [sec].

# Chapter 5 - Function Code Table

## 5.1. Display Group (DIS\_[][])

\* " - " mark of communication address indicates communication exclusion.  
 \* Setting during Inverter operation (Yes : possible, No : impossible)

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run <sup>1)</sup>	PAGE
				RANGE	UNIT	DEFAULT		
DIS_00	-	Motor Speed/Control Mode Output Torque/Output Current	0.0rpm SPD Tq 0.0% 0.0A	-	-	-	-	
DIS_01	-	User Display 1	Ai1 Value		%	PreRamp Ref	Yes	6-1
			Ai2 Value		%			
			Ai3 Value		%			
			Ai4 Value <sup>1)</sup>		%			
			Ai5 Value <sup>1)</sup>		%			
			PreRamp Ref		rpm			
			PostRamp Ref		rpm			
			ASR Inp Ref		rpm			
			Output Freq		rpm			
			Motor Speed		rpm			
			Motor SpdEst		rpm			
			Speed Dev		rpm			
			ASR Out		%			
			Torque Bias		%			
			PosTrq Limit		%			
			NegTrq Limit		- %			
			RegTrq Limit		%			
			Torque Ref		%			
			IqeRef		A			
			Iqe		A			
			Flux Ref		%			
			Ide Ref		A			
			Ide		A			
			ACR_Q Out		V			
			ACR_D Out		V			
			VdeRef		V			
			VqeRef		V			
			Out Amps RMS		A			
			Out Volt RMS		V			
			Power		kW			
			DC Bus Volt		V			
			Proc PI Ref		%			
Proc PI F/B		%						
Proc PI Out		%						
MotTemp NTC		deg						
Inv Temp		deg						
Inv i2t		%						
MP Output		%						
Ctrl Mode		-						
S/W Version		-						
Run Time		-						
Terminal In		-						
Terminal Out		-						
Run Status		-						
Diameter <sup>2)</sup>		%						
Line SPD CMD <sup>2)</sup>		%						
Reel SPD <sup>2)</sup>		%						
PhInOpenLvl		V						
DIS_02	-	User Display 2	Refer to DIS_01	-	DC Bus Volt	Yes	6-1	
DIS_03	-	User Display 3	Refer to DIS_01	-	Terminal In	Yes	6-1	
DIS_04	-	Process PID Output Ref / FB	PIDOut 0.0% *xx.x% 0.0%	-	-	-	6-3	
DIS_05	-	Faulty Display	Faults	-	-	-		
DIS_06	7106	User Group Display Setting	Usr Grp Disp	0 (Not Used) 1 (Dis+User Grp) 2 (Display ALL)	-	0 (Not Used)	Yes	6-4

1) It is effective only when you use Extended I/O (EXTN\_I/O).

2) It is displayed on WEB control Mode.

5.2 Digital DIO Group (DIO\_[][])

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
DIO_00	-	Jump for quick view	Jump Code	1 ~ 98	-	-	Yes	6-5
DIO_01	7201	Multi-function input terminal P1 definition	P1 define	0 (Not Used) 1 (Speed-L) 2 (Speed-M) 3 (Speed-H) 4 (Jog Speed) 5 (MOP Up) 6 (MOP Down) 7 (MOP Clear) 8 (MOP Save) 9 (Analog Hold) 10 (Main Drive) 11 (2nd Func) 12 (Xcel-L) 13 (Xcel-H) 14 (3-Wire) 15 (Ext Trip-B) 16 (Prohibit FWD) 17 (Prohibit REV) 18 (Proc PID Dis) 19 (Timer Input) 20 (SoftStrtCncl) 21 (ASR Gain Sel) 22 (ASR P/PI Sel) 23 (Flux Ref Sel) 24 (PreExcite) 25 (Spd/Trq Sel) 26 (Use Max Trq) 27 (Use Trq Bias) 30 (Battery Run) 39 (Synch Disable) 40 (Synch Hold) 41 (LVT Disable) 42 (Dia Hold) 43 (Dia Preset) 44 (CoreSize-L) 45 (CoreSize-H) 46 (TensionDisable) 47 (PI Gain Sel) 48 (PID ITerm Clr) 49 (Taper Disable) 50 (Stall Enable) 51 (Boost Enable) 52 (Quick Stop) 53 (Jog Web FWD) 54 (Kog Web Rev) 55 (Under Wind) 56 (Unwinder)	-	0 (Not Used)	No	
DIO_02	7202	Multi-function input terminal P2 definition	P2 define	Refer to DIO_1	-	0 (Not Used)	No	
DIO_03	7203	Multi-function input terminal P3 definition	P3 define		-	0 (Not Used)	No	
DIO_04	7204	Multi-function input terminal P4 definition	P4 define		-	0 (Not Used)	No	
DIO_05	7205	Multi-function input terminal P5 definition	P5 define		-	0 (Not Used)	No	
DIO_06	7206	Multi-function input terminal P6 definition	P6 define		-	0 (Not Used)	No	
DIO_07	7207	Multi-function input terminal P7 definition	P7 define		-	0 (Not Used)	No	
DIO_08	-	Negative function of multi-function input terminal	Neg Func. In		0000000 ~ 1111111	bit	0000000	
DIO_09	7209	Multi-function Input LPF time constant	Terminal LPF	0 ~ 2000	-	5	Yes	
DIO_10	-	Negative function of multi-function auxiliary output terminal	Neg Func. Out	00000 ~ 11111	bit	00000	No	

## 5. Function Code Table

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
DIO_41	7229	Definition of multi-function Auxiliary output (AX1)	AX1 Define	0 (Not Used) 1 (INV Ready) 2 (Zero Spd Det) 3 (Spd Det.) 4 (Spd Det(ABS)) 5 (Spd Arrival) 6 (Timer Out) 7 (LV Warn) 8 (Run) 9 (Regenerating) 10 (Mot OH Warn) 11 (Inv OH Warn) 12 (Spd Agree) 13 (Trq Det.) 14 (Trq Lmt Det.) 15 (OverLoad) 16 (Stop) 17 (MC on/off) 18 (Steady) 19 (Brake Output) 23 (WEB Break) <sup>1)</sup> 24 (Up To Spd) <sup>1)</sup> 25 (False Core) <sup>1)</sup>	-	0 (Not Used)	Yes	6-17
DIO_42	722A	Definition of multi-function Auxiliary output (AX2)	AX2 Define	Same as DIO_41	-	0 (Not Used)	Yes	
DIO_43	722B	Definition of multi-function Auxiliary output (OC1)	OC1 Define	Same as DIO_41	-	0 (Not Used)	Yes	
DIO_46	722E	Fault relay mode selection (A, B, C)	Relay Mode	000 ~ 111	bit	011	Yes	6-25
DIO_47	722F	Zero speed detection level	ZSD Level	0.0 ~ 480.0	rpm	10.0	Yes	6-18
DIO_48	7230	Zero speed detection band	ZSD Band	0.1 ~ 10.0	%	0.5	Yes	
DIO_49	7231	Speed detection level	SD Level	-3600 ~ 3600	rpm	0	Yes	6-18
DIO_50	7232	Speed detection band	SD Band	0.1 ~ 10.0	%	0.5	Yes	
DIO_51	7233	Speed arrival band	SA Band	0.1 ~ 10.0	%	0.5	Yes	6-19
DIO_52	7234	Speed deviation band	SEQ Band	0.1 ~ 10.0	%	0.5	Yes	
DIO_53	7235	Torque detection level	TD Level	0.0 ~ 250.0	%	0.0	Yes	6-21
DIO_54	7236	Torque detection band	TD Band	0.1 ~ 10.0	%	0.5	Yes	
DIO_55	7237	Timer On delay time	TimerOn Dly	0.1 ~ 3600.0	sec	0.1	Yes	6-20
DIO_56	7238	Timer Off delay time	TimerOff Dly	0.1 ~ 3600.0	sec	0.1	Yes	
DIO_57	7239	Overload warning level	OL Level	30 ~ 250	%	150	Yes	6-22
DIO_58	723A	Overload warning time	OL Time	0 ~ 30	sec	10	Yes	
DIO_59	723B	Overload trip selection	OLT Select	0 (No) / 1 (Yes)		1 (Yes)	Yes	6-25
DIO_60	723C	Overload trip level	OLT Level	30 ~ 250	%	180	Yes	
DIO_61	723D	Overload trip time	OLT Time	0 ~ 60	sec	60	Yes	
DIO_62	723E	Inverter overheat warning temp.	IH Warn Temp	50 ~ 85	deg	75	Yes	6-21
DIO_63	723F	Inverter overheat warning band	IH Warn Band	0 ~ 10	deg	5	Yes	
DIO_64	7240	Motor overheat warning temp.	MH Warn Temp	75 ~ 130	deg	120	Yes	6-21
DIO_65	7241	Motor overheat warning band	MH Warn Band	0 ~ 10	deg	5	Yes	
DIO_67	7242	Delayed time of MC On <sup>Note4)</sup>	MC Timer On	100~50000	msec	1000	No	6-22
DIO_68	7243	Delayed time of MC Onff <sup>Note4)</sup>	MC Timer Off	100~50000	msec	1000	No	
DIO_95	7244	Inverter Station Address	Inv Number	1~250		1	No	Note5)
DIO_96	7260	485 BaudRate	485 BaudRate	0(1200) 1(2400) 2(4800) 3(9600) 4(19200) 5(38400)	bps	9600	No	Note5)
DIO_97	7261	How to Run at Lost command	Lost Command	0 (None) 1 (FreeRun) 2 (Stop)	-	0 (None)	No	6-25
DIO_98	7262	Decision time for comm. command lost	Comm. Timer	10~300	sec	10	No	6-26 <sup>Note5)</sup>

1) It is displayed on WEB control Mode.

2) It is for only 5.5~22kW/2/4 products.

3) It is displayed when Con\_02 is Synchro after Synchro option is mounted.

4) It is displayed when definition of multi-function (AX1, AX2, OC1) is MC on/off.

5) It is displayed when 485 communication option board is mounted. Refer to RS485/Modbus-RTU for iP5A/iV5 for detailed description.

5.3 Parameter group (PAR\_[][])

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
PAR_00	-	Jump for quick view	Jump Code	1 ~ 38	-	-	Yes	6-27
PAR_01	7301	Initialize parameters	Para. init	0 (No) 1 (All Groups) 2 (DIS) 3 (DIO) 4 (PAR) 5 (FUN) 6 (CON) 7 (EXT) 8 (AIO) 9 (USR) 10 (2ND) 11 (E/L) 12 (SYN) 13 (WEB) 14 (SLS)		0 (No)	No	
PAR_02	-	Read all function code	Para. read	0 (No) / 1 (Yes)		0 (No)	No	
PAR_03	-	Write all function code	Para. write	0 (No) / 1 (Yes)		0 (No)	No	
PAR_04	-	Parameter write protection	Para. lock	0 ~ 255		0	Yes	
PAR_05	-	Password	Password	0 ~ 9999		0	Yes	6-28
PAR_07	7307	Motor capacity selection	Motor select	0 (2.2) 1 (3.7) 2 (5.5) 3 (7.5) 4 (11.0) 5 (15.0) 6 (18.5) 7 (22.0) 8 (30.0) 9 (37.0) 10 (45.0) 11 (55.0) 12 (75.0) 13 (90.0) 14 (110.0) 15 (132.0) 16 (160.0) 17 (220.0) 18 (280.0) 19 (315.0) 20 (375.0) 21 (User Define) <sup>1)</sup>	kW	-	No	6-29
PAR_08	7308	Motor cap. selection of USER	UserMotorSel	0.7 ~ 500.0	kW	5.5	No	6-29
PAR_09	7309	Motor cooling type	Cooling Mtd	0 (Self-cool) 1 (Forced-cool)	-	1 (Forced-cool)	Yes	
PAR_10	730A	Pulse no. of encoder	Enc Pulse	360 ~ 4096	-	1024	No	
PAR_11	730B	Encoder direction setting	Enc Dir Set	0 (A Phase Lead) 1 (B Phase Lead)	-	0 (A Phase Lead)	No	
PAR_12	730C	Encoder error check enable	Enc Err Chk	0 (No) 1 (Yes)	-	1 (Yes)	No	
PAR_13	730D	Encoder LPF time constant	Enc LPF	0 ~ 100	ms	1	Yes	6-30
PAR_14	730E	Encoder error detection time	EncFaultTime	0.00 ~ 10.00	sec	0.00	No	
PAR_15	730F	encoder error reference speed	EncFaultPerc	0.0 ~ 50.0	%	25.0	No	
PAR_17	7311	Motor base speed	Base Speed	100.0 ~ 3600.0	rpm	1800.0	No	
PAR_18	7312	Motor rated voltage	Rated Volt	120 ~ 560	V		No	
PAR_19	7313	Motor number of poles	Pole number	2 ~ 12		4	Yes	6-32
PAR_20	7314	Motor efficiency	Efficiency	70.0 ~ 100.0	%		Yes	
PAR_21	7315	Motor rated slip	Rated-Slip	10 ~ 250	rpm		Yes	
PAR_22	7316	Motor rated current	Rated-Curr	1.0 ~ 1000.0	A		Yes	
PAR_23	7317	Input power setting	AC In Volt	170 ~ 230 320 ~ 480	V	220 380	No	
PAR_24	7318	Auto tuning type selection	AutoTuneType	0 (Rotational) 1 (Standstill)		0 (Rotational)	No	6-35
PAR_25	-	Auto tuning range setting <sup>2)</sup>	Auto Tuning	None ALL1/ALL2 Encoder Test Rs Tuning Lsigma Flux Curr Ls Tuning Tr Tuning Inertial Tuning <sup>Note5)</sup>	-	None	No	6-33
PAR_26	731A	Tuning Torque	Tune Torque	10.0 ~ 100.0	%	70	Yes	6-37
PAR_27	731B	Motor flux current	Flux-Curr	0.0 ~ 70% of PAR_22	A		Yes	
PAR_28	731C	Secondary part of motor time constant	Tr	30 ~ 3000	ms		Yes	
PAR_29	731D	Stator inductance	Ls	0.00 ~ 500.00	mH		Yes	
PAR_30	731E	Leakage coefficient	Lsigma	0.00 ~ 300.00	mH		Yes	
PAR_31	731F	Stator resistance	Rs	0.000 ~ 15.000	ohm		Yes	

## 5. Function Code Table

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
PAR_34	7322	Encoder pulse multiplication <sup>3)</sup>	Enc Scale	x1 / x16 / x32 / x64	-	x 1	No	-
PAR_35	7323	Inertia tuning selection	Inertial Tune	0 (No) / 1 (Yes)		0 (No)	No	6-33
PAR_36	7324	Inertial coefficient	Inertial	0.001 ~ 60.000	kg · m <sup>2</sup>		Yes	6-37
PAR_37	7325	Acc./Dec. time for Inertial tuning	J Spd Time	0.500 ~ 10.000	sec	0.500	No	오류! 책갈피가 정의되어 있지 않습니다.
PAR_38	7326	Inertial LPF	Inertia LPF	0.010 ~ 50.000	ms	0.100	No	오류! 책갈피가 정의되어 있지 않습니다.

1) When PAR\_07 (Motor select) is set to "User Define", PAR\_08 (UserMotorSel) will be displayed.

2) If PAR\_24 (AutoTuneType) is set to "Standstill", the order of display in PAR\_25 (Auto Tuning) will be None→ ALL1→ Rs Tuning→ Lsigma→ If/Tr/Ls Tune.

3) Caution: PAR\_33 (Enc Scale) Code is necessary only in the case of installation of SIN/COS Encoder option board, Don't modify the default value "x1" when not using SIN/COS Encoder board. If you modify the value, the normal operation isn't possible. For any extra information in detail, refer to the option dedicated manual.

4) Refer to user manual for SIN/COS encoder board.

5) It is only displayed when PAR\_35 (Inertia tuning selection ) is 'Yes'.

5.4. Function group (FUN\_[ ] [ ])

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
FUN_00	-	Jump for quick view	Jump code	1 ~ 85	-	-	Yes	6-39
FUN_01	7401	RUN/STOP command source selection	Run/Stop Src	0 (Terminal 1) 1 (Terminal 2) 2 (Keypad) 3 (Option) 4 (Int485)	-	0 (Terminal 1)	No	
FUN_02	7402	Speed setting source selection	Spd Ref Sel	0 (Analog) 1 (Keypad1) 2 (Keypad2) 3 (Option) 4 (Int485) 6 (Line SPD Ref) <sup>1)</sup> 7 (Line SPD Opt) <sup>1)</sup>	-	1 (Keypad1)	No	6-39
FUN_03	7403	Stop mode selection	Stop mode	0 (Decel) 1 (Free-run)	-	0 (Decel)	No	
FUN_04	7404	Max. motor speed	Max Speed	400.0 ~ 3600.0	rpm	1800.0	No	6-40
FUN_05	7405	Min. motor speed	Min Speed <sup>note2)</sup>	0.0 ~ 500.0	rpm	100.0	No	-
FUN_12	740C	Multi-step speed 0	Speed 0	0.0~Max Speed	rpm	0.0	Yes	6-42
FUN_13	740D	Multi-step speed 1	Speed 1	0.0~Max Speed	rpm	0.0	Yes	
FUN_14	740E	Multi-step speed 2	Speed 2	0.0~Max Speed	rpm	0.0	Yes	
FUN_15	740F	Multi-step speed 3	Speed 3	0.0~Max Speed	rpm	0.0	Yes	
FUN_16	7410	Multi-step speed 4	Speed 4	0.0~Max Speed	rpm	0.0	Yes	
FUN_17	7411	Multi-step speed 5	Speed 5	0.0~Max Speed	rpm	0.0	Yes	
FUN_18	7412	Multi-step speed 6	Speed 6	0.0~Max Speed	rpm	0.0	Yes	
FUN_19	7413	Multi-step speed 7	Speed 7	0.0~Max Speed	rpm	0.0	Yes	
FUN_20	7414	JOG speed	Jog Speed	0.0~Max Speed	rpm	100.0	Yes	
FUN_21	7415	Dwell Speed	Dwell Speed	0.0~Max Speed	rpm	100.0	No	
FUN_22	7416	Dwell Time	Dwell Time	0.00 ~ 100.00	sec	0.00	No	6-42
FUN_33	7421	Acc./Dec. reference Speed	Acc/Dec Ref	0 (Max Speed) 1 (Ref Speed)	-	0 (Max Speed)	No	6-42
FUN_36	7424	S ratio 1 in acceleration start	Acc S Start	0.0 ~ 50.0	%	0.0	No	6-44
FUN_37	7425	S ratio 2 in acceleration end	Acc S End	0.0 ~ 50.0	%	0.0	No	
FUN_38	7426	S ratio 1 in deceleration start	Dec S Start	0.0 ~ 50.0	%	0.0	No	
FUN_39	7427	S ratio 2 in deceleration end	Dec S End	0.0 ~ 50.0	%	0.0	No	
FUN_40	7428	Time scale for acc./dec.	Time scale	0 (0.01 sec) 1 (0.1 sec)		0 (0.01 sec)	No	오류! 책갈피가 정의되어 있지 않습니다.
FUN_41	7429	Acceleration time 1	Acc Time-1	0.00 ~ 6000.0	sec	2.00 <sup>Note 2)</sup>	Yes	6-39
FUN_42	742A	Deceleration time 1	Dec Time-1	0.00 ~ 6000.0	sec	2.00 <sup>Note 2)</sup>	Yes	
FUN_43	742B	Acceleration time 2	Acc Time-2	0.00 ~ 6000.0	sec	3.00 <sup>Note 2)</sup>	Yes	
FUN_44	742C	Deceleration time 2	Dec Time-2	0.00 ~ 6000.0	sec	3.00 <sup>Note 2)</sup>	Yes	
FUN_45	742D	Acceleration time 3	Acc Time-3	0.00 ~ 6000.0	sec	4.00 <sup>Note 2)</sup>	Yes	
FUN_46	742E	Deceleration time 3	Dec Time-3	0.00 ~ 6000.0	sec	4.00 <sup>Note 2)</sup>	Yes	
FUN_47	742F	Acceleration time 4	Acc Time-4	0.00 ~ 6000.0	sec	5.00 <sup>Note 2)</sup>	Yes	
FUN_48	7430	Deceleration time 4	Dec Time-4	0.00 ~ 6000.0	sec	5.00 <sup>Note 2)</sup>	Yes	
FUN_49	7431	Deceleration time selection for zero speed	Use 0 Dec T	0 (No) 1 (Yes)		0 (No)	Yes	6-45
FUN_50	7433	Deceleration time for zero speed	0 Dec Time	0.00 ~ 6000.00	sec	0.00	Yes	
FUN_52	7434	Deceleration time for emergency stop	BX Time	0.0 ~ 6000.0	sec	0.0	Yes	6-45
FUN_53	7435	Pre-excitation time	PreExt Time	0 ~ 10000	ms	0	No	6-46
FUN_54	7436	Hold Time	Hold Time	100 ~ 10000	ms	1000	No	
FUN_55	7437	Electronic thermal selection	ETH Select	0 (No) 1 (Yes)	-	0 (No)	Yes	6-45

## 5. Function Code Table

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
FUN_56	7438	Electronic thermal level for 1 minute	ETH 1 min	FUN_57 ~ 200	%	150	Yes	6-47
FUN_57	7439	Electronic thermal level for continuous	ETH Cont	50 ~ FUN_56 (up to 150%)	%	100	Yes	6-47
FUN_58	743A	Switching frequency select	PWM Freq	2.5 ~ 10.0 <sup>Note4)</sup>	kHz	Different according to the capacity of inverter	No	6-48
FUN_59	743B	Power on Run selection	Power-on Run	0 (No) 1 (Yes)	-	0 (No)	Yes	6-49
FUN_60	743C	Restart after fault reset	RST Restart	0 (No) 1 (Yes)	-	0 (No)	Yes	6-49
FUN_61	743D	Number of auto restart try	Retry Number	0 ~ 10	-	0	Yes	6-50
FUN_62	743E	Delay time before Auto restart	Retry Delay	0.0 ~ 60.0	sec	1.0	Yes	
FUN_63	743F	Wait time for Restart upon Stop	Restart Time <sup>Note5)</sup>	0.00 ~ 10.00	sec	0.00	No	6-51
FUN_64	7440	Overspeed error detection Level	OverSpdLevel	100.0 ~ 130.0	%	120.0	No	6-51
FUN_65	7441	Overspeed error detection Time	OverSpd Time	0.00 ~ 2.00	sec	0.00	No	
FUN_66	7442	Brake Open Time <sup>Note6)</sup>	BKOpen Time	0.01 ~ 30.00	sec	0.00	No	6-52
FUN_67	7443	Brake Open Speed <sup>Note6)</sup>	BKOpen Spd	0.0 ~ 500.0	rpm	0.0	No	
FUN_68	7444	Brake Open Current <sup>Note6)</sup>	Release Curr	0.0 ~ 150.0	%	20.0	No	
FUN_69	7445	Brake Close Time <sup>Note6)</sup>	BKClose Time	0.01 ~ 30.00	sec	0.00	No	
FUN_70	7446	Brake Close Speed <sup>Note6)</sup>	BKClose Spd	0.0 ~ 500.0	rpm	0.0	No	
FUN_71	7447	Selection for regeneration prevention	RegenAvd Sel	0 (No) / 1 (Yes)		0 (No)	No	
FUN_72	7448	Voltage level for regeneration prevention <sup>Note7)</sup>	RegenAvd Lvl	600(300) ~ 800(400)	V	700(350)	No	6-54
FUN_73	7449	Speed limit for regeneration prevention <sup>Note7)</sup>	CompFreq Lmt	0.0 ~ 500.0	rpm	100.0	No	
FUN_74	744A	Speed P gain for regeneration prevention <sup>Note7)</sup>	RegenAvd P	0.0 ~ 300.0	%	50.0	Yes	
FUN_75	744B	Speed I gain for regeneration prevention <sup>Note7)</sup>	RegenAvd I	20 ~ 30000	ms	500	Yes	
FUN_76	744C	Speed in battery-operated mode <sup>Note8)</sup>	Batt. Speed	2.5 ~ 200.0	rpm	50.0	No	6-54
FUN_77	744D	Battery input voltage <sup>Note8)</sup>	Batt. Volt	12 ~ PAR_18	V	48	No	
FUN_78	744E	Detection for input open-phase	PhInOpenChk	0 (No) / 1 (Yes)		0 (No)	No	6-56
FUN_79	7450	Detection level for input open-phase	PhInOpenLvl	2.0 ~ 100.0	V	3.0	Yes	6-56
FUN_80	7451	Detection for output open-phase	PhOutOpenChk	0 (No) / 1 (Yes)		0 (No)	No	5-56
FUN_81	7452	Command speed of max. auxiliary speed	AuxSpeedMax	0.0~500.0	rpm	10.0	Yes	6-56
FUN_82	7453	Calculation method of auxiliary speed	AuxSpeedType	0 ~ 1		0	No	6-56
FUN_83	7454	Acc. time of auxiliary speed	AuxAccTime	0.00 ~ 600.00	sec	2.00	No	6-56
FUN_84	7455	Dec. time of auxiliary speed	AuxDecTime	0.00 ~ 600.00	sec	2.00	No	6-56
FUN_85	7456	Absolute/Relative mode of auxiliary speed	AuxSpeedMode	0(Absolute) / 1(Relative)		0(Absolute)	No	6-56

1) Displayed when setting WEB Control Mode.

2) It is displayed when CON\_01 is Sensorless.

3) A default value of a time of acceleration and deceleration is different from the setting capacity of inverter. For detailed description, refer to Chapter 6 FUN\_41 ~ 48.

4) Minimum and maximum values are different from the capacity of inverter.

5) It is displayed when FUN\_03 (Stop mode) is Free-run.

6) Displayed when setting the definition of multi-aux output terminal (DIO\_41~DIO\_43) as "Brake Output".

7) It is displayed when FUN\_71 is Yes.

8) It can set for only 5.5 ~ 22 kW/2/4 products in case 'Battery Run' of multi-function input terminal (P1 ~ P&) is turned On.

5.5. Control group (CON\_[][])

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adj. During Run	PAGE
				Range	Unit	Default		
CON_00	-	Jump for quick view	Jump Code	1 ~ 80	-	-	Yes	6-57
CON_01	7501	Control mode setting	Control Mode	1 (Speed) 2 (Torque) 3 (Sensorless)	-	1 (Speed)	No	
CON_02	-	Application mode setting	Application	General Vect Elevator <sup>1)</sup> Synchro <sup>2)</sup> WEB Control	-	General Vect	No	
CON_03	7503	ASR P Gain 1	ASR P Gain1	0.1 ~ 200.0	%	50.0	Yes	6-58
CON_04	7504	ASR I Gain 1	ASR I Gain1	0 ~ 50000	ms	300	Yes	
CON_05	7505	ASR LPF time constant 1	ASR LPF1	0 ~ 20000	ms	0	Yes	
CON_06	7506	ASR P Gain 2	ASR P Gain2	0.1 ~ 200.0	%	5.0	Yes	
CON_07	7507	ASR I Gain 2	ASR I Gain2	0 ~ 50000	ms	3000	Yes	
CON_08	7508	ASR LPF time constant 2	ASR LPF2	0 ~ 20000	ms	0	Yes	
CON_09	7509	Ramp time for ASR gain switch-over	ASR RAMP	10 ~ 10000	ms	1000	Yes	6-58
CON_10	750A	Target Speed after ASR gain switch-over	ASR TarSpd	0.0 ~ 3600.0	rpm	0.0	No	
CON_11	750B	Process PID reference (keypad)	Proc PID Ref	-100.0 ~ 100.0	%	0.0	Yes	6-60
CON_12	750C	Process PID ramp time	PID Ramp	0.00 ~ 600.0	sec	0.00	No	-
CON_14	750E	Process PID P gain	Proc PID Kp	0.0 ~ 999.9	%	0.0	Yes	6-61
CON_15	750F	Process PID I gain	Proc PID Ki	0.0 ~ 100.0	%	0.0	Yes	
CON_16	7510	Process PID D gain	PROC PID Kd	0.0 ~ 100.0	%	0.0	Yes	
CON_17	7511	Process PID Positive limit	Proc Pos Lmt	-100.0 ~ 100.0	%	100	Yes	
CON_18	7512	Process PID Negative limit	Proc Neg Lmt	-100.0 ~ 100.0	%	100	Yes	
CON_19	7513	Process PID output LPF time constant	Proc Out LPF	0 ~ 500	ms	0	Yes	
CON_20	7514	Process PID output gain	Proc OutGain	-250.0 ~ 250.0	%	0.0	Yes	
CON_21	7515	Process PID type	Proc PID Src	0 (Base Speed) 1 (Ref Speed) 2 (SpeedSet)		0 (Base Speed)	No	
CON_22	7516	Speed Set setting <sup>Note3)</sup>	PID SpeedSet	1.00 ~ FUN_04	rpm	100.0	No	
CON_23	7517	Process PID output Enable	Proc PID Enb	0 (Disable) 1 (Enable) 2 (Terminal)	-	0 (Disable)	No	
CON_24	7518	Process PID Hold Time	PIDHoldTime	0 ~ 10000	ms	5000	No	6-62
CON_25	7519	Draw quantity	Draw %	-100.0 ~ 100.0	%	0.0	Yes	6-63
CON_26	751A	Droop quantity	Droop %	0.0 ~ 100.0	%	0.0	Yes	6-64
CON_27	751B	Base speed of Droop control	Droop Src	0 (Base Speed) 1 (Ref Speed)		1 (Ref Speed)	No	
CON_28	751C	Ramp time of Droop control	Droop Time	0.00 ~ 600.0	sec	2.00	Yes	
CON_29	751D	Low speed limit of Droop control	Droop MinSpd	0.0 ~ 3600.0	rpm	0.0	Yes	
CON_30	751E	Starting torque of Droop control	Droop MinTrq	0.0 ~ 100.0	%	0.0	Yes	
CON_31	751F	Torque reference source selection	Trq Ref Src	0 (None) 1 (Analog) 2 (Keypad) 3 (Option) 4 (Int485)	-	0 (None)	No	6-65
CON_32	7520	Torque Reference(keypad)	Torque Ref	-180.0 ~ 180.0	%	0.0	Yes	6-67
CON_33	7521	Torque limit source selection	Trq Lmt Src	0 (Kpd Kpd Kpd) 1 (Kpd Kpd Ax) 2 (Kpd Ax Kpd) 3 (Kpd Ax Ax) 4 (Ax Kpd Kpd) 5 (Ax Kpd Ax) 6 (Ax Ax Kpd) 7 (Ax Ax Ax) 8 (Opt Opt Opt)	-	0 (Kpd Kpd Kpd)	No	

## 5. Function Code Table

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adj. During Run	PAGE
				Range	Unit	Default		
				9 (485 485 485)				
CON_34	7522	Torque limit in forward run	Pos Trq Lmt	0.0 ~ 250.0	%	150.0	Yes	
CON_35	7523	Torque limit in reverse run	Neg Trq Lmt	0.0 ~ 250.0	%	150.0	Yes	
CON_36	7524	Torque limit in regeneration	Reg Trq Lmt	0.0 ~ 250.0	%	150.0	Yes	
CON_37	7525	Torque Bias source selection	Trq Bias Src	0 (None) 1 (Analog) 2 (Keypad) 3 (Option) 4 (Int485)		0 (None)	No	6-66
CON_38	7526	Torque Bias quantity	Trq Bias	-150.0 ~ 150.0	%	0.0	Yes	
CON_39	7527	Torque bias feedforward	Trq Bias FF	-150.0 ~ 150.0	%	0.0	Yes	6-67
CON_40	7528	Torque Balance quantity	Trq Balance	0.0 ~ 100.0	%	50.0	Yes	6-66
CON_54	7536	Speed search setting	Speed Search	0000 ~ 1111 (bit setting)	-	0100	No	6-69
CON_75	754B	Speed search time <sup>Note4)</sup>	SS Time	10 ~ 60000	ms	300	No	
CON_76	754C	Speed search P gain <sup>Note4)</sup>	SS P Gain	1.0 ~ 300.0	%	100.0	Yes	6-69
CON_77	754D	Speed search I gain <sup>Note4)</sup>	SS I Gain	1.0 ~ 300.0	%	100.0	Yes	
CON_78	754E	Speed search LPF <sup>Note4)</sup>	SS LPF	0.1 ~ 300.0	ms	33.3	Yes	
CON_79	754F	Speed limit of speed/torque switching	Spd Lmt Src	0.1 ~ Max Speed	rpm	1800.0	No	6-68
CON_80	7550	Speed bias speed/torque switching	SpdLmtBias	100.0 ~ Max Speed	rpm	100.0	No	

- 1) Displayed only when the E/L\_IO board is installed.  
2) Displayed only when the SYNC\_IO board is installed.  
3) It is displayed when CON\_21 (Proc PID Src) is SpeedSet.  
4) It is displayed when CON\_01 is Sensorless.

### 5.6. User group (USR\_[ ] [ ])

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
USR_00	-	Select Code number	Jump Code	1 ~ 67 <sup>Note1)</sup>	-	-	Yes	
USR_01	-	Initialize to the initial value adequate to the application	Macro Init	User Define E/L	-	User Define	No	6-70
USR_02	-	User data save	User Save	No / Yes	-	No	No	
USR_03	-	Recall saved User Data.	User Recall	No / Yes	-	No	No	
USR_04	-	User Group Data	User Grp	-	-	-	No	6-71

- 1) Maximum value is available only user code registered within USR\_04 ~ USR\_67.

## 5.7. Second motor function (2nd\_[][])

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
2nd_00	-	Jump for quick view	Jump Code	1 ~ 37	-	-	Yes	6-72
2nd_01	7801	2 <sup>nd</sup> motor Control mode setting	2nd Ctl Mode	1 (Speed) 2 (Torque)	-	1 (Speed)	No	
2nd_02	7802	Max. speed of 2 <sup>nd</sup> motor	2nd Max Spd	400.0 ~ 3600.0	rpm	1800.0	No	
2nd_04	7804	Multi-step speed 0 of 2 <sup>nd</sup> motor	2nd Spd 0	0.0 ~ 2nd_02	rpm	0.0	Yes	
2nd_05	7805	2 <sup>nd</sup> motor S ratio 1 in acceleration start	2nd Acc S St	0.0 ~ 50.0	%	0.0	No	6-73
2nd_06	7806	2 <sup>nd</sup> motor S ratio 2 in acceleration end	2nd Acc S Ed	0.0 ~ 50.0	%	0.0	No	
2nd_07	7807	2 <sup>nd</sup> motor S ratio 1 in deceleration start	2nd Dec S St	0.0 ~ 50.0	%	0.0	No	
2nd_08	7808	2 <sup>nd</sup> motor S ratio 2 in deceleration end	2nd Dec S Ed	0.0 ~ 50.0	%	0.0	No	
2nd_09	7809	Acc./Dec. time scale of 2 <sup>nd</sup> motor	Time Scale 2	0 (0.01 sec) 1 (0.1 sec)		0 (0.01 sec)	No	
2nd_10	780A	Acceleration time of 2 <sup>nd</sup> motor	2nd Acc time	0.00 ~ 6000.0	sec	10.00	Yes	
2nd_11	780B	Deceleration time of 2 <sup>nd</sup> motor	2nd Dec time	0.00 ~ 6000.0	sec	10.00	Yes	
2nd_12	780C	Cooling method of 2 <sup>nd</sup> motor	2nd Cool Mtd	0 (Self-cool) 1 (Forced-cool)	-	1 (Forced-cool)	Yes	
2nd_13	780D	Encoder pulse no. of 2 <sup>nd</sup> motor	2nd Enc #	360 ~ 4096	-	1024	No	
2nd_14	780E	Encoder direction setting of 2 <sup>nd</sup> motor	2nd Enc Dir	0 (A Phase Lead) 1 (B Phase Lead)	-	0 (A Phase Lead)	No	
2nd_15	780F	Encoder error check enable of 2 <sup>nd</sup> motor	2nd Enc chk	0 (No) 1 (Yes)	-	1 (Yes)	No	
2nd_16	7810	Encoder LPF time constant of 2 <sup>nd</sup> motor	2nd Enc LPF	0 ~ 100	ms	1	Yes	
2nd_18	7812	Base speed of 2 <sup>nd</sup> motor	2nd BaseSpd	300.0 ~ 3600.0	rpm	1800.0	No	
2nd_19	7813	2 <sup>nd</sup> motor selection	Motor select	0(22) 1(37) 2(55) 3(75) 4(110) 5(150) 6(185) 7(220) 8(300) 9(370) 10(450) 11(550) 12(750) 13(900) 14(1100) 15(1320) 16(1600) 17(2200) 18(2800) 19(3150) 20(3750) 21 (User Define) <sup>(Note1)</sup>	kW	2 (5.5)	No	
2nd_20	7814	Motor selection of 2nd motor	UserMotorSel <sup>(Note1)</sup>	0.7 ~ 500	kW	5.5	No	
2nd_21	7815	Rated voltage of 2 <sup>nd</sup> motor	2nd R-Volt	120 ~ 560	V	220	No	
2nd_22	7816	2 <sup>nd</sup> motor number of poles	2nd Pole #	2 ~ 12	-	4	No	
2nd_23	7817	Efficiency of 2 <sup>nd</sup> motor	2nd Mot Eff.	70 ~ 100	%	-	Yes	
2nd_24	7818	Rated slip of 2 <sup>nd</sup> motor	2nd R-Slip	10 ~ 250	rpm	-	Yes	
2nd_25	7819	Rated current of 2 <sup>nd</sup> motor	2nd R-Curr	1.0 ~ 1000.0	A	-	Yes	
2nd_26	781A	Flux current of 2 <sup>nd</sup> motor	2nd Flx Cur	0.0 ~ 70% of 2nd_25	A	-	Yes	
2nd_27	781B	Rotor time constant of 2 <sup>nd</sup> motor	2nd Mot Tr	30 ~ 3000	ms	-	Yes	
2nd_28	781C	Leakage inductance of 2 <sup>nd</sup> motor	2nd Mot Ls	0.00 ~ 500.00	mH	-	Yes	
2nd_29	781D	Leakage coefficient of 2 <sup>nd</sup> motor	2nd Mot sLs	0.00 ~ 300.00	mH	-	Yes	
2nd_30	781E	Stator resistance Of 2 <sup>nd</sup> motor	2nd Mot Rs	0.000 ~ 15.000	ohm	-	Yes	

## 5. Function Code Table

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
2nd_35	7823	Electronic thermal level for 1 minute of 2 <sup>nd</sup> motor <small>Note2)</small>	2nd ETH 1min	100 ~ 150	%	150	Yes	6-74
2nd_36	7824	Electronic thermal continuous level of 2 <sup>nd</sup> motor <small>Note2)</small>	2nd ETH cont	50 ~ 2nd_35 (Only available to 150%)	%	100	Yes	
2nd_37	7825	Inertia coefficient <small>Note3)</small>	Inertia	0.001 ~ 60.000	kg · m <sup>2</sup>	0.072	Yes	

1) 2nd\_20 (UserMotorSel) is displayed when 2nd\_19 (Motor select) is User Define.

2) It is displayed when FUN\_55 ETH Select is Yes.

3) Factory default value is changed according to the motor capacity set in 2nd\_19.

## 5.8. Option Group (EXT\_[][])

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
EXT_00	-	Select code number	Jump Code	1 ~ 99			Yes	※7)
EXT_01	7601	Option board type	Opt B/D	0 (None) 1 (DeviceNet) 2 (Synchro) 3 (PLC-GF) 4 (PROFIBUS) 6 (RS485) <sup>Note1)</sup> 7 (MODBUS)		0 (None)	No	Note7)
EXT_02	7602	Option board version	Opt Version	1.0 ~	Ver --		No	Note7)
EXT_03	7603	Station ID in communication	Station ID <sup>Note2)</sup>	0 ~ 63		1	Yes	Note7)
EXT_04	7604	Baud rate of deviceNet	Baud Rate <sup>Note3)</sup>	0 (125) 1 (250) 2 (500)	kbps	0 (125)	Yes	Note7)
EXT_05	7605	DeviceNet MAC ID	MAC ID <sup>Note3)</sup>	0 ~ 63		63	Yes	Note7)
EXT_06	7606	Read object setting of DeviceNet	Out Instance <sup>Note3)</sup>	0 (20) 1 (21) 2 (100) 3 (101)		0 (20)	No	Note7)
EXT_07	7607	Write object setting of DeviceNet	In Instance <sup>Note3)</sup>	0 (70) 1 (71) 2 (110) 3 (111)		0 (70)	No	Note7)
EXT_09	7609	Profibus MAC ID	Profi MAC ID	1 ~ 127		1	Yes	Note7)
EXT_10	760A	Number of option output	Output Num	0 ~ 8 <sup>Note5)</sup>		3	Yes	Note7)
EXT_11	760B	Option output 1	Output 1 <sup>Note5)</sup>	0000 ~ FFFF	HEX	0020	Yes	Note7)
EXT_12	760C	Option output 2	Output 2 <sup>Note5)</sup>	0000 ~ FFFF	HEX	000E	Yes	Note7)
EXT_13	760D	Option output 3	Output 3 <sup>Note5)</sup>	0000 ~ FFFF	HEX	000F	Yes	Note7)
EXT_14	760E	Option output 4	Output 4 <sup>Note5)</sup>	0000 ~ FFFF	HEX	000A	Yes	Note7)
EXT_15	760F	Option output 5	Output 5 <sup>Note5)</sup>	0000 ~ FFFF	HEX	0000	Yes	Note7)
EXT_16	7610	Option output 6	Output 6 <sup>Note5)</sup>	0000 ~ FFFF	HEX	0000	Yes	Note7)
EXT_17	7611	Option output 7	Output 7 <sup>Note5)</sup>	0000 ~ FFFF	HEX	0000	Yes	Note7)
EXT_18	7612	Option output 8	Output 8 <sup>Note5)</sup>	0000 ~ FFFF	HEX	0000	Yes	Note7)
EXT_19	7613	Number of option input	Input Num	0 ~ 8 <sup>Note6)</sup>		2	Yes	Note7)
EXT_20	7614	Option input 1	Input 1 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0502	No	Note7)
EXT_21	7615	Option input 2	Input 2 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0500	No	Note7)
EXT_22	7616	Option input 3	Input 3 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0000	No	Note7)
EXT_23	7617	Option input 4	Input 4 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0000	No	Note7)
EXT_24	7618	Option input 5	Input 5 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0000	No	Note7)
EXT_25	7619	Option input 6	Input 6 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0000	No	Note7)
EXT_26	761A	Option input 7	Input 7 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0000	No	Note7)
EXT_27	761B	Option input 8	Input 8 <sup>Note6)</sup>	0000 ~ FFFF	HEX	0000	No	Note7)
EXT_30	761E	485 communication mode	Parity/Stop <sup>Note1)</sup>	0 (8None/1Stop) 1 (8None/2Stop) 2 (8Even/1Stop) 3 (8Odd/1Stop)		0 (8None/1Stop)	Yes	Note7)
EXT_31	761F	Response delay time of 485 communication	Delay Time <sup>Note1)</sup>	2 ~ 1000	ms	5	Yes	Note7)

## 5. Function Code Table

CODE NO.	Comm. Addr	CODE NAME	LCD DISPLAY	SETTING DATA			Adjustment During Run	PAGE
				RANGE	UNIT	DEFAULT		
EXT_32	7620	Station ID of built-in 485	Int485 St ID	1 ~ 250		2	Yes	Note7)
EXT_33	7621	Baudrate of built-in 485	Int485 Baud	0 (1200 bps) 1 (2400 bps) 2 (4800 bps) 3 (9600 bps) 4 (19200 bps) 5 (38400 bps)		3 (9600 bps)	Yes	Note7)
EXT_34	7622	Built-in 485 communication mode	Int485 Mode	0 (8None/1Stop) 1 (8None/2Stop) 2 (8Even/1Stop) 3 (8Odd/1Stop)			Yes	Note7)
EXT_35	7623	Response delay time of built-in 485 communication	Int485 Delay	2 ~ 1000		0 (None)	Yes	Note7)
EXT_36	7624	Operation method in case of built-in 485 command lost	Int485 LostC	0 (None) 1 (FreeRun) 2 (Stop)			Yes	Note7)
EXT_37	7625	Decision time of built-in 485 command lost	Int485 LostT	1.0 ~ 30.0			Yes	Note7)
EXT_99	7663	Update of communication parameter	Comm UpDate <small>Note4)</small>	0 (No) / 1 (Yes)		0 (No)	No	Note7)

- 1) It is displayed when option board of RS485 communication is mounted.
- 2) It is displayed when option board of PLC-GF is mounted.
- 3) It is displayed when option board of DeviceNet is mounted.
- 4) It is displayed when option board of Profibus is mounted.
- 5) EXT\_11 ~ EXT\_18 codes are displayed according to the value of EXT\_10.
- 6) EXT\_20 ~ EXT\_27 codes are displayed according to the value of EXT\_19.
- 7) Please refer to the user manual for communication option board.

5.9. Analog AIO Group (AIO\_[][])

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
AIO_00	-	Select code number	Jump Code	1 ~ 81	-	-	Yes	6-75
AIO_01	7701	Multi-function Analog input Ai1 definition	Ai1 Define	00 (Not Used) 01 (Speed Ref) 02 (Aux Spd Ref) 03 (Proc PID Ref) 04 (Proc PID F/B) 05 (Draw Ref) 06 (Torque Ref) 07 (Flux Ref) 08 (Torque Bias) 09 (Torque Limit) 10 (Line SPD Ref) <sup>1)</sup> 11 (Tension Ref) <sup>1)</sup> 12 (Dancer Ref) <sup>1)</sup> 13 (Taper Ref) <sup>1)</sup> 14 (Tension F/B) <sup>1)</sup> 15 (Diameter) <sup>1)</sup> 16 (Diam Preset) <sup>1)</sup>	-	0 (Not Used)	No	
AIO_02	7702	Multi-function Analog input Ai1 Source definition	Ai1 Source	0 (-10 → 10V) 1 (10 → -10V) 2 (0 → 10V) 3 (10 → 0V) 4 (0 → 20mA) 5 (20 → 0mA)	-	0 (-10 → 10V)	No	
AIO_03	7703	Multi-function Analog input Ai1 Minimum Voltage	Ai1 In X1	AIO_07~ AIO_05	%	0.00	Yes	
AIO_04	7704	Multi-function Analog input Ai1 Minimum Voltage Bias	Ai1 Out Y1	AIO_08 ~ AIO_06	%	0.00	Yes	
AIO_05	7705	Multi-function Analog input Ai1 Maximum Voltage	Ai1 In X2	0.00 ~ 100.00	%	100.00	Yes	
AIO_06	7706	Multi-function Analog input Ai1 Maximum Voltage Gain	Ai1 Out Y2	0.00 ~ 250.00	%	100.00	Yes	
AIO_07	7707	Multi-function Analog input Ai1 -Minimum Voltage	Ai1 -In X1	AIO_09~ AIO_03	%	0.00	Yes	
AIO_08	7708	Multi-function Analog input Ai1 -Minimum Voltage Bias	Ai1 -Out Y1	AIO_10~ AIO_04	%	10.00	Yes	
AIO_09	7709	Multi-function Analog input Ai1-Maximum Voltage	Ai1 -In X2	-100.00 ~ 0.00	%	-100.00	Yes	
AIO_10	770A	Multi-function Analog input Ai1-Maximum Voltage Gain	Ai1 -Out Y2	-250.00 ~ 0.00	%	-100.00	Yes	
AIO_11	770B	Ai1 input LPF time constant	Ai1 LPF	0 ~ 2000	ms	-	-	
AIO_12	770C	Multi-function Analog input Ai1 command loss Criterion select	Ai1 Wbroken	0 (None) 1 (Half of x1) 2 (Below x1)	-	0 (None)	No	
AIO_13	770D	Multi-function Analog input Ai2 Definition	Ai2 Define	Refer to AIO_01~12			-	
AIO_14	770E	Multi-function Analog input Ai2 Source definition	Ai2 Source				-	
AIO_15	770F	Multi-function Analog input Ai2 Minimum Voltage	Ai2 In X1				-	
AIO_16	7710	Multi-function Analog input Ai2 Minimum Voltage Bias	Ai2 Out Y1				-	
AIO_17	7711	Multi-function Analog input Ai2 Maximum Voltage	Ai2 In X2				-	

## 5. Function Code Table

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
AIO_18	7712	Multi-function Analog input Ai2 Maximum Voltage Gain	Ai2 Out Y2				-	-
AIO_19	7713	Multi-function Analog input Ai2 -Minimum Voltage	Ai2 -In X1				-	-
AIO_20	7714	Multi-function Analog input Ai2 -Minimum Voltage Bias	Ai2 -Out Y1				-	-
AIO_21	7715	Multi-function Analog input Ai2 -Maximum Voltage	Ai2 -In X2				-	-
AIO_22	7716	Multi-function Analog input Ai2 -Maximum Voltage Gain	Ai2 -Out Y2				-	-
AIO_23	7717	Ai2 input LPF time constant	Ai2 LPF				-	-
AIO_24	7718	Multi-function Analog input Ai2 loss command Criterion select	Ai2 Wbroken				-	-
AIO_25	7719	Multi-function Analog input Ai3 Definition	Ai3 Define	Refer to AIO_01 Possible to select NTC motor 17 (Use Mot PTC)		0 (Not Used)	No	-
AIO_26	771A	Multi-function Analog input Ai3 Source Definition	Ai3 Source	0 (-10 → 10V) 1 (10 → -10V) 2 (0 → 10V) 3 (10 → 0V)	-	0 (-10 → 10V)	No	-
AIO_27	771B	Multi-function Analog input Ai3 Minimum Voltage	Ai3 In X1				-	-
AIO_28	771C	Multi-function Analog input Ai3 Minimum Voltage Bias	Ai3 Out Y1				-	-
AIO_29	771D	Multi-function Analog input Ai3 Maximum Voltage	Ai3 In X2				-	-
AIO_30	771E	Multi-function Analog input Ai3 Maximum Voltage Gain	Ai3 Out Y2				-	-
AIO_31	771F	Multi-function Analog input Ai3 -Minimum Voltage	Ai3 -In X1				-	-
AIO_32	7720	Multi-function Analog input Ai3 -Minimum Voltage Bias	Ai3 -Out Y1	Refer to AIO_03~12			-	-
AIO_33	7721	Multi-function Analog input Ai3 -Maximum Voltage	Ai3 -In X2				-	-
AIO_34	7722	Multi-function Analog input Ai3 -Maximum Voltage Gain	Ai3 -Out Y2				-	-
AIO_35	7723	Ai3 input LPF time constant	Ai3 LPF				-	-
AIO_36	7724	Multi-function Analog input Command loss criterion select	Ai3 Wbroken				-	-
AIO_37	7725	Multi-function Analog input Ai4 Definition <sup>2)</sup>	Ai4 Define				-	-
AIO_38	7726	Multi-function Analog input Ai4 Source Definition <sup>2)</sup>	Ai4 Source	Refer to AIO_01~12			-	-
AIO_39	7727	Multi-function Analog input Ai4 Minimum Voltage <sup>2)</sup>	Ai4 In X1				-	-

## 5. Function Code Table

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
AIO_40	7728	Multi-function Analog input Ai4 Minimum Voltage Bias <sup>2)</sup>	Ai4 Out Y1				-	
AIO_41	7729	Multi-function Analog input Ai4 Maximum Voltage <sup>2)</sup>	Ai4 In X2				-	
AIO_42	772A	Multi-function Analog input Ai4 Maximum Voltage Gain <sup>2)</sup>	Ai4 Out Y2				-	
AIO_43	772B	Multi-function Analog input Ai4 -Minimum Voltage <sup>2)</sup>	Ai4 -In X1				-	
AIO_44	772C	Multi-function Analog input Ai4 -Minimum Voltage Bias <sup>2)</sup>	Ai4 -Out Y1				-	
AIO_45	772D	Multi-function Analog input Ai4 -Maximum Voltage <sup>2)</sup>	Ai4 -In X2				-	
AIO_46	772E	Multi-function Analog input Ai4 -Maximum Voltage Gain <sup>2)</sup>	Ai4 -Out Y2				-	
AIO_47	772F	Ai4 output LPF time constant <sup>2)</sup>	Ai4 LPF				-	
AIO_48	7730	Multi-function Analog input Ai4 command loss criterion select <sup>2)</sup>	Ai4 Wbroken				-	
AIO_49	7731	Multi-function Analog input Ai5 Definition <sup>2)</sup>	Ai5 Define	Refer to AIO_01 When using EXTN_I/O motor NTC function is available at Ai5 17 (Use Mot PTC)		0 (Not Used)	No	-
AIO_50	7732	Multi-function Analog input Ai5 Source Definition <sup>2)</sup>	Ai5 Source	0 (-10 → 10V) 1 (10 → -10V) 2 (0 → 10V) 3 (10 → 0V)	-	0 (-10 → 10V)	No	-
AIO_51	7733	Multi-function Analog input Ai5 Minimum Voltage <sup>2)</sup>	Ai5 In X1				-	
AIO_52	7734	Multi-function Analog input Ai4 Minimum Voltage Bias <sup>2)</sup>	Ai5 Out Y1				-	
AIO_53	7735	Multi-function Analog input Ai5 Maximum Voltage <sup>2)</sup>	Ai5 In X2				-	
AIO_54	7736	Multi-function Analog input Ai5 Maximum Voltage Gain <sup>2)</sup>	Ai5 Out Y2				-	
AIO_55	7737	Multi-function Analog input Ai5 -Minimum Voltage <sup>2)</sup>	Ai5 -In X1				-	
AIO_56	7738	Multi-function Analog input Ai5 -Minimum Voltage Bias <sup>2)</sup>	Ai5 -Out Y1				-	
AIO_57	7739	Multi-function Analog input Ai5 -Maximum Voltage <sup>2)</sup>	Ai5 -In X2				-	
AIO_58	773A	Multi-function Analog input Ai5 -Maximum Voltage Gain <sup>2)</sup>	Ai5 -Out Y2				-	
AIO_59	773B	Ai5 input LPF time constant <sup>2)</sup>	Ai5 LPF				-	
AIO_60	773C	Multi-function Analog input Ai5 command loss criterion select <sup>2)</sup>	Ai5 Wbroken				-	

Refer to AIO\_03~12

## 5. Function Code Table

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
AIO_73	7749	Multi-function Analog input command loss time	Time out	0.1 ~ 120.0	sec	1.0	No	6-79
AIO_74	774A	Multi-function analog Output AO1 Definition	AO1 Define	0 (Not Used)		0 (Not Used)	No	6-81
				1 (Ai1 Value)				
				2 (Ai2 Value)				
				3 (Ai3 Value)				
				4 (Ai4 Value) <sup>2)</sup>				
				5 (Ai5 Value) <sup>2)</sup>				
				7 (PreRamp Ref)				
				8 (PostRamp Ref)				
				9 (ASR Inp Ref)				
				11 (Motor Speed)				
				12 (Motor Spd Est) <sup>3)</sup>				
				13 (Speed Dev)				
				14 (ASR Out)				
				15 Torque Bias				
				16 (PosTrq Limit)				
				17 (NegTrq Limit)				
				18 (RegTrq Limit)				
				19 (Torque Ref)				
				20 (IqeRef)				
				21 (Iqe)				
				22 (Flux Ref)				
23 (IdeRef)								
24 (Ide)								
25 (ACR_Q Out)								
26 (ACR_D Out)								
27 (VdeRef)								
28 (VqeRef)								
29(Out Amps RMS)								
30 (Out Volt RMS)								
31 (Power)								
32 (DC Bus Volt)								
33 (Proc PID Ref)								
34 (PROC PID F/B)								
35 (Proc PID Out)								
36 (Line Speed) <sup>1)</sup>								
37 (Tension Out) <sup>1)</sup>								
38 (Diameter) <sup>1)</sup>								
39 (MotNTC Temp)								
40 (Inv Temp)								
41 (Inv i2t)								
AIO_75	774B	Multi-function Analog Output AO1 Source Definition	AO1 Source	0 (-10 → 10V) 1 (10 → -10V) 2 (0 → 10V) 3 (10 → 0V)	-	0 (-10 → 10V)	No	6-81
AIO_76	774C	Multi-function Analog Output AO1 Bias	AO1 Bias	0.0 ~ AIO_77	%	0.0	No	
AIO_77	774D	Multi-function Analog Output AO1 Gain	AO1 Gain	0.0 ~ 500.0	%	100.0	No	
AIO_78	774E	Multi-function Analog Output AO1 (-) Bias	AO1 -Bias	AIO_79 ~ 0.0	%	0.0	Yes	
AIO_79	774F	Multi-function Analog Output AO1 (-) Gain	AO1 -Gain	0.0 ~ -500.0	%	-100.0	Yes	
AIO_80	774E	Multi-function Analog Output AO1 absolute value setting	AO1 ABS	0 (No) 1 (Yes)	-	0 (No)	No	
AIO_81	774F	Multi-function Analog Output AO2 Definition	AO2 Define	AIO_74~78 참조			-	-
AIO_82	7750	Multi-function Analog Output AO2 Source Definition	AO2 Source				-	-
AIO_83	7751	Multi-function Analog Output AO2 Bias	AO2 Bias				-	-
AIO_84	7752	Multi-function Analog Output AO2 Gain	AO2 Gain				-	-

## 5. Function Code Table

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
AIO_83	7751	Multi-function Analog Output AO2 (-) Bias	AO2 Bias				-	
AIO_84	7752	Multi-function Analog Output AO2 (-) Gain	AO2 Gain				-	
AIO_85	7753	Multi-function Analog Output AO2 absolute value setting	AO2 ABS				-	

- 1) It is displayed when WEB mode setting.
- 2) It only comes under using EXTN\_I/O.
- 3) It is displayed when CON\_01 is Sensorless.

5.10. Sensorless Control Group (SLS\_[ ] [ ]) <sup>Note1</sup>

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Range	Range		
SLS_00		Select code number	Jump Code	1 ~ 23			Yes	6-84
SLS_01	7D01	Flux establishment time in sensorless control	Flux BD Time	100 ~ 60000	ms	500	Yes	6-85
SLS_02	7D02	Flux observer P gain	FlxEst PGain	0.1 ~ 999.9	%	100.0	Yes	
SLS_03	7D03	Flux observer I gain	FlxEst IGain	0.0 ~ 999.9	%	100.0	Yes	
SLS_04	7D04	Cut-off frequency of Sensorless ASR	ASR Cut-Off	1.0 ~ 600.0		20.0	Yes	
SLS_05	7D05	P gain 1 of sensorless ASR	ASR P Gain1	0.1 ~ 999.9	%	100.0	Yes	
SLS_06	7D06	I gain 1 of sensorless ASR	ASR I Gain1	0.1 ~ 999.9	%	100.0	Yes	
SLS_07	7D07	LPF 1 of sensorless ASR	ASR LPF1	0 ~ 20000	ms	0	Yes	
SLS_08	7D08	P gain 2 of sensorless ASR	ASR P Gain2	0.1 ~ 999.9	%	50.0	Yes	
SLS_09	7D09	I gain 2 of sensorless ASR	ASR I Gain2	0.1 ~ 999.9	%	50.0	Yes	
SLS_10	7D0A	LPF 2 of sensorless ASR	ASR LPF2	0 ~ 20000	ms	0	Yes	
SLS_11	7D0B	Gain switching lamp of sensorless ASR	ASR RAMP	10 ~ 10000	ms	1000	Yes	
SLS_12	7D0C	Target speed of sensorless ASR	ASR TarSpd	0.0 ~ 3600.0	rpm	0.0	No	
SLS_13	7D0D	P gain of flux observer	SpdEst PGain	0.1 ~ 999.9	%	100.0	Yes	
SLS_14	7D0E	I gain of flux observer	SpdEst IGain	0.1 ~ 999.9	%	100.0	Yes	
SLS_15	7D0F	Cut-off frequency of sensorless ACR	ACR Cut-off	10.0 ~ 3000.0		1200.0	Yes	
SLS_16	7D10	Regeneration avoidance selection	ZeroAvd Sel	0 (No) / 1 (Yes)		1 (Yes)	No	
SLS_17	7D11	P gain of sensed speed controller	SensoredKp	0 ~ 10.0000		0.0000	No	
SLS_18	7D12	I gain of sensed speed controller	SensoredKi	0 ~ 10.0000		0.0000	No	
SLS_19	7D13	P gain of sensorless speed controller	SensorlessKp	0 ~ 10.0000		0.0000	No	
SLS_20	7D14	I gain of sensorless speed controller	SensorlessKi	0 ~ 10.0000		0.0000	No	
SLS_21	7D15	Flux observer reference	FluxEst Ref	0.0000 ~ 6.5535		0.0000	No	
SLS_22	7D16	Flux observer feedback	FluxEst Fbk	0.0000 ~ 6.5535		0.0000	No	
SLS_23	7D17	Rs scale	Rs Scale	100.0 ~ 200.0	%	120.0	Yes	


Note1) This group is displayed when CON\_01 is Sensorless.

## Chapter 6 – Function Description

### 6.1 Display Group (DIS\_[][])

#### 6.1.1 DIS\_00 (Motor control status monitoring)

Displayed when Power ON.

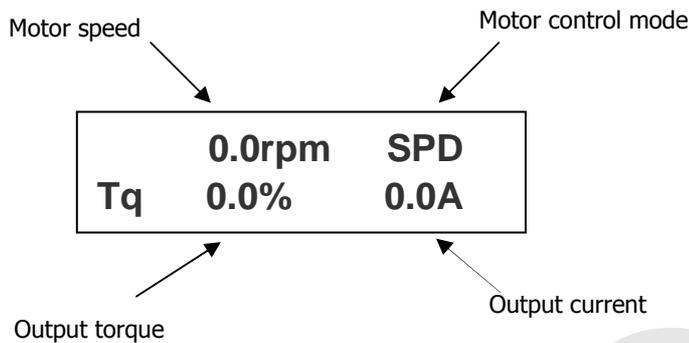

Code	Parameter name	Unit	Description
DIS_00	Motor speed	rpm	Actual motor rotating speed displayed in rpm.
	Motor control mode		SPD : Speed control mode TRQ : Torque control mode WEB : WEB control mode SLS : Sensorless control mode BX : Emergency stop display BAT : Battery-operated mode
	Output torque	%	100% = Rated torque of motor
	Inverter output current	A	Inverter actual output current displayed

#### 6.1.2 DIS\_01 ~ 03 (User display 1, 2, 3)

Select one of the followings each to be displayed in DIS\_01, 02 and 03.

Factory default: **DIS\_01**= " PreRamp Ref ", **DIS\_02**= "DC Bus Volt", **DIS\_03**= " Terminal In "

Code	Parameter name	LCD display	Unit	Description
DIS_01 ~ DIS_03	Ai1 Value ~ Ai3 Value *1	Ai1 Value ~ Ai3 Value	%	Displayed as the percentage of multi-function analog input value (10V / 100%, 20mA / 100%)
	Pre Ramp Reference	PreRamp Ref	rpm	Speed reference before Acc./dec. routine
	Post ramp reference	PostRamp Ref	rpm	Speed reference after Acc./dec. routine
	ASR Input Reference	ASR Inp Ref	rpm	Final speed reference input value to ASR (Automatic Speed Regulator) displayed (Draw and Droop included)
	Motor Rotating Speed	Motor Speed	rpm	Actual motor rotating speed
	Speed of revolution about motor estimated	Motor SpdEst	rpm	Estimated motor speed of revolution (in sensorless control mode)
	Speed Deviation	Speed Dev	rpm	Deviation between speed ref and actual rotating speed
	ASR Output	ASR Out	%	ASR output to rated torque
	Torque bias	Torque Bias	%	Torque bias to rated torque

## 6. Function Description


Code	Parameter name	LCD display	Unit	Description							
DIS_01 ~ DIS_03	Positive Trq Limit	Pos Trq Limit	%	Positive torque limit to rated torque							
	Negative Trq Limit	Neg Trq Limit	%	Negative torque limit to rated torque							
	Regeneration Trq Limit	Reg Trq Limit	%	Regeneration torque limit to rated torque							
	Torque Reference	Torque Ref	%	Torque reference to rated torque							
	Torque current ref.	IqeRef	%	Torque current reference to rated torque current							
	Torque current	Iqe	%	Actual torque current to rated torque current							
	Flux reference	Flux Ref	%	Flux reference to the rated flux							
	Flux Current ref.	IdeRef	%	Flux current reference to rated flux current							
	Flux Current	Ide	%	Actual flux current to rated flux current							
	ACR output of axis Q	ACR_Q Out	V	ACR output value of axis Q							
	ACR output of axis D	ACR_D Out	V	ACR output value of axis D							
	Voltage reference of axis D	VdeRef	V	Voltage reference value of axis D							
	Voltage reference of axis Q	VqeRef	V	Voltage reference value of Q axis Q							
	Output current	Out Amps RMS	A	Inverter output current (rms)							
	Output voltage	Out Volt RMS	V	Inverter output voltage (rms)							
	Output power	Power	kW	Motor output power							
	DC LINK voltage	DC Bus Volt	V	Inverter DC link voltage							
	Process PI reference	Proc PI Ref	%	Reference value of Process PID routine							
	Process PI Feedback	Proc PI F/B	%	Feedback value of Process PID routine							
	Process PI output	Proc PI Out	%	Output value of Process PID routine							
	Motor temperature NTC	Mot Temp NTC	deg	Temp displayed when mot temp sensor is NTC. 25°C displayed when temp sensor is not provided with the motor.							
	Inverter temperature	Inv Temp	deg	Inverter Heatsink temp displayed							
	Inverter i2t	Inv i <sup>2</sup> t	%	Inverter overload capability displayed. In the case Overload capability is 150% for 1 min, i <sup>2</sup> t becomes 100% when 150% of rated current is flowing for 1 min.							
	MOP output	MP Output	%	Set value displayed when operation is done by potentiometer on terminal input.							
	Control mode	Ctrl Mode		Selected control mode displayed							
	Software version	S/W Version		S/W version displayed							
	Running time	Run Time		Inverter running time displayed after Power On							
	Input terminal status	Terminal In	ON/OFF status of Input terminal displayed (0: OFF, 1: ON)								
				<b>FX</b>	<b>RX</b>	<b>BX</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P4</b>	<b>P5</b>
	Terminal Opt	Communication command state	It displays the communication command state.								
			<b>STOP</b>	<b>FX</b>	<b>RX</b>	<b>RST</b>	<b>BX</b>	<b>P1</b>			
0: OFF 1: ON											
			<b>P2</b>	<b>P3</b>	<b>P4</b>	<b>P5</b>	<b>P6</b>	<b>P7</b>			
Output terminal status	Terminal Out	ON/OFF status of open collector output, fault relay and contact output. (0: OFF, 1: ON)									
			<b>AX1</b>	<b>AX2</b>	<b>OC1</b>	<b>NC</b>	<b>NC</b>	<b>30A (30B)</b>			
		0: OFF 1: ON	0/1	0/1	0/1	0	0	0/1			

Code	Parameter name	LCD display	Unit	Description
	Running status	Run Status		Operating status displayed
	PhInOpenLvl	Decision value for input open-phase		Referenced value for FUN_79 PhInOpenLvl setting

\*1) In the case of using EXTN\_I/O, it will be displayed up to Ai5.

### 6.1.3 DIS\_04 (Process PID controller)

Information on Output, reference, F/B values of Process PID controller is displayed in this code.

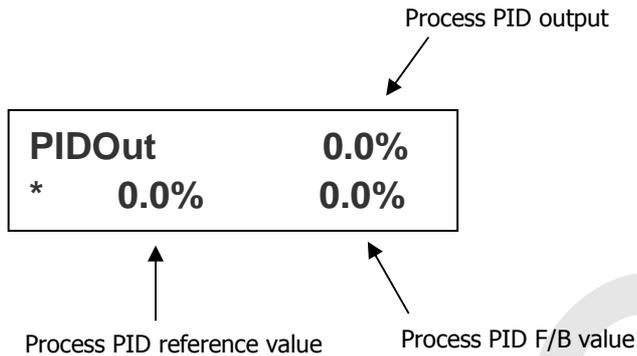

### 6.1.4 DIS\_05 (Fault display)

Current fault status, previous two faults, the number of faults occurred and faults information reset are available using [SHIFT/ESC] key in DIS\_05.

Code	LCD display	Parameter name	Description
DIS_05	Faults	Current Trip displayed	"-----" displayed when normal. Trip information given when tripped.
	Last Fault1	Previous fault displayed	Refer to Chapter 9. Troubleshooting and Maintenance.
	Last Fault2	The fault before last displayed	
	Fault Count	Total number of faults	The number of total faults in memory from the initialization until now is displayed.
	Fault Clear	Reset	Clear the faults and initialize to "0".

Faults information, speed reference before fault occurs, speed F/B value, output frequency/ current/ Voltage, torque current reference & actual value, DC Link voltage, input terminal status, output terminal status, Run status, running time can be monitored using [PROG], [▲(Up)] / [▼(Down)] keys. Pressing [ENT] key will return to top. To enter the fault info into memory as [Last Fault 1], press [RESET] key. Refer to [Chapter 9 Troubleshooting and Maintenance] for more details.

No	Trip information	LCD display	No	Trip information	LCD display
1	IGBT short circuit	Arm Short	14	H/W error	HW-Diag
2	Fuse open	Fuse Open	15	Input B contact for external trip	External-B
3	Ground fault	Ground Fault	16	Communication error of option board	Option (\$\$)
4	Over current	Over Current	17	Output open-phase	Output PO
5	Over voltage	Over Voltage	18	Inverter overload	Inv. OLT
6	Inverter overheat <sup>note1)</sup>	OHD Open	19	Input open-phase	Input PO
7	FAN fault <sup>note1)</sup>	FAN Lock	20	Motor overheat	MotOver Heat
8	IGBT short-circuit DB <sup>note2)</sup>	Arm Short- DB	21	Inverter thermal short circuit	InvThem OP
9	Encoder error	Encoder Err	22	Motor thermal error	MotThem Err
10	Low voltage	Low Voltage	23	Motor overspeed error	Over Speed
11	Inverter overheat	InvOver Heat	24	AC Fan/MC power error <sup>note3)</sup>	FAN/MC PWR
12	Electronic thermal	E-Thermal	25	Power for encoder supply error <sup>note1)</sup>	Enc Power
13	Overload	Over Load			

※ **Note :**

When multiple faults occur at the same time, the **MOST CRITICAL** fault will be displayed and the rest of others can be inferred from the value using [PROG], [▲(Up)] / [▼(Down)] keys. The trip has the lowest number is the most critical fault.

\*1) Applicable only to SV2800~3750iV5.

\*2) Applicable only to SV110~220iV5.

\*3) Applicable only to SV300~1600iV5.

### 6.1.5 DIS\_06(User group display selection)

User can make "User group" by collecting frequently used codes. In DIS\_06, user can set whether User group is displayed or not in three selections.

Code	LCD display	Parameter name	Description	
DIS_06	Usr Grp Disp	User group display selection	Not Used	User group not displayed
			Dis+Usr Grp	Only Display + User group displayed. The rest of groups are not displayed. If you want to display the rest, move to other group in Jump code or change the selection.
			Display ALL	Display all groups including User group. But, 2nd group is displayed only when 2 <sup>nd</sup> group is defined. EXT group is displayed when Option board is installed.

## 6.2 DIO Group (DIO\_[][])

### 6.2.1 Jump code (DIO\_00)

In I/O\_00, jumping directly to any parameter code can be accomplished by entering the desired code number.

#### (Example) Moving to DIO\_05

Press [PROG] and set to 5 using [SHIFT/ESC] / [▲(Up)] / [▼(Down)] and press [ENT] key to move to I/O\_05. If the desired code cannot be set, the closest code will be displayed.

DIO ▶	P5 define
05	Not Used

Jumping other code is available using [▲(Up)] / [▼(Down)] keys.

### 6.2.2 Multi-function input terminal

#### 1) DIO\_01 ~ DIO\_07 (Multi-function input terminal P1 ~ P7 define)

It defines Multi-function input terminals. SV-iV5 has 7 dedicated terminals (P1 ~ P7) for the setting of parameters below. However, the multiple terminals cannot be selected for the same function and if so, the invalid terminal definition is displayed as "Not Used". And the selected function cannot be adjusted while running.

No	Set value	Description	No	Set value	Description
1	Speed-L	Multi-step speed-Low	16	Prohibit FWD	Forward Run prevention
2	Speed-M	Multi-step speed-Middle	17	Prohibit REV	Reverse Run prevention
3	Speed-H	Multi-step speed-High	18	Proc PID Dis	PID operation disabled
4	Jog Speed	Jog speed	19	Timer Input	Timer ON
5	MOP Up	MOP UP operation	20	SoftStrtCncl	Cancel Soft start
6	MOP Down	MOP Down operation	21	ASR Gain Sel	Switch ASR gain
7	MOP Clear	MOP Speed Clear (Reset)	22	ASR P/PI Sel	Switch ASR P/PI
8	MOP Save	MOP Speed Save	23	Flux Ref Sel	Switch Flux reference
9	Analog Hold	Analog speed ref. Hold	24	PreExcite <sup>Note1)</sup>	Pre-excitation
10	Main Drive	Exchange between Option and Inverter	25	Spd/Trq Sel	Speed/Torque control select
11	2nd Func	The 2 <sup>nd</sup> function	26	Use Max Trq	Torque limit ON/OFF
12	Xcel-L	Multi-accel/decel-Low	27	Use Trq Bias	Torque bias ON/OFF
13	Xcel-H	Multi-accel/decel-High	28	AuxSpdEnable	Auxiliary speed enable
14	3-Wire	3 Wire	29	Battery Run	Selection of battery-operated
15	Ext Trip-B	External trip B contact	41	LVT Diable	Detection of Low voltage trip disabled

Note 1) It is invisible when CON\_01 is Control Mode.

Remark
<ul style="list-style-type: none"> <li>The additional item to set will be displayed when Sychro option card or CON_01 is Web Control. Regarding this option, refer to the user manual of Sychro option or Chapter 7 Web Control Application.</li> </ul>

**1.1) Speed-L / Speed-M / Speed-H / JOG operation**

By defining P1 ~ P4 as "Speed-L", "Speed-M", "Speed-H" and "Jog Speed", the selected references in FUN group 12 ~ 20 (Multi-step speed 0 ~ 7 and Jog speed) become active as speed reference.

**(Example)** To define Multi-function input terminals P1, P2, P3 as Speed-L, Speed-M, Speed-H and P4 as Jog Speed;

Code	LCD display	Description	Setting range	Unit	Set value
DIO_01	P1 define	Multi-function input terminal P1 define			Speed-L
DIO_02	P2 define	Multi-function input terminal P1 define			Speed-M
DIO_03	P3 define	Multi-function input terminal P3 define			Speed-H
DIO_04	P4 define	Multi-function input terminal P4 define			Jog Speed

When multi-step speed 0 (FUN\_12: Speed 0) is selected (P1, P2 and P3 are all OFF), speed reference is input by the method set in Digital setting by keypad (FUN\_12: Speed 0) or Analog speed setting of terminal block or setting by option. If the jog (FUN\_20) of P4 is active, inverter operates with jog frequency regardless of other terminal signal input.

P1	P2	P3	P4	Set Vaule
OFF	OFF	OFF	OFF	Speed referece in accordance with FUN_02
<b>ON</b>	OFF	OFF	OFF	FUN_13(Speed 1)
OFF	<b>ON</b>	OFF	OFF	FUN_14(Speed 2)
<b>ON</b>	<b>ON</b>	OFF	OFF	FUN_15(Speed 3)
OFF	OFF	<b>ON</b>	OFF	FUN_16(Speed 4)
<b>ON</b>	OFF	<b>ON</b>	OFF	FUN_17(Speed 5)
OFF	<b>ON</b>	<b>ON</b>	OFF	FUN_18(Speed 6)
<b>ON</b>	<b>ON</b>	<b>ON</b>	OFF	FUN_19(Speed 7)
X	X	X	<b>ON</b>	FUN_20(Jog Speed)

**1.2) MOP (Motor operated potentiometer) Up / MOP Down / MOP Clear / MOP Save**

When multi-function input terminals P1 ~ P7 is set to "MOP Up", "MOP Down", inverter performs Accel/Decel Constant Run according to the terminal input. Generally, MOP function is used to adjust the speed simply with terminal ON/OFF. When MOP UP/Down is selected, inverter ignores FUN\_02 setting, and performs MOP operation. To cancel it, change the defined terminal to "Not Used". If this function is selected with "Main Drive" function, operating reference is done by MOP and the rest will be defined by "Main Drive" function. Max speed limit is FUN\_04(Max Speed).


If "MOP Save" is entered during MOP operation, the current speed reference value is saved as "MOP Data" and retained. When the MOP operation resumes, the retained value will be used as speed reference.

"MOP Clear" resets the MOP Data value to "0". It is used to change the saved value.


**(Example)** MOP function setting and operation method is as follows;

Code	LCD display	Description	Setting range	Unit	Set value
DIO_01	P1 define	Multi-function input terminal P1 define			MOP Up
DIO_02	P2 define	Multi-function input terminal P1 define			MOP Down
DIO_03	P3 define	Multi-function input terminal P3 define			MOP Clear
DIO_04	P4 define	Multi-function input terminal P4 define			MOP Save


(MOP Up/Down example 1) This is used only if terminal ON/OFF is required for speed control.

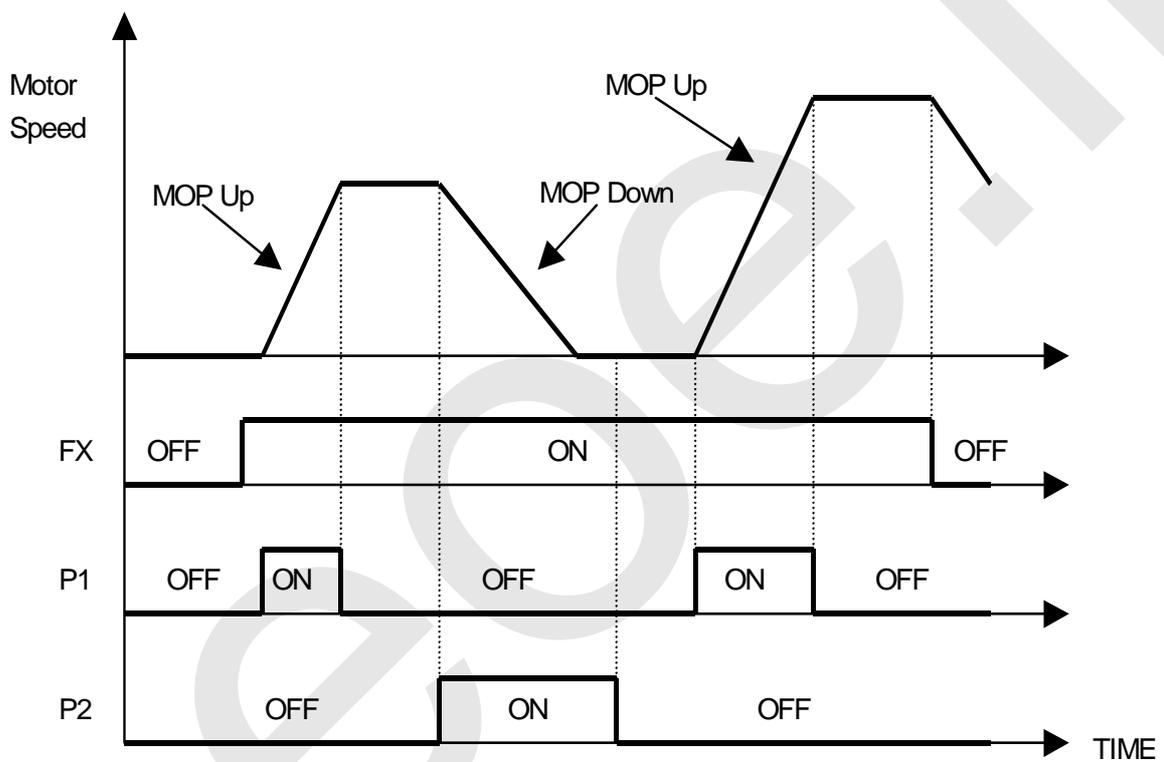

(MOP Save example 2) In case terminal input assigned to MOP Save function is ON, operation speed at that instant is memorized and operates at the saved speed when operation resumes.

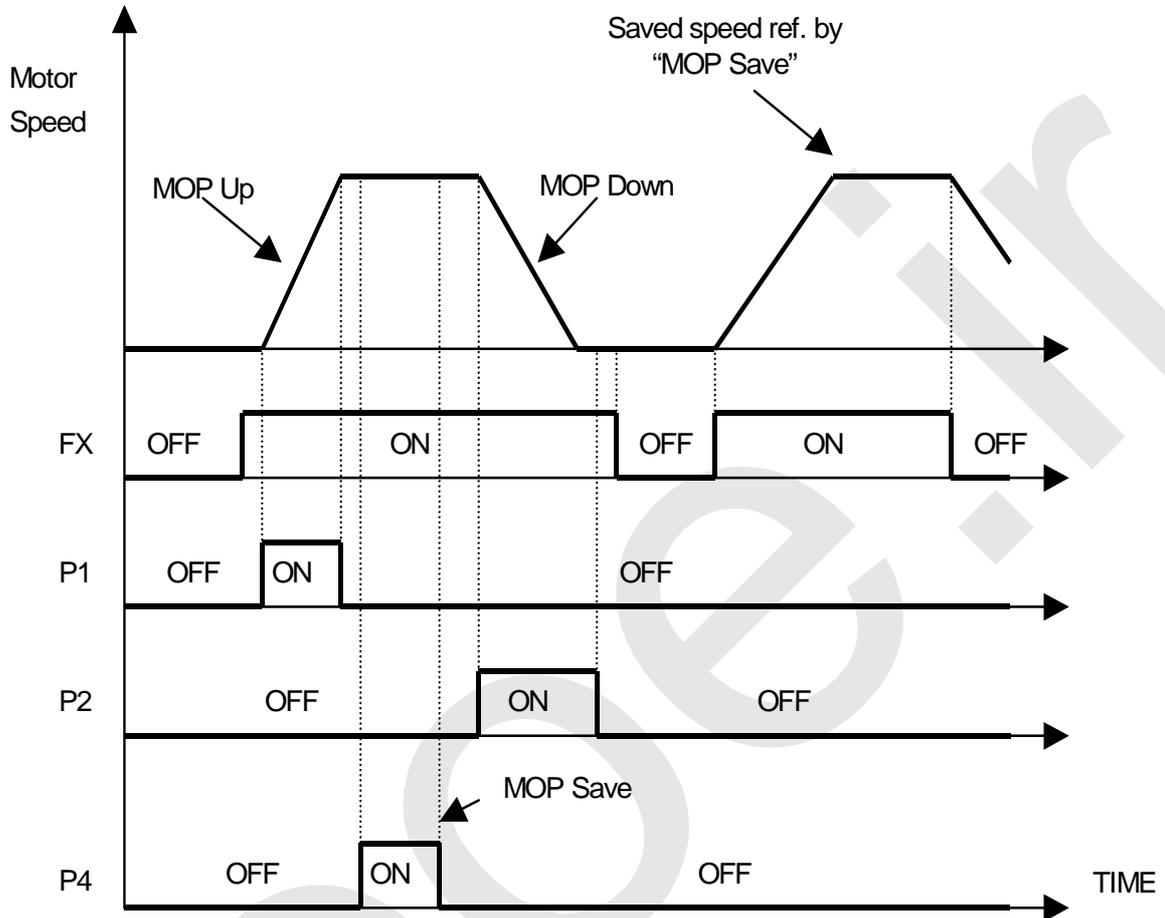


(MOP Clear setting example 3) To clear the saved speed by MOP Save function, use "MOP Clear ON/OFF". If MOP Clear is ON during running, the inverter decelerates its speed to zero speed. If MOP is ON during stop, this function resets the speed reference to "0".

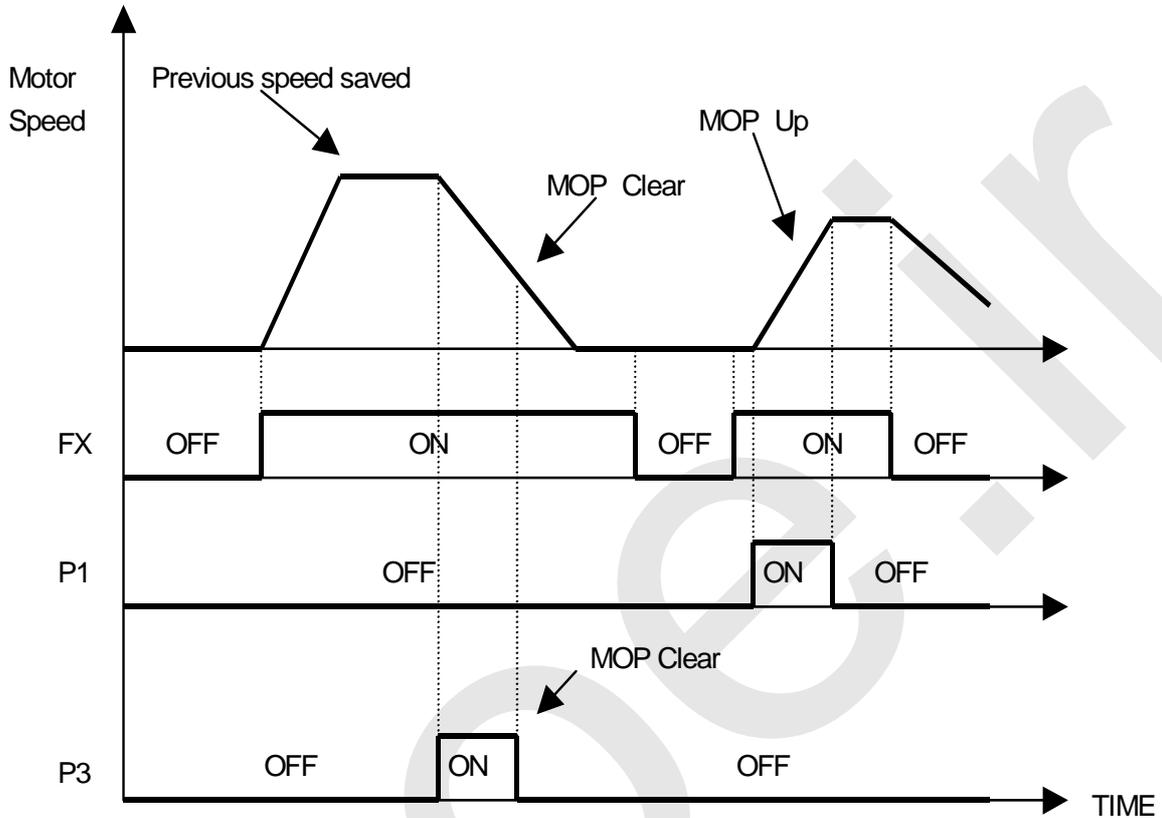

### 1.3) Analog Hold

When FUN\_02 is set to "analog" and Multi-function analog input (Ai1 ~ Ai3) is set and then one of the selected terminal set to "Analog Hold" is ON, inverter fixes its output frequency, regardless of the frequency reference change. The changed frequency reference is applied when the terminal is OFF. This function is useful when a system requires constant speed after acceleration where the location has influenced by noise.

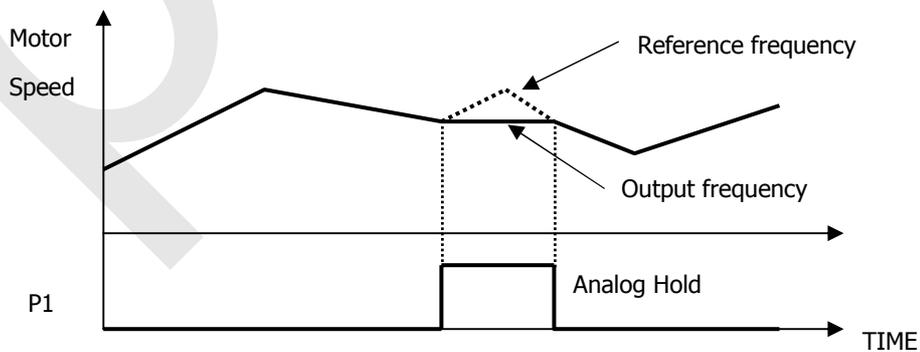

### 1.4) Main Drive

Each inverter linked to system can be controlled separately. When this terminal is turned On, changing operating speed reference, operating method, and torque limit is done via only Keypad without changing the user-setting parameter value.

When 'Main Drive' terminal is turned On, Main Drive operation is available as shown below condition.

- Inverter during stop: It is applied immediately.
- Inverter during operation: It is applied after stop.

The parameter value of FUN\_01 Run/Stop Src, FUN\_02 Spd Ref Sel, CON\_33 Trq Lmt Src related with Operating speed reference, Operating method, and Torque limit is not applied when 'Main Drive' terminal is turned On even though parameter is changed via keypad or communication. It is applied when the terminal is turned Off during stop.

The parameter value of CON\_01 Control Mode is operated same as above parameter described.

The setting of Operating speed reference, Operating method and Torque limit is set as shown below.

Function	"Main Drive" ON	"Main Drive" OFF	Applied point of time
Operating method	Keypad mode	Parameter value of FUN_01 Run/Stop Src	After inverter stop
Operating Speed reference	Keypad1 mode	Parameter value of FUN_02 Spd Ref Sel	
Torque Limit	Kpd Kpd Kpd mode	Parameter value of CON_33 Trq Lmt Src	
Control Mode	Speed mode	Parameter value of CON_01 Control Mode	

### 1.5) 2nd Func (the 2<sup>nd</sup> function setting)

The iV5 inverter has the capability to control 2 motors independently. A second motor may be active by selecting one terminal for this function and turn it ON. 2<sup>nd</sup> function is not displayed if the terminal is not defined for this or the defined terminal is OFF.

※ Cross reference table for 1<sup>st</sup> function and 2<sup>nd</sup> function

Parameter	2 <sup>nd</sup> function		1 <sup>st</sup> function	
Acceleration time	2nd_10	2nd Acc time	FUN_41	Acc. Time 1
Deceleration time	2nd_11	2nd Dec time	FUN_42	Dec. time 1
Encoder-related parameter	2nd_13 ~ 2nd_16		PAR_10 ~ PAR_15	
Motor constants	2nd_21 ~ 2nd_30		PAR_18 ~ PAR_31	
Electronic thermal level for 1 min	2nd_35	2nd ETH 1min	FUN_56	ETH 1min
Electronic thermal level for continuous	2nd_36	2nd ETH Cont	FUN_5	ETH Cont

※ **Note : 1<sup>st</sup> & 2<sup>nd</sup> function switch-over should be selected when the motor is stopped.**

**If selected during RUN, 2<sup>nd</sup> function is not active until motor stop.**

**1.6) XCEL-L / XCEL-H**

Refer to FUN\_41 ~ 48 (Accel/ Decel time 1, 2, 3, 4).


(The factory default value is different from the capacity of inverter.)

Code	LCD display	Description	Unit	Factory default value			
				2.2~37 kW	45~75 kW	90~220 kW	280~375 kW
FUN_40	Acc Time-1	Acceleration time 1	sec	2.00	10.00	20.00	30.00
FUN_41	Dec Time-1	Deceleration time 1	sec	2.00	10.00	20.00	30.00
FUN_42	Acc Time-2	Acceleration time 2	sec	3.00	12.00	24.00	35.00
FUN_43	Dec Time-2	Deceleration time 2	sec	3.00	12.00	24.00	35.00
FUN_44	Acc Time-3	Acceleration time 3	sec	4.00	14.00	28.00	40.00
FUN_45	Dec Time-3	Deceleration time 3	sec	4.00	14.00	28.00	40.00
FUN_46	Acc Time-4	Acceleration time 4	sec	5.00	16.00	32.00	45.00
FUN_47	Dec Time-4	Deceleration time 4	sec	5.00	16.00	32.00	45.00

### 1.7) 3-Wire operation

When FX or RX terminal is turned ON and turned OFF, the terminal is maintained ON using this parameter. Simple sequence circuit can be comprised with push button switch. If 3-wire is turned off when multi-function input is 3-wire, operation is inactive even though pulse input of FX and RX is inputted.

#### (Operating method when P2 is set to 3-Wire)

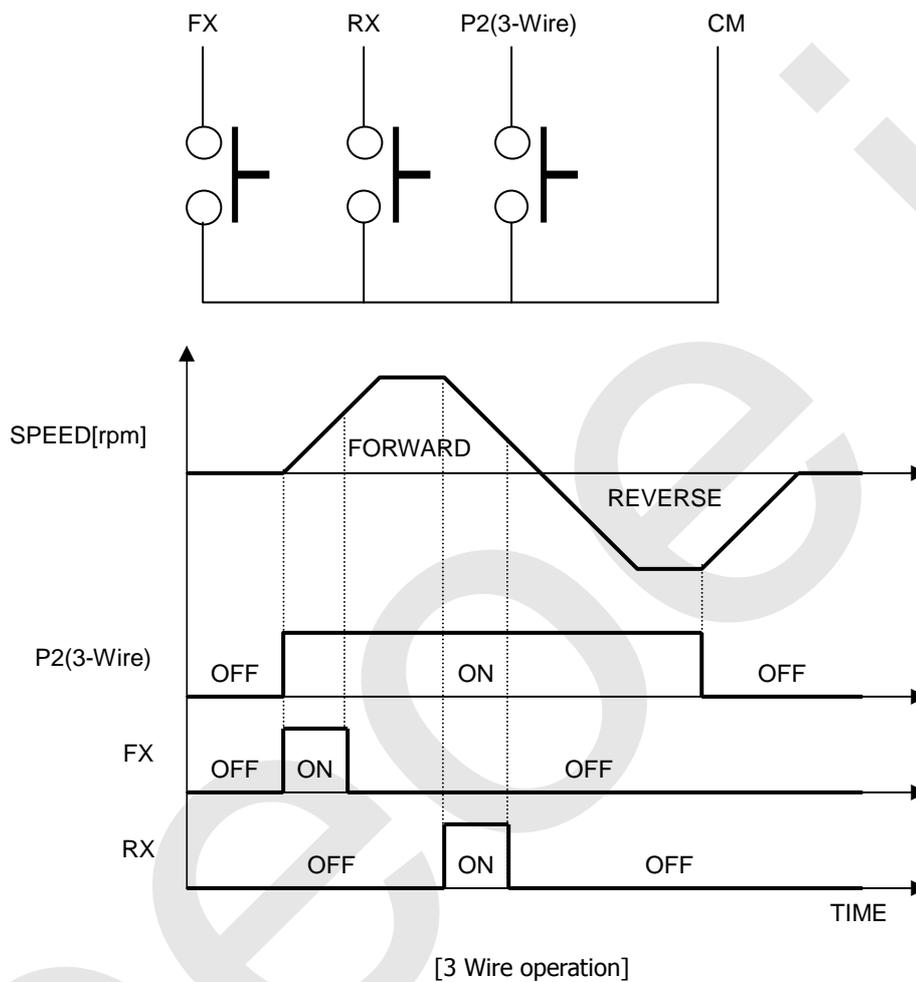


### 1.8) Ext Trip-B (External trip signal input by b contact)

If the terminal set to this function is off, the inverter disables the gating of IGBT and then the motor freely rotates to a stop. The message written as "External Trip Signal B contact" appears on the LCD screen and STOP LED is blinking in the keypad. This signal can be used as an external latch trip.

### 1.9) Prohibit FWD (Prohibition of forward rotation) / Prohibit REV (Prohibition of reverse rotation)

If Prohibit FWD or Prohibit REV is set, it prohibits forward or reverse rotation, respectively. If Prohibit FWD is used, speed command becomes 0 when it has positive value. Similarly, If Prohibit REV is used, speed command becomes 0 when it has negative value.

**(Example)** When multi-function input terminal P1 is set to "prohibit FWD" and P2 to "prohibit REV" the following diagram will be shown.

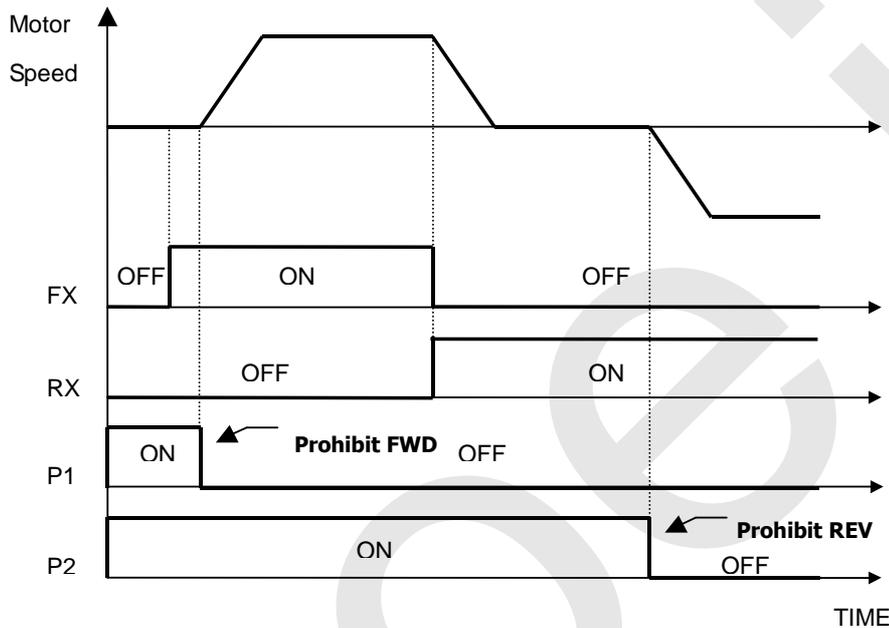

### 1.10) Proc PID Dis (Process PID disabled)

This function is used to disable the Process PID controller. If Proc PID Enb at the CON\_23 is Terminal and also this terminal is ON, the output of Process PID controller becomes zero. Otherwise, Process PID controller generates its output depending on the controller operation. 'Proc PID Enb' at CON\_23 determines whether this function is used or not. The setting for this code is as follows.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_23	Proc PID Enb	Proc PID controller Enable/Disable	Disable Enable Terminal		Disable


'Disable' at CON\_23 blocks the output of Process PID controller and 'Enable' at CON\_23 enables the Process PID controller. If 'Terminal' is set, the multi-function terminal set to 'Proc PID Dis' determines whether the output of Process PID controller is enabled or not. To prevent the saturation of Process PID controller, Process PID controller is enabled only if the multi-function input terminal is set to 'Proc PID Dis' and its terminal input is OFF and operation command is 'ON'. Process PID controller does not work if operation command is not ON or 'Process PID Disable' is not set. Truth table is as follows.

CON_23	Proc PID Dis	Operating reference	
	Multi-function input signal	ON	OFF
Terminal	ON	Disable	Disable
	OFF	Enable	Disable
	Enable	Enable	Disable
	Disable	Disable	Disable

**1.11) Timer input**

The multi-function input terminals P1~P7 can generate the timer output based on the timer ON delay time at DIO\_55 and timer Off delay time at DIO\_56. The following example is the case where DIO\_05 is set to timer input and the multi-function output terminal AX1 at DIO\_41 is set to 'Timer Out'.

Code	LCD display	Description	Setting range	Unit	Setting value
DIO_05	P5 Define	Multi-function input terminal P5 Define			Timer Input
DIO_41	AX1 Define	Multi-function output terminal AX1 Define			Timer Out
DIO_55	TimerOn Dly	Timer On Delay Time	0.1 ~ 3600.0	sec	
DIO_56	TimerOff Dly	Timer Off Delay Time	0.1 ~ 3600.0	sec	

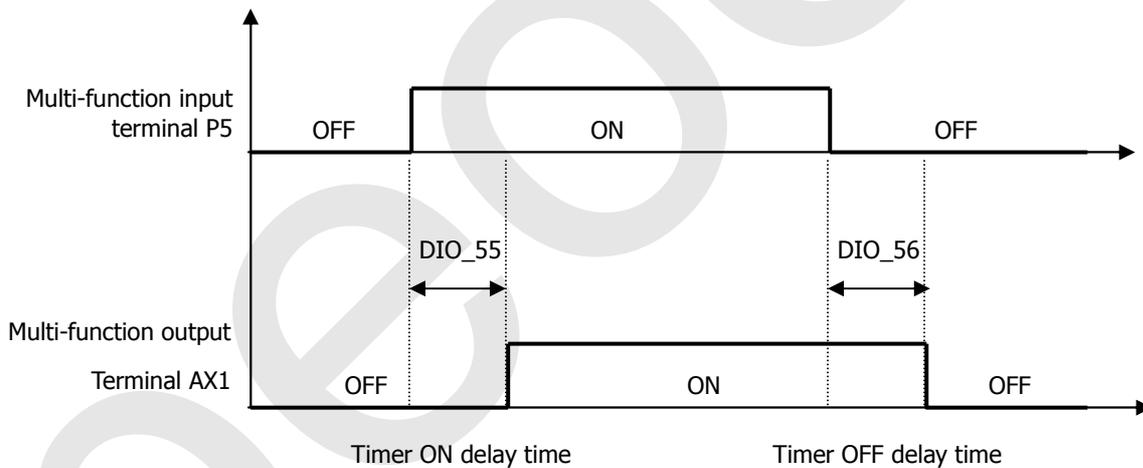

**1.12) SoftStartCncl (Soft Start Cancel)**

Soft start cancel is used when the shortest acceleration/deceleration time is required without using the existing accel/decel time. In this case, real acceleration/deceleration time depends on the load condition and response characteristic of speed controller. The following table shows what kind of acceleration/deceleration time is used when P1, P2 and P3 are used for the transfer of accel/decel time or soft start cancel function is enabled.

**(Example) Programming P3 as SoftStrtCncl**

P1 (Xcel-L)	P2 (Xcel-H)	P3 (SoftStartCncl)	Accel/Decel time
OFF	OFF	OFF	Accel/Decel 1
ON	OFF	OFF	Accel/Decel 2
OFF	ON	OFF	Accel/Decel 3
ON	ON	OFF	Accel/Decel 4
X	X	ON	The shortest Accel./Decel.

**1.13) ASR Gain Sel (Switch automatic speed regulator PI gain)**

Using 'ASR Gain Sel' function, one of the two P and I gains can be selected for PI speed controller (ASR).

**(Example) Programming P5 as ASR PI Gain**

Code	LCD display	Description	Setting range	Unit	Setting value
DIO_05	P5 define	Multi-function input terminal P5 Define			ASR Gain Sel
CON_03	ASR P Gain1	ASR (Automatic Speed Regulator) P Gain 1	0.0 ~ 200.0	%	<u>P5 : OFF</u>
CON_04	ASR I Gain1	ASR I Gain 1	0 ~ 50000	ms	
CON_05	ASR LPF1	ASR LPF time constant 1	0 ~ 20000	ms	
CON_06	ASR P Gain2	ASR P Gain 2	0.0 ~ 200.0	%	<u>P5 : ON</u>
CON_07	ASR I Gain2	ASR I Gain 2	0 ~ 50000	ms	
CON_08	ASR LPF2	ASR LPF time constant 2	0 ~ 20000	ms	

**1.14) ASR P/PI Sel (ASR P/PI Transfer)**

The ASR could be P controller or PI controller by Multi-function input programmed as ASR P/PI Sel. When the ASR Gain is switched to each other, the effective P gain could be changed gradually with the time ASR Ramp CON\_09 in order to prevent the shock in the machine because of the quick change of P gain.

**(Programming Example) Programming P6 as ASR P/PI Sel.**

Code	LCD display	Description	Setting range	Unit	Factory setting
DIO_05	P5 define	Multi-function input terminal P5 Define			ASR P/PI Sel

**1.15) Flux Ref Sel (Flux reference selection)**

If the flux reference selection is ON, flux reference is set to the value which analog voltage (-10 ~ 10V) is converted to % ratio of the rated flux.

**1.16) PreExcite (Pre-excitation)**

This function enables the motor to build up the flux by flowing the magnetizing current into it before run command is ON so that speed control characteristic can be improved at the time of the acceleration of the motor.

### 1.17) Spd/Trq Sel (Speed/Torque Control Transfer)

Speed and torque control can be switched using this function. This terminal input overrides the input from the keypad. Control mode can be switched only during stop state. Despite multi-function terminal input during running, the control mode can be switched only after stopping.

### 1.18) Use Max Torque (Maximum Torque Enable)

If this input is ON, the torque limit value of the speed controller is fixed to its maximum value. On the contrary, when this input turns off, the value defined at CON\_34 ~ CON\_36 applies to torque limit value. This function disables the inverter continuous operation.

If this function is used continuously, it may lead to damage to the motor and inverter. Take caution when using this function.

### 1.19) Use Trq Bias (Torque Bias enable)

If one of the multi-function terminals (P1 ~ P7) is selected as "Use Trq Bias", torque bias value is fed into the inverter following the input signal. Besides, if "Use Trq Bias" is not set, and 'Keypad' is set at CON\_37, torque bias value set at CON\_38 is fed into the inverter. And, if "Analog" is set at CON\_37 (Trq Bias Src), and the input is selected as "Torque Bias", the torque bias value is fed into the inverter. Therefore, in order not to use the torque bias value, 'None' should be set at CON\_37 or one of the multi-function terminals (P1 ~ P7) should be selected as "Use Trq Bias" and then be kept the terminal Open.

### 1.20) AuxSpdEnable (Selection of using auxiliary function)

MOP UP, MOP Down and AuxSpdEnable must be inputted to multi-function input to use auxiliary speed function. Also, one of the function AIO\_01/13/25 Ai1~3 Define has to set to Aux Spd Ref. MOP Up/Down is used to set main speed. AuxSpdEnable is turned On to set auxiliary speed and change the analog input.

### 1.21) Battery Run (Selection of battery-operated mode)

When main power is not able to use by simultaneous power failure at elevator application, motor can be operated temporarily with battery power.

This function is available from 5.5 to 22kW/-2/4 products. Refer to '6.4.14 Battery Run speed and input voltage setting' for details of Battery Run.

### 1.22) LVT Disable (Detection of Low voltage trip disabled)

It detects the hardware fault except for low voltage trip through operating the control board with only auxiliary power source before inputting of main power source. If inverter has the only low voltage trip, a fault contact is not closed. Run command is not inputted before inputting of main power source eventhough inverter has not hardware fault. The auxiliary output terminal of multi-function is not closed eventhough it sets as 'INV Ready'.

FAN fault detection supported at 280 ~ 375 kW products among hardware fault can be detected in case the power is inputted so it will not be detected before the inputting of main power source. 'LVT Disable' function with inputting

auxiliary power source operates as shown below at each condition ('INV Ready' output, FAN fault detection and H/W fault detection etc.)

"LVT Disable"	Main power source	'INV Ready' output	FAN fault detection	H/W fault detection except for Low voltage and FAN fault
ON	Before input	OFF	Not available	Available
	After input	ON	Available	

### 2) DIO\_08 (Reversal of Multi-function input terminal)

Multi-function input terminal is based on the 'A' contact operation. If a specific terminal should be changed to 'B' contact operation, the relevant terminal setting should be set from '0' to '1'. Once the relevant terminal is set to '1', the terminal operates on the basis of 'B' contact and it is effective before it is changed to '0'. But, in case of the external trip 'B' contact, it is changed to 'A' contact operation. Terminals are displayed in the order of P1, P2, P3, P4, P5, P6 and P7 from the beginning.

(P1 ~ P7: A contact)

<b>DIO ▶ Neg Function</b> <b>08            0000000</b>
---

(P1, P6: B contact)

<b>DIO ▶ Neg Function</b> <b>08            1000010</b>
---

### 3) DIO\_09 (Low pass filter time constant for the terminals)

This setting affects the response speed of the control circuit terminals (FX, RX, BX, P1 ~ P7, RST). It is greatly effective when electro-magnetic noise signal is present in the input signal. The larger the time constant becomes, the slower response speed becomes. Response speed is approximately proportional to the setting value times 2.5 [m sec].

## 6.2.3 Multi-function digital output terminal

### 1) DIO\_10 Inversion of Multi-function aux contact output (Relay output, Open collector output)

Factory default setting of Multi-function Relay outputs is A contact. To change it to B contact, set it to "1".

See the below for setting example: (terminal layout is AX1, AX2, OC1, NC, NC from left.)

(Setting example)

(AX1 ~ OC1: A contact)

<b>DIO ▶ Neg Func.Out</b> <b>10            00000</b>
---

(AX1, OC1: B contact)

<b>DIO ▶ Neg Func.Out</b> <b>10            10100</b>
---

### 2) DIO\_41 ~ 43 (Multi-function aux contact output (AX1 ~ AX2) and Open collector (OC1) output setting)

Multi-function digital output terminal serves as one of the functions listed in the table below. Multi-function aux contact is activated when the selected function is ON.

No	Set value	No	Set value	No	Set value
0	Not Used	8	Run	16	Stop
1	INV Ready	9	Regenerating	17	MC On/Off
2	Zero Spd Det	10	Mot OH Warn	18	Steady


No	Set value	No	Set value	No	Set value
3	Spd Det.	11	INV OH Warn	19	Brake Output
4	Spd Det (ABS)	12	Speed Agree		
5	Spd Arrival	13	Trq Det.		
6	Timer Out	14	Trq Lmt Det.		
7	LV Warn	15	OverLoad		

**2.1) Not used**

It is set unless multi-function output is not used as any function listed above.

**2.2) INV ready**

INV Ready becomes ON when inverter is ready to operate normally. If trip signal occurs, INV Ready is left OPEN immediately as shown in the figure below.

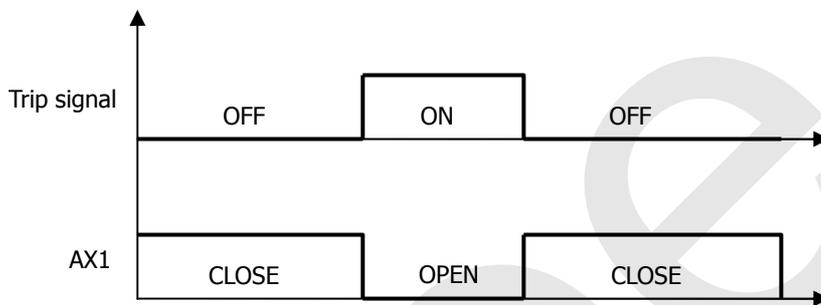


**2.3) Zero Spd Det**

Detects zero speed of motor. See the figure below.

Code	Display	Description	Range	Unit	Default
DIO_47	ZSD Level	Zero Speed Detect Level	0.0 ~ 480.0	rpm	10
DIO_48	ZSD Band	ZSD hysteresis band	0.1 ~ 10.0	%	0.5

- DIO\_48(ZSD Band) is set as the percentage of FUN\_04 Max motor speed.

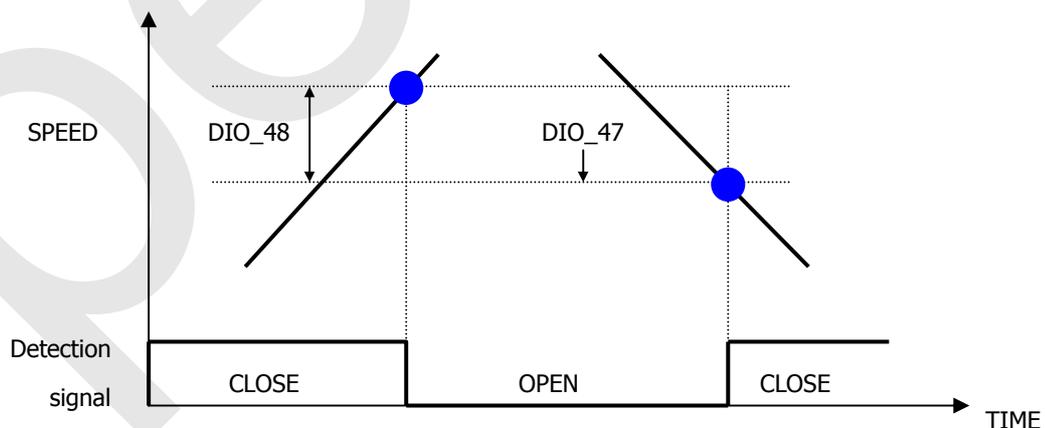


**2.4) Spd Det. – Polarity valid / Spd Det.(ABS) – Polarity invalid**

This is ON when the real motor speed reaches the arbitrary speed. The polarity of detecting speed is valid for Spd Det.

But, the polarity is invalid for Spd Det(ABS).

Code	Display	Description	Range	Unit	Default
DIO_49	SD Level	Speed Detect Level	-3600 ~ 3600	rpm	0
DIO_50	SD Band	Speed Hysterisis Band	0.1 ~ 10.0	%	0.5

- DIO\_50(SD Band) is set as the percentage of FUN\_04 Max motor speed.

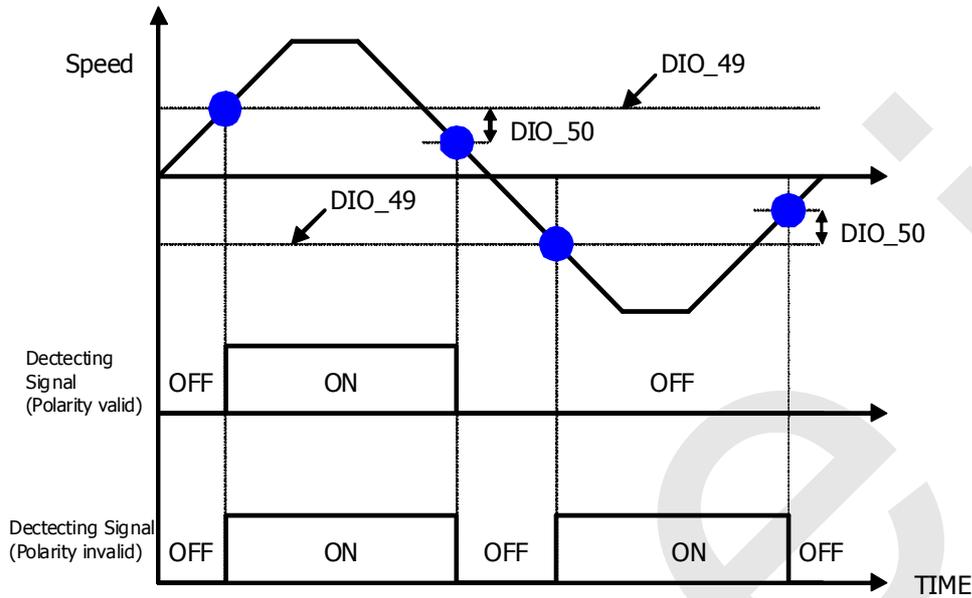

### 2.6) Spd arrival


It detects whether the motor reaches the set speed band.

Code	Display	Description	Range	Unit	Default
DIO_51	SA Band	SA hysteresis band	0.1~10.0	%	0.5

### 2.7) Spd agree

This is ON when the motor speed becomes equal to the set speed.


Code	Display	Description	Range	Unit	Default
DIO_52	SEQ Band	SEQ hysteresis band	0.1 ~ 10.0	%	0.5

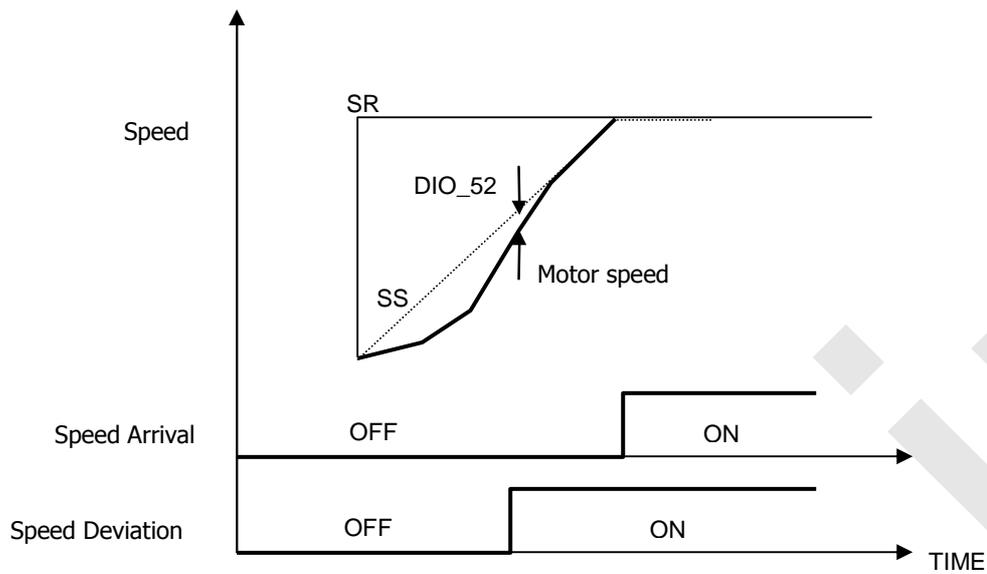

**2.7) Timer out**

Timer Out acts as an output signal to the timer input signal defined in the one of the multi-function input terminals P1~P7 and it uses the set values of Timer On delay time at DIO\_55 and of Timer Off delay time at DIO\_56. The example of code setting is shown in the table below when DIO\_07 is set to Timer Input and DIO\_41 is set to Timer Output.

Code	Display	Description	Range	Unit	Default
DIO_07	P7 define	Definition of P7			Timer Input
DIO_41	AX1 Define	Definition of multi-function output terminal relay output 1 (1A, 1B)			Timer Out
DIO_55	TimerOn Dly	Timer ON delay	0.1 ~ 3600.0	sec	0.1
DIO_56	TimerOff Dly	Timer OFF delay	0.1 ~ 3600.0	sec	0.1

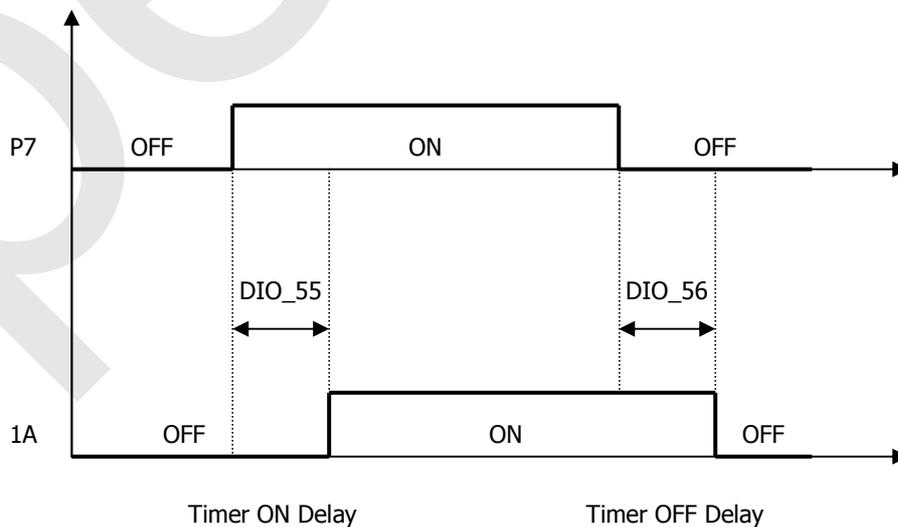

**2.8) LV**

LV is enabled when the DC link voltage of the inverter is less than the detecting level of low voltage alarm.

**2.9) Run**

It is ON when the inverter is running.

**2.10) Regenerating**

It is ON when the motor is regenerating.

**2.11) Mot OH Warn (Motor Overheat Warning)**

Using NTC or PTC signal built in the motor, Motor Overheat is ON when the temperature inside the motor is higher than the overheat alarm level. This signal is only for an alarm, not for the inverter trip.

※ In the case of ExTTN\_I/O it corresponds to Ai5 Ai3 Define[AIO\_25 ] is set to "Use Mot NTC".

Code	Display	Description	Range	Unit	Default
DIO_64	MH Warn Temp	Motor overheat detect	75 ~ 130	°C	120
DIO_65	MH Warn Band	MH hysteresis band	0 ~ 10	°C	5

**2.12) Inv OH Warn (Inverter Overheat Warning)**

Inverter Overheat is ON, when the heatsink inside the inverter is higher than the overheat alarm level. This signal is only for an alarm, not for the inverter trip.

Code	Display	Description	Range	Unit	Default
DIO_62	IH Warn Temp	Inverter Overheat Detection Temperature	50 ~ 85	°C	75
DIO_63	IH Warn Band	Inverter Overheat Detection Bandwidth	0 ~ 10	°C	5

**2.13) Trq Det.**

Trq Det is ON when the torque output of ASR reaches the setting torque level.

Code	Display	Description	Range	Unit	Default
DIO_53	TD level	Torque Detect Level	0.0 ~ 250.0	%	0.0
DIO_54	TD Band	TD hysteresis band	0.1 ~ 10.0	%	0.5

**2.14) Trq Lmt Det**

Trq Lmt Det is ON when the output of ASR (Torque reference) is saturated so that its limit value is generated.


**2.15) OverLoad**

Overload is ON when the inverter output current is higher than the overload alarm level. (On the basis of the rated current of the motor). Refer to the following values of overload alarm level (DIO\_57) and overload alarm time (DIO\_58).

- DIO\_57: [Overload warning level], DIO\_58 [Overload warning time]

If the inverter output current keeps flowing more than overload alarm level (DIO\_57) and longer than overload alarm time (DIO\_58), alarm signal is triggered. The overload signal is canceled when the inverter output current flows less than overload alarm level (DIO\_57) and longer than overload alarm time (DIO\_58) has passed.

Overload alarm signal can be generated by the multi-function outputs (1A-1B, 2A-2B, OC1-EG). "OL" should be set in the DIO\_41, 42 and 43 [Multi-function auxiliary terminal output setting] to use this function. Even if overload occurs, its alarm signal is generated through the multi-function output terminal and the inverter keeps running.

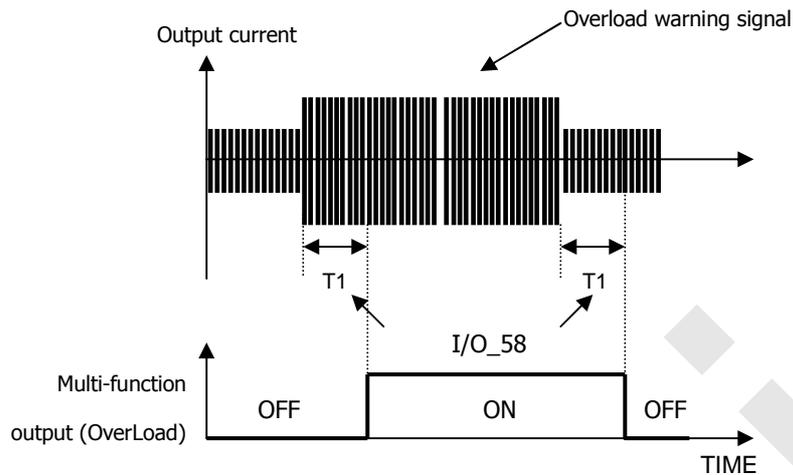

Code	Display	Description	Range	Unit	Default
DIO_57	OL level	Overload warning level	30 ~ 250	%	150
DIO_58	OL time	Overload warning time	0 ~ 30	sec	10

- Note: The set value of overload alarm level is of percentage(%) to the rated current of the motor.

**2.16) Stop**


'Stop' is ON when the inverter keeps stopping.

**2.18) MC on/Off**

This function control the operation of magnetic contactor (MC) when MS is mounted on the inverter output at the application, elevator, etc. It is the multiple functional output signal that it turns on/off the contact of MC before a current is outputted from inverter at start.

LED of FWD and REV on keypad flickers during the time of MC on/off. If MC on/off is not set at multi-function output, operation will be same as the setting of MC on/off time = 0.

Code	Display	Description	Range	Unit	Default
DIO_67	MC Timer On	Delayed time of MC On	100~50000	msec	1000
DIO_68	MC Timer Off	Delayed time of MC Off	100~50000	msec	1000

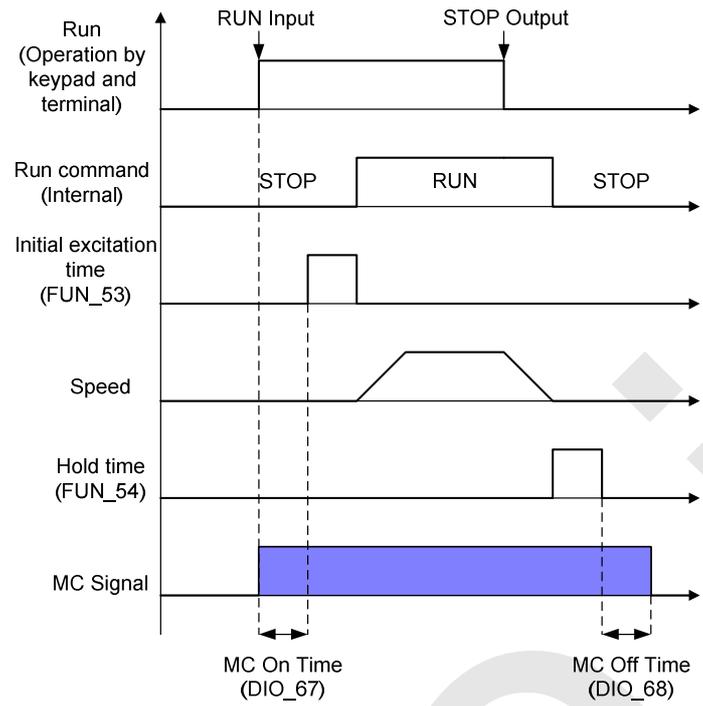


**2.18) Steady**

This is ON when the inverter is running at the constant speed.

2.20) Brake output

Output the signal of opening or closing of brake.

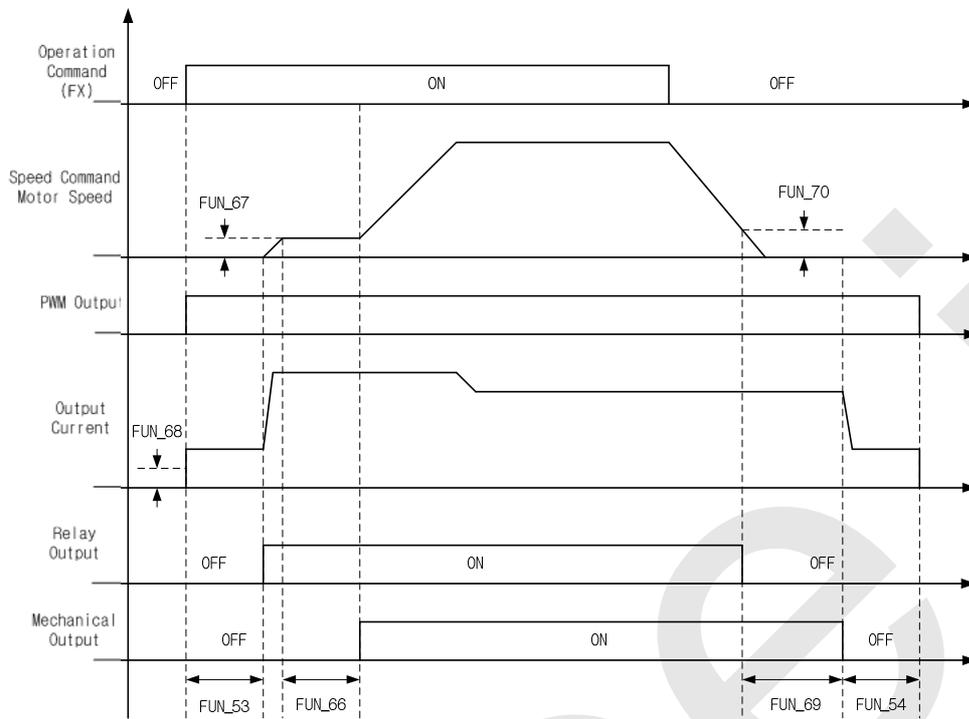

Code	Display	Description	Range	Unit	Default
FUN_66	BKOpen Time	Brake opening time	0.00 ~ 30.00	sec	0.00
FUN_67	BKOpen Spd	Brake opening speed	0.0 ~ 500.0	rpm	0.0
FUN_68	Release Curr	Brake opening current	0.0 ~ 150.0	%	20.0
FUN_69	BKClose Time	Brake closing time	0.00 ~ 30.00	sec	0.00
FUN_70	BKClose Spd	Brake closing speed	0.0 ~ 500.0	rpm	0.0

**Note** : Brake opening current value is set as a percentage of the motor magnetic current.

**3) DIO\_46 (Fault output relay (30A, 30B, 30C))**

This function can be used when the inverter fault signal is generated through the relay contact. the fault alarm is triggered differently by setting the bits related to the low voltage trip, inverter trip and the number of retry.

Code	Display	Description	Range	Unit	Default
DIO_46	Relay mode	Relay mode	000 ~ 111	-	011

Code	Bit 2 (Number of Auto retry)	Bit 1 (Inverter trip)	Bit 0 (LV trip)
DIO_46	0/1	0/1	0/1

Bit	Setting	Description
Bit 0 (LV)	0	Deactivated at Low Voltage Trip
	1	Activated at Low Voltage Trip
Bit 1 (Trip)	0	Deactivated at any fault
	1	Activated at any fault except Low Voltage Trip
Bit 2 (Retry)	0	Deactivated at the auto retry attempt
	1	Activated at the number of auto retry attempt

**4) DIO\_59 ~ 61 (Overload trip enable, level, time)**

If the inverter output current higher than the overload limit level is kept for the overload limit time, the inverter blocks the gating of IGBTs and issues the trip message.

Code	Display	Description	Range	Unit	Default
DIO_59	OLT select	Overload trip enable	Yes/No	-	Yes
DIO_60	OLT level	Overload trip level	30 ~ 250	%	180
DIO_61	OLT time	Overload trip time	0 ~ 60	sec	60

- Note: DIO\_60 is set as the percentage of Motor rated current.

**5) DIO\_97(Operation method when losing command)**

You can choose the operation method when multi-function analog input signal satisfying the criteria (AIO\_12/24/36/48/60/72 Ai1/2/3/4/5/6 Wbroken) for judging time (AIO\_73 Time Out) or satisfying the command loss condition of communication option card. Refer to analog I/O Group for the criteria for the multi-function analog input signal loss and the judging time of signal loss.

If Lost Command is happed after operation stop then the condiiton of Lost Command is released, the operation is not automatically start. In case of terminal operation, FX is turned Off and then turned On to operate. Push down the FWD/REV key to operated in keypad operation.

Code	Display	Function Name	Unit	Description
		Range		
DIO_97	Lost Command	None	-	Continuing the operation when losing command
		Free-run	-	Free-run stop when losing command
		Stop	-	Decelerating stop when losing command

If Lost command has happened, the word 'LOAI\_' is displayed on initial display. The value of percentage in second line means the input value of analog. Adjust the value of criteria of loss judging, the state is available to run after LOAI\_ is disappeared

	0.0rpm	SPD
00	LOAI1	-0.2 %

### 6) DIO\_98 (Command loss decision time of communication option card)

If Run command (FUN\_01) or Speed command (FUN\_02) are set to Option with the option card of DeviceNet, RS485 and Profibus, etc., the operation set in DIO\_97 when communication is disconnected during the time set in this parameter.

	0.0rpm	LOR
00	LOR	500rpm

### 6.3 Parameter Group (PAR\_[][])

#### 6.3.1 Jump code (PAR\_00)

PAR\_00, jumping directly to any parameter code can be accomplished.

##### (Example) Moving to PAR\_30

Press [PROG] and set to 30 using [SHIFT/ESC] / [▲(Up)] / [▼(Down)] and press [ENT] key. If the desired code cannot be set (void), the nearest code will be displayed.



Use [▲(Up)] / [▼(Down)] to move to other codes.

#### 6.3.2 Parameter group function

##### 1) PAR\_01 (Parameter initialize)

This is used to initialize all parameters or each group back to the factory defaults. After performing this, be sure to check **PAR\_07 (Motor Select) is properly set.**


Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_01	Para. init	Initialize parameters as factory defaults	No All Groups DIS DIO PAR FUN CON EXT AIO USR 2ND E/L SYN WEB SLS		No

##### 2) PAR\_02 ~ 03 (All Parameter Read/Write)

Parameters setting can be copied to other inverters using keypad. To do this, set **PAR\_02** 'Parameter Read' to "Yes" to upload the parameter setting from the inverter. Take the keypad out and install it to the copied inverter and set **PAR\_03** 'Parameter Write' to "Yes" to download the function parameters. If S/W version between inverter, 'VER. Err' is displayed and copy is disabled.

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_02	Para. Read	All Paramter Read	No/Yes		No
PAR_03	Para. Write	All Paramter Write	No/Yes		No

After writing, the copied parameter value in DIS and USR groups is changed to initial setting; it needs to set preferred value. But,

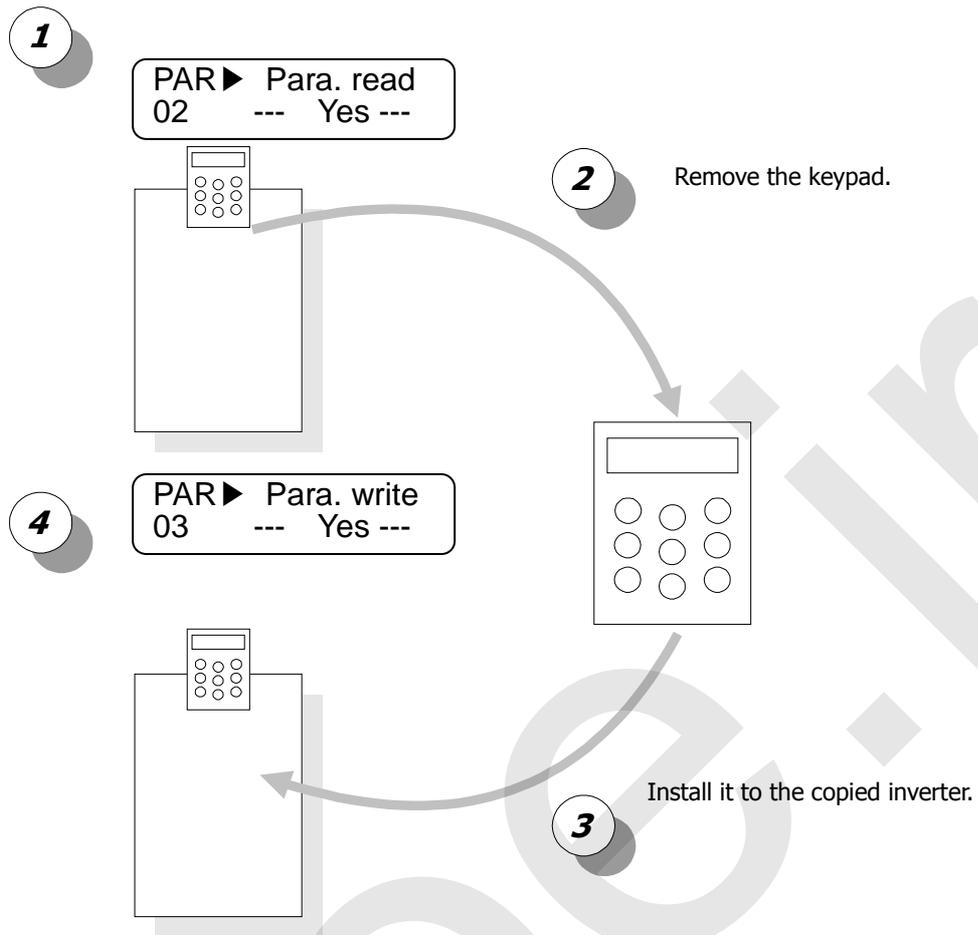

**3) PAR\_04 (Parameter Lock)**

Set it to "12" to disable "parameter change".

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_04	Para. Lock	Parameter lock	0 ~ 255		0

**4) PAR\_05 (Password)**

When user put any four-digit number except "0" and cycle the power, only Display group will appear. Press [Mode] key and PAR\_05 "Password" will be directed. If the right password is entered, all other groups can be accessed and adjustable. To clear the password, set it to "0". When you forget the password, enter "5052". It is the master password and it resets the password to "0".

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_05	Password	Password	0 ~ 9999		0

### 6.3.3 Motor parameters setting

#### 1) PAR\_07(Motor rating setting) / PAR\_08(Motor cap. selection of user)

Select the motor rating. Its factory default value is the same as inverter capacity. If this is set, motor parameters are automatically set. These are designed to fit for LG-OTIS vector motor. When other makers' motor is used, program the motor parameters properly. When using a motor having a rating not specified in this code, select "User Define". Then, PAR\_08 will be displayed. Enter motor rating in this code. Then, enter motor parameters (PAR\_17 ~ PAR\_22) in the name plate and perform Auto-tuning to gain proper parameters before use.

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_07	Motor select	Motor rating select	2.2 ~ 500.0 User Define	kW	Same as inverter rating
PAR_08	UserMotorSel	Motor cap. Selection of User	0.7 ~ 500.0	kW	5.5

#### 2) PAR\_09 (Motor cooling method)

Select the cooling method of the motor to use. 'Motor cooling method' is used to check if the motor is currently overloaded or not. The self-cooled motor should be set to 'Self-Cool' and the forced cooled motor to 'Forced-Cool'.

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_09	Cooling Mtd	Motor Cooling method	Forced-cool Self-cool		Forced-cool

#### 3) Encoder parameters (PAR\_10 ~ 13: Pulse number of encoder, direction, error detection, LPF)

Enter the pulse number of encoder mounted on the motor shaft at the **PAR\_10 (the pulse number of encoder)**. If **PAR\_12(Encoder error check enable)** is set to 'Yes', Encoder error signal is detected and then triggers fault alarm in the case of the wire cut or the miswiring. But, **for open collector type encoder, it is unable to detect the encoder error, therefore PAR\_12 should be set to 'No'**. In case the wiring for encoder (A, B phase) or inverter output (U, V, W) is changed, 'Enc AB Chgd' message is shown during the auto-tuning operation. In this case, **PAR\_11 (Enc Dir Set)** can be changed without changing the wiring of pulse encoder. If encoder signal is mixed with electromagnetic noise signal, encoder signal may be less affected by the electromagnetic noise signal by adjusting **PAR\_13 (Encoder LPF Time Constant)**.

Code	LCD display	Description	Setting range	Factory setting
PAR_11	Enc Dir Set	Encoder direction setting	A Phase Lead/B Phase Lead	A Phase Lead

Setting	Description	Encoder pulse (In FWD RUN)
A Phase Lead	A phase leads in FWD rotation. B phase leads in REV rotation.	<p>The diagram shows two square wave pulses, A and B. Pulse A starts at a higher level than pulse B, indicating that phase A leads phase B during forward rotation.</p>
B Phase Lead	B phase leads in FWD rotation. A phase leads in REV rotation.	<p>The diagram shows two square wave pulses, A and B. Pulse B starts at a higher level than pulse A, indicating that phase B leads phase A during forward rotation.</p>

If you set "Enc Err Chk" of PAR\_12 to "Yes", when there is disconnection or misconnection of encoder, encoder error

is detected and show the encoder abnormality sign. In the case of open collector method of encoder, it isn't possible to detect encoder error. So set PAR\_12 to "No".

Noise from encoder input will be reduced by adjusting PAR\_13 Encoder LPF time constant.

Improper setting of encoder parameters may deteriorate accurate speed control and lead to "overcurrent" or "overvoltage" trips. Refer to chapter 9 "Troubleshooting".

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_10	Enc Pulse	Number of encoder pulse	360 ~ 4096		1024
PAR_12	Enc Err Chk	Encoder error check	Yes No		Yes
PAR_13	Enc LPF	Encoder LPF time constant	0 ~ 100	ms	1

### 6.3.4 Encoder S/W error detection (PAR\_14 ~ 15: Encoder error detection time, encoder error reference speed)

To achieve correct motor speed detection and control using encoder, proper wiring of encoder and motor should be preceded. If operation is continued with faulty wiring of Encoder/Motor, overcurrent flows to the motor, damaging the motor. Therefore, encoder should have functions to detect encoder input error and wrong wiring.

SV-iV5 can monitor encoder H/W error by setting PAR\_12 to "Yes" and it monitors encoder pulse signal input status to detect H/W faults such as encoder disconnection error. However, wrong wiring error cannot be detected with this function. In this case, perform "Rotational Auto-tuning". Set PAR\_24 (AutoTuneType) to "Rotational" and perform Encoder Test. Then wiring problem can be detected by applying voltage and checking speed detection level while motor is running.


There are some loads (ex. Elevator) performing Encoder Test described above is difficult. To solve this fault, iV5 adopts the following functions to detect S/W faults.

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_14	EncFaultTime	Encoder error detection time	0.00 ~ 10.00	sec	0.00
PAR_15	EncFaultPerc	Encoder error reference speed	0.0 ~ 50.0	%	25.0
PAR_21	Rated-Slip	Motor rated slip	10 ~ 250	rpm	

When encoder/motor wiring is reversed, motor cannot perform acceleration due to overcurrent. Encoder S/W error detection is adopted to detect the errors such as wrong wiring and incorrect pulse input during normal operation, not during Auto-tuning. Inverter determines encoder error if motor speed is not accelerated proportional to operating time and target speed after PAR\_14 EncFaultTime elapses and polarity does not match.

To activate S/W error detection function, set CON\_01 = Speed, Auto Tuning is not selected and set EncFaultTime except 0. If run command is removed before "EncFaultTime" elapses or acceleration is turned to deceleration due to target speed change, inverter cannot detect encoder S/W error. Inverter determines encoder S/W error by comparing motor speed and Target speed X EncFaultPerc while operation status is acceleration after EncFaultTime elapses.

Encoder S/W error detection is performed only once after operation starts and activates when target speed becomes twice the rated slip. For example, when target speed is 500(rpm) and rated slip is 40(rpm), the detection active level is 80(rpm).

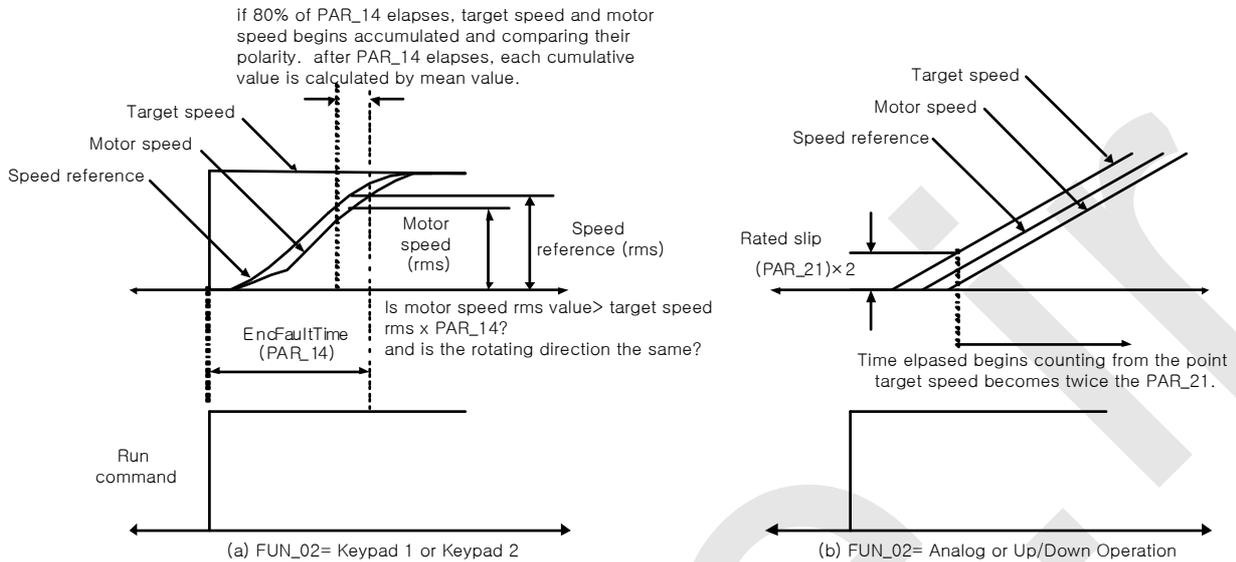

### 6.3.5 Auto-tuning

The motor parameters for the Vector Control are autotuned by Starvert-iV5. The stator resistance, Stator Inductance, Leakage Inductance and Rotor time constant are found and saved. User can select the type of Auto-tuning in Rotational or Standstill mode.

#### 1) Motor and encoder parameters setting for auto-tuning

The following parameters should be set according to motor nameplate to find motor parameters correctly.

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_07	Motor Select	Motor capacity selection	2.2 ~ 375.0 User Define		5.5
PAR_08	UserMotorSel	Motor cap. selection of USER	0.7 ~ 500.0		5.5
PAR_10	Enc Pulse	Pulse no. of encoder	360 ~ 4096		1024
PAR_17	Base Speed	Motor base speed	100.0 ~ 3600.0	rpm	1800.0
PAR_18	Rated Volt	Motor rated voltage	120 ~ 560	V	220 or 440
PAR_19	Pole Number	Motor number of poles	2 ~ 12		4
PAR_20	Efficiency	Motor efficiency	0.0 ~ 100.0	%	
PAR_21	Rated-Slip	Motor rated slip	10 ~ 250	rpm	
PAR_22	Rated-Curr	Motor rated current	1.0 ~ 2000.0	A	

**PAR\_17 "Motor base speed"** is the frequency inverter outputs its rated voltage. It is to be set within the range of Motor Max speed. **Set motor speed and rated voltage according to motor rating.** When standard motor is

used, 60Hz (1800rpm) is the normal rating. The base speed of motor is

$$rpm = \frac{120 \times \text{Base Frequency}}{\text{Pole Number}}$$

In the case of standard motor,  $1800rpm = \frac{120 \times 60Hz}{4}$

#### **PAR\_18 "Motor rated voltage"**

**For** 200V class inverters, factory default is 220(V) and for 400V class is 440(V). When input voltage is 380(V), change it to 380V. This value is input to Voltage controller and used to prevent voltage saturation. It should be set correctly because it affects Flux current value during Auto-tuning.

**PAR\_20 "Motor efficiency" should be entered for** (PAR\_23[AutoTuneType] : StandStill), not needed for (PAR\_23 [AutoTuneType] : Rotational).

#### **PAR\_21 "Motor rated slip"**

It is calculated by Motor speed – Motor nameplate rated speed. For example, Motor speed is 1800(rpm) with 1740(rpm) rated speed. Then, Motor rated slip would be 60(rpm).

2) Rotational auto-tuning

2.1) Precaution

 <span style="font-size: 24px; font-weight: bold; margin-left: 10px;">CAUTION</span>
<p>Be sure to remove the load connected to the motor shaft before performing rotational auto-tuning. Otherwise, it may lead to damage to the motor or bodily injury. DB resistor should be installed because the inverter repeats abrupt Accel/Decel many times to find the motor constant (Tr) during tuning.</p>

2.2) Parameter setting

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_24	AutoTuneType	Auto tuning type selection	Rotational StandStill		Rotational
PAR_25	Auto Tuning	Auto tuning range setting	None ALL1 ALL2 Encoder Test Rs Tuning Lsigma Flux Curr Ls Tuning Tr Tuning		None
PAR_26	Tune Torque	Tuning Torque	10.0 ~ 100.0	%	70
PAR_35	Inertia Tune	Selection of motor inertia tuning	No/Yes		No
PAR_37	J Spd Time	Acc./Dec. time of inertial tuning	0.500 ~ 10.000	sec	0.500
PAR_38	Inertia LPF	Inertia LPF	0.010 ~ 50.000	ms	0.100

There are 9 types of auto-tuning selection for Rotational mode.

- ALL2: Rs → Lsigma → Flux Current → Ls → Tr → Inertia
- ALL1: Encoder test → Perform ALL2

Inertial Tuning will be displayed when PAR\_35 is Yes.

Rs, Lsigma, Flux Current, Ls, Tr, Inertia: Perform each parameter separately. Tr follows Rs, Ls auto-tuning to find exact value. To save tuning time, increase PAR\_25 "Tuning torque for Auto-tuning" when load inertia is high during Tr tuning. FWD/REV LED is blinking during auto-tuning. It is based on 1800 rpm of base speed.

Auto-tuning type	Description
None	No Operation
ALL1	Rs, L I Flux, Ls, Tr are tuned continuously after Encoder test
ALL2	Rs, L I Flux, Ls, Tr are tuned continuously except Encoder Test
Encoder Test	Encoder Test Only The motor is rotating at 1500 rpm in forward direction and the encoder wiring status is checked.
Rs Tuning	Rs tuning Only. The stator resistance is tuned at standstill.
Lsigma	Lsigma tuning Only. The Leakage Inductance is tuned at standstill.

Auto-tuning type	Description
Flux Curr	Flux current Only. The motor is rotating at 1500 rpm and finds Flux current.
Ls Tuning	Ls Only. The motor is rotating at 1500 rpm and finds Rotor Inductance.
Tr Tuning	Tr Only The motor is ramping UP and DOWN continuously. But tuning time can vary. It should be autotuned after Rs, Lsigma and Ls.
Inertia Tuning	It finds Inertial constant after operating motor to forward/reverse operation with one third base speed.

### 2.3) Rotational auto-tuning procedure

LCD display	Description	Tuning time
PAR ▶ AutoTuneType 24 Rotational	Set it to " <b>Rotational</b> ".	-
PAR ▶ Auto tuning 25 ALL1	Auto-tuning starts when it is set to " <b>ALL1</b> ".	-
PAR ▶ Auto tuning 25 Enc Testing	Checks whether the encoder wiring is properly done and an encoder works well by rotating the motor at base speed in forward direction.	30~35(Sec)
PAR ▶ Auto tuning 25 Rs Tuning	Stator resistance (Rs) is measured without rotating the motor.	10~20(Sec)
PAR ▶ Auto tuning 25 sL Tuning	The leakage inductance (sL) of the motor is measured without rotating the motor.	5 ~ 20(Sec)
PAR ▶ Auto tuning 25 IF Tuning	The flux current (IF) is measured by rotating the motor at base speed.	30~60(Sec)
PAR ▶ Auto tuning 25 Ls Tuning	Stator self-inductance (Ls) is measured by rotating the motor at base speed.	50~60(Sec)
PAR ▶ Auto tuning 25 Tr Tuning	Accel/Decel is performed repeatedly to find motor constant (Tr) so that DB Resistor should be connected before starting tuning. Otherwise, "Over Voltage " trip will occur.	20~60(Sec)
PAR ▶ Auto tuning 25 None	When auto-tuning is complete successfully, "None" is displayed. If error occurs during auto-tuning, "[ ] Error" is displayed. In this case, verify motor parameters and encoder setting is done properly and redo the auto-	<b>Total: 3 ~ 5 (Min.)</b>

LCD display	Description	Tuning time
<div style="border: 1px solid black; padding: 5px; display: inline-block;">           PAR ▶ Auto tuning            25     [[]] Error         </div>	tuning. If the problem persists, contact LS representative.	

### 3) Standstill auto tuning

#### 3.1) Precaution

Be sure to lock the motor shaft using magnetic brake to find motor parameters correctly.

#### 3.2) Parameter setting

	LCD display	Description	Setting range	Unit	Factory setting
PAR_23	AutoTuneType	Auto tuning type selection	Rotational StandStill		<b>StandStill</b>
PAR_24	Auto Tuning	Auto tuning range setting	None ALL1 Rs Tuning Lsigma If/Tr/Ls Tune Inertia Tuning		None

There are 4 modes for Standstill auto-tuning.

ALL1: Rs→ Lsigma→ If→ Ls→Tr

Rs Tuning, Lsigma, If/Tr/Ls Tune: Perform each parameter separately. Encoder test is not performed. PAR\_25 Inertia Tuning will be displayed when PAR\_35 is Yes.

Auto-tuning type	Description
None	No Operation
ALL1	Rs, L     If/Tr/Ls are tuned continuously except Encoder Test
Rs Tuning	Rs tuning Only. The stator resistance is tuned at standstill.
Lsigma	L     tuning Only. The Leakage Inductance is tuned at standstill.
If/Tr/Ls Tune	Finds If/Tr/Ls by applying DC current pulse. It finds magnetizing current, secondary constant of motor and first inductance concurrently.
Inertia Tuning	It finds Inertial constant after operating motor to forward/reverse operation with one third base speed.

- **FWD/REV LEDs are blinking during auto-tuning.**

## 3.3) StandStill type auto-tuning procedure

LCD Display	Description	Tuning Time
PAR ▶ AutoTuneType 24 StandStill	Set the auto-tuning type to "Standstill".	-
PAR ▶ Auto tuning 25 ALL1	Auto-tuning starts if <b>ALL1</b> is set.	-
PAR ▶ Auto tuning 25 Rs Tuning	Stator resistance (Rs) is measured without rotating the motor.	20-30 Sec
PAR ▶ Auto tuning 25 sL Tuning	The leakage inductance (sL) of the motor is measured without rotating the motor.	5-10 Sec
PAR ▶ Auto tuning 25 If/Tr/Ls Tuning	Flux current (IF), rotor time constant ( $\tau_r$ ) and stator self-inductance (Ls) is measured simultaneously without rotating the motor.	15-60 Sec
PAR ▶ Auto tuning 25 None	When auto-tuning is complete successfully, "None" is displayed. If error occurs during auto-tuning, "[[] Error" is displayed. In this case, verify motor parameters and encoder setting is done properly and redo the auto-tuning. If the problem persists, contact LS representative.	<b>Total: 1-2 minutes</b>
PAR ▶ Auto tuning 25 [[] Error		

**4) Motor parameters**

The following parameters are found during Auto-tuning.

Motor parameters described below are entered based on LG-OTIS vector motor.

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_27	Flux-Curr	Motor flux current	0.0 ~ 70% of motor rated current	A	
PAR_28	Tr	Rotor time constant	30 ~ 3000	ms	
PAR_29	Ls	Leakage inductance	0.00 ~ 500.00	mH	
PAR_30	Lsigma	Leakage coefficient	0.00 ~ 100.00	mH	
PAR_31	Rs	Stator resistance	0.000 ~ 5.000	ohm	
PAR_36	Inertia	Motor inertia coefficient	0.001 ~ 60.000	kg · m <sup>2</sup>	

Additional functions are as follows;

- User can stop tuning during tuning using [STOP] key.
- In case Encoder test is failed, inverter does not conduct Rs tuning and displays "Encoder Err".  
If this happens, press [Reset] key and retry Encoder test.
- Tr Tuning result can be slightly different for times. Perform it couple of times.

### 5) Auto tuning error message

LCD Display	Description and Solution
PAR ▶ Auto tuning 25 Enc Error	Displayed when phase loss of A or B occurs and/or error between reference speed and encoder feedback speed exceeds motor rated slip. Check whether wiring of encoder power (PE, GE) and A/B phase is conducted correctly.
PAR ▶ Auto tuning 25 Enc AB Chgd	Displayed in case of reverse wiring of phase A/B or U, V, W. Wire the U, V, W in a correct order or change the encoder direction setting to "B Phase Lead" in PAR_11.
PAR ▶ Auto tuning 25 Rs Error	Displayed when RS value is greater than 5[Ω] or less than 0.002[Ω]. Check for wiring of inverter and motor and motor damage. It may occur when motor rating is much lower than that of inverter.
PAR ▶ Auto tuning 25 sL Error	Displayed when sL is higher than 100[mH]. Check for wiring of inverter and motor and motor damage.
PAR ▶ Auto tuning 25 IF Error	Displayed when motor rpm exceeds 1650 rpm (1800 rpm rated motor) during flux current calculation or flux current is not measured for a long time. Check for wiring of inverter and motor and number of motor phase.
PAR ▶ Auto tuning 25 Ls Error	Displayed when motor rpm exceeds 1650 rpm (1800 rpm rated motor) during Ls calculation or Ls is not measured for a long time. Check for wiring of inverter and motor and number of motor phase.
PAR ▶ Auto tuning 25 PAR 27 DOWN	Displayed when initial set value of PAR_27 is set too high. Repeat the calculation after lowering 30% to initial value.
PAR ▶ Auto tuning 25 PAR 27 UP	Displayed when initial set value of PAR_27 is set too low. Repeat the calculation after increasing 30% to initial value.

### 6) Input voltage setting

PAR\_23's voltage is used for referenced value to occur the low voltage error through the calculation as below.

(200V Class)

$$V_{dc}(LVT\ ON) = \sqrt{2} \times PAR\_23 \times 0.707$$

$$V_{dc}(LVT\ OFF) = \sqrt{2} \times PAR\_23 \times 0.813$$

(400V Class)

$$V_{dc}(LVT\ ON) = \sqrt{2} \times PAR\_23 \times 0.745$$

$$V_{dc}(LVT\ OFF) = \sqrt{2} \times PAR\_23 \times 0.856$$

$V_{dc}(LVT\ ON)$ : Low voltage error is occurred under condition of less than PAR\_23's voltage.

$V_{dc}(LVT\ OFF)$ : Low voltage error is released above condition of PAR\_23's voltage.

Difference of voltage ripple in DC part will be bigger when the output of inverter is bigger in an open-phase of inverter.

Then, input voltage is lower, low voltage trip is occurred by the minimum limit of ripple. Set the real input voltage to prevent low voltage and occurring the Input open-phase error. Set value of LVT level in PAR\_23 is 180Vdc in a range of above 180V in 200V class and 360Vdc in a range of above 342V in 400V class.

## 6.4 Function group (FUN\_[][])

### 6.4.1 Jump code (FUN\_00)

Jumping directly to any parameter code can be accomplished using FUN\_00 [Jump code].

Press [PROG] key first and set 2 using [▲(Up)], [▼(Down)], [SHITF/ESC] and press [ENT] key to jump to FUN\_02. If the desired code cannot be accessed or void, it automatically jumps to closest code.



After jumping, it is available to jump to other codes using [▲(Up)], [▼(Down)].

### 6.4.2 Operating method select

#### 1) FUN\_01(RUN/STOP source select)

There are four methods for issuing RUN/STOP command of the motor.

- Terminal 1/ Terminal 2: Digital input of the FX/RX terminal (Terminal 1 is factory default.)
- Keypad: [FWD], [REV], [STOP] key on the keypad
- Option: using Option card. (Factory setting: Terminal 1)
- Built-in RS485 communication

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_01	Run/Stop Src	RUN/STOP source select	Terminal 1 Terminal 2 Keypad Option Int485		Terminal 1

Difference between Terminal 1 and Terminal 2 setting

Run/Stop source select	Terminal ON/OFF	FWD/REV select	
Terminal 1	FX	ON	FWD run command
		OFF	Stop command
	RX	ON	REV run command
		OFF	Stop command
Terminal 2	FX	ON	Run command
		OFF	Stop command
	RX	ON	REV rotation
		OFF	FWD rotation

For Analog speed setting, applying (+) Voltage marks FWD Run command and (-) voltage REV Run command.

Analog speed setting range	FX / FWD / Option FWD	RX / REV / Option REV
0 ~ +10 V	Forward direction	Reverse direction
-10 ~ 0 V	Reverse direction	Forward direction

**2) FUN\_02 (Speed setting method)**

There are four methods to set operating speed.

- Keypad 1/Keypad 2: Digital setting via keypad
- Analog: speed setting via analog input terminal define
- Option: speed setting via option card

To change speed reference in Keypad 1 method, change the value in FUN\_12 Speed 0 using [▲(Up)], [▼(Down)] key and press [ENT] key to enter the value into memory. However, in Keypad 2, the changed value is reflected real-time without pressing [ENT] key.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_02	Spd Ref Src	Speed setting method	Analog Keypad 1 Keypad 2 Option Int485		Keypad 1

**3) FUN\_03 (Stop method)**

This determines the stop mode of the motor. If this is set to 'Decel' and then stop command is ON, the motor decelerates to a stop within the deceleration time set at FUN\_41 (Deceleration Time 1). But, if the motor does not stop within the deceleration time, it is freely rotating after the deceleration time. If this is set to 'Free-run' and then stop command is ON, the motor freely rotates immediately.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_03	Stop Mode	Stop method	Decel Free-run		Decel

**6.4.3 Motor max speed setting**

Maximum value of the speed command to the motor is set to the sum of setting speed, reference speed in Draw control, reference speed in Process PID control and reference speed in Droop control. In this case, final speed command output is limited to the maximum speed command to the motor.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_04	Max Speed	Max. motor speed	400.0 ~ 3600.0	rpm	1800.0

**6.4.4 Motor min speed setting**

This parameter is displayed when CON\_01 is Sensorless. Inverter not starts the operation when if the speed reference is smaller than this parameter even though run command is inputted. If smaller parameter value than this parameter is inputted, inverter will stop the operation. This function is useful when sensorless control is unstable at low speed.

### 6.4.5 Multi-step speed and Dwell speed setting methods

#### 1) FUN\_12 ~ 19(Multi-step speed 0 ~ 7) / FUN\_20(JOG speed command)

If the multi-function terminal is selected as a multi-step speed setting or jog operation, the speed command is determined by the combination of multi-function terminals P1 to P7 and jog speed command.

Multi-speed command by the combination of P1, P2 and P3 is generated as follows. In case multi-step speed 0 is selected (P1, P2 and P3 all are OFF), One of the speed commands from the keypad, analog voltage input and option board is fed into the inverter. In case P4 is ON, it ignores the speed command selection by other terminals and jog operation command has a priority. In this case, the motor is operated at the speed of FUN\_20 (Jog speed command).

P1	P2	P3	P4	Setting speed
OFF	OFF	OFF	OFF	Speed command source is selected at FUN_02.
ON	OFF	OFF	OFF	FUN_13
OFF	ON	OFF	OFF	FUN_14
ON	ON	OFF	OFF	FUN_15
OFF	OFF	ON	OFF	FUN_16
ON	OFF	ON	OFF	FUN_17
OFF	ON	ON	OFF	FUN_18
ON	ON	ON	OFF	FUN_19
X	X	X	ON	FUN_20 (JOG speed command)

The values of the multi-step speed command are shown below.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_12	Speed 0	Multi-step speed 0	0.0 ~ FUN_04	rpm	0.0
FUN_13	Speed 1	Multi-step speed 1	0.0 ~ FUN_04	rpm	0.0
FUN_14	Speed 2	Multi-step speed 2	0.0 ~ FUN_04	rpm	0.0
FUN_15	Speed 3	Multi-step speed 3	0.0 ~ FUN_04	rpm	0.0
FUN_16	Speed 4	Multi-step speed 4	0.0 ~ FUN_04	rpm	0.0
FUN_17	Speed 5	Multi-step speed 5	0.0 ~ FUN_04	rpm	0.0
FUN_18	Speed 6	Multi-step speed 6	0.0 ~ FUN_04	rpm	0.0
FUN_19	Speed 7	Multi-step speed 7	0.0 ~ FUN_04	rpm	0.0
FUN_20	Jog Speed	JOG speed	0.0 ~ FUN_04	rpm	100.0


- FUN\_04: Max. motor speed

2) FUN\_21(Dwell Speed), FUN\_22(Dwell Time)

Acceleration is instantly stopped and restarted before driving a heavy load such as hoists when selected.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_21	Dwell Speed	Dwell Speed	0.0 ~ FUN_04	rpm	100.0
FUN_22	Dwell Time	Dwell Time	0.00 ~ 100.00	sec	0.00

- FUN\_04: Maximum motor speed
- Dwell operation is disabled when FUN\_22 is set to "0".

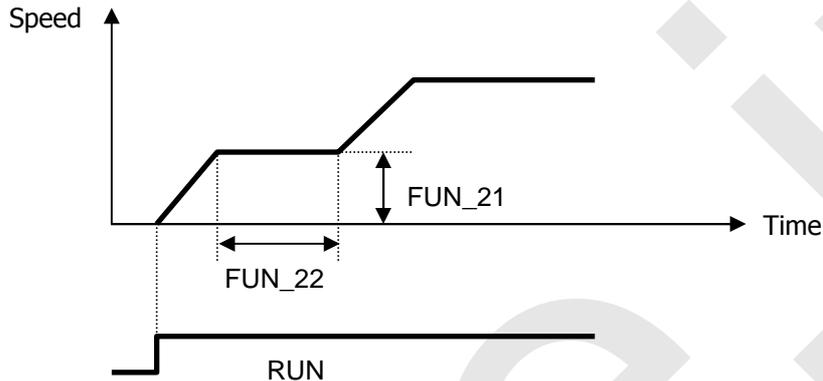


6.4.6 Accel/Decel pattern and time selection


1) FUN\_33 (Accel/Decel reference speed)

Acceleration time, deceleration time and BX time is set on the basis of the value at FUN\_33(Accel./decel. reference speed), which is 'Max speed' or 'Ref speed'.

**Setting example 1** if FUN\_33= "Max Speed", Max motor speed= 3000rpm and Operating speed= 1500rpm, Accel time= 5 sec, accel time from 0 (stop) to 1500rpm would be 2.5 sec.

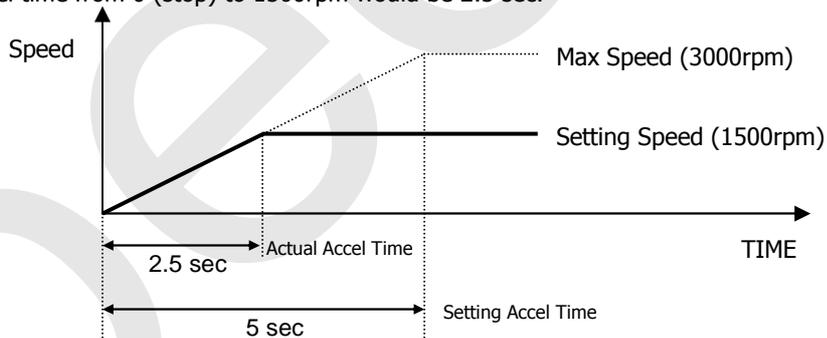

**Setting example 2** If FUN\_33 is set to 'Ref Speed' and speed command and acceleration time is set to 500rpm and 1500rpm for 5 seconds, respectively, it takes 5 seconds to accelerate from the standstill to 1500rpm.

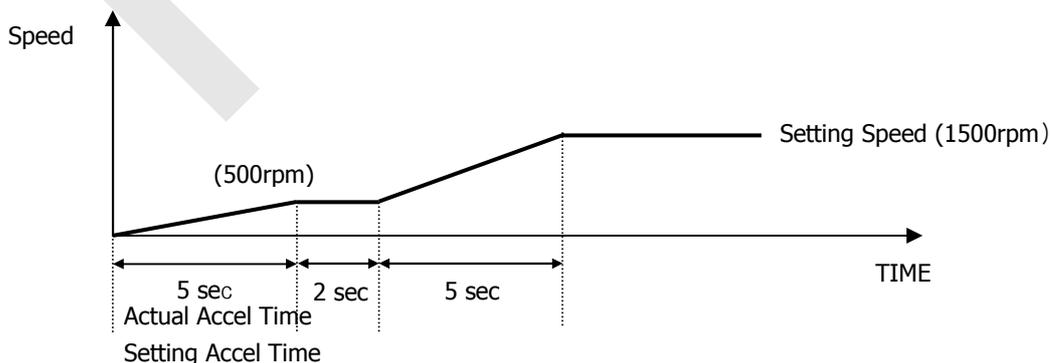

2) FUN\_41 ~ 48(Accel/Decel time 1 ~ 4)


Accel/Decel time 1-4 can be set in SV-iv5 as shown below.

(The factory default value is different from the capacity of inverter.)

Code	LCD display	Description	Setting range	Unit	Factory default value			
					2.2~37 kW	45~75 kW	90~220 kW	280~375 kW
FUN_41	Acc Time-1	Acceleration time 1	0.00 ~ 6000.0	sec	2.00	10.00	20.00	30.00
FUN_42	Dec Time-1	Deceleration time 1	0.00 ~ 6000.0	sec	2.00	10.00	20.00	30.00
FUN_43	Acc Time-2	Acceleration time 2	0.00 ~ 6000.0	sec	3.00	12.00	24.00	35.00
FUN_44	Dec Time-2	Deceleration time 2	0.00 ~ 6000.0	sec	3.00	12.00	24.00	35.00
FUN_45	Acc Time-3	Acceleration time 3	0.00 ~ 6000.0	sec	4.00	14.00	28.00	40.00
FUN_46	Dec Time-3	Deceleration time 3	0.00 ~ 6000.0	sec	4.00	14.00	28.00	40.00
FUN_47	Acc Time-4	Acceleration time 4	0.00 ~ 6000.0	sec	5.00	16.00	32.00	45.00
FUN_48	Dec Time-4	Deceleration time 4	0.00 ~ 6000.0	sec	5.00	16.00	32.00	45.00

(Example) Programming P1, P2 as Xcel-L and Xcel-H

Code	LCD display	Description	Setting range	Unit	Factory setting
DIO_01	P1 define	Definition of P1 input			Xcel – L
DIO_02	P2 define	Definition of P2 input			Xcel – H

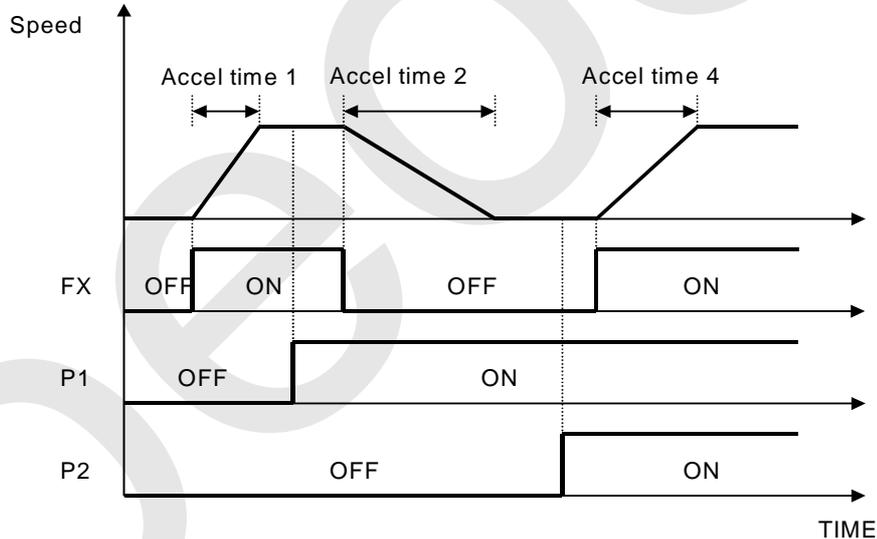


P1 (Xcel-L)	P2 (Xcel-H)	P3 (SoftStartCncl)	Accel/Decel time
OFF	OFF	OFF	Accel/Decel 1
ON	OFF	OFF	Accel/Decel 2
OFF	ON	OFF	Accel/Decel 3
ON	ON	OFF	Accel/Decel 4
X	X	ON	Max Accel/Decel

### 3) FUN\_36 ~ 39(S curve ratio during Accel/Decel 1 ~ 2)

The ramping pattern of the Linear and S Curve could be used by setting the parameters below. S Curve pattern is used to control the acceleration of the machine as linear to minimize the shock at the start. The parameters, FUN\_36 ~ 39 determine the rate of S Curve pattern as in the figure below. FUN\_36, 37 are applied in the acceleration and FUN\_38, 39 in the deceleration.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_36	Acc S Start	Curve ratio at the beginning of acceleration	0.0 ~ 50.0	%	0.0
FUN_37	Acc S End	Curve ratio at the end of acceleration	0.0 ~ 50.0	%	0.0
FUN_38	Dec S Start	Curve ratio at the beginning of deceleration	0.0 ~ 50.0	%	0.0
FUN_39	Dec S End	Curve ratio at the end of deceleration	0.0 ~ 50.0	%	0.0

- **Programming example of S curve pattern**

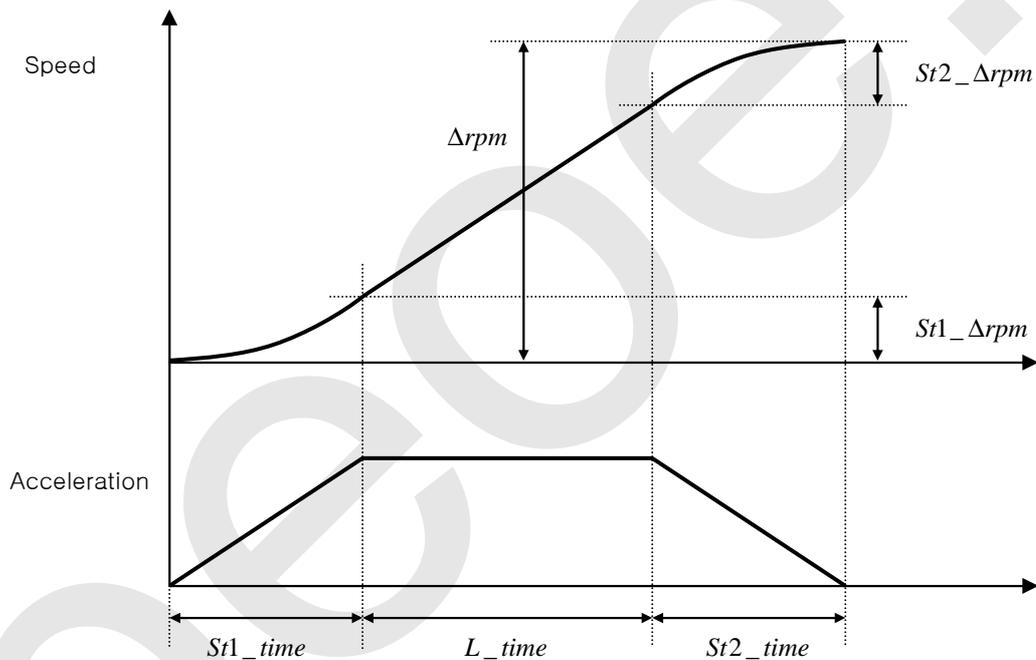

- **Basic equation**

$$St1\_time = AccTime * (FUN\_36 / 50.0\%)$$

$$St2\_time = AccTime * (FUN\_37 / 50.0\%)$$

$$St1\_ \Delta rpm = St1\_time * (MaxSpeed / AccTime) * 0.5$$

$$St2\_ \Delta rpm = St2\_time * (MaxSpeed / AccTime) * 0.5$$

● **Calculation 1**

$$\Delta rpm \geq St1\_ \Delta rpm + St2\_ \Delta rpm$$

$\Delta rpm$  = The difference between the current speed and the target speed

$$L\_ time = (\Delta rpm - St1\_ \Delta rpm - St2\_ \Delta rpm) * (AccTime / MaxSpeed)$$

$$Effective\ Acceleration\ Time = St1\_ time + L\_ time + St2\_ time$$

● **Calculation 2**

$$\Delta rpm < St1\_ \Delta rpm + St2\_ \Delta rpm$$

$$St1'\_ time = \sqrt{\{ [\Delta rpm * AccTime^2 * St1\_ time^2] / [ 25 * MaxSpeed * (St1\_ time + St2\_ time) ] \}}$$

$$St2'\_ time = \sqrt{\{ [\Delta rpm * AccTime^2 * St2\_ time^2] / [ 25 * MaxSpeed * (St1\_ time + St2\_ time) ] \}}$$

$$Effective\ Acceleration\ Time = St1'\_ time + St2'\_ time$$

$\Delta rpm$ : Speed difference

$MaxSpeed$  : Maximum speed ( FUN\_04 )

$AccTime$  : Set acceleration time (FUN\_40, 42, 44, 46)

$St1\_ \Delta rpm$ : Acc S Start ST (%) of FUN\_36 at the time of acceleration,  
Dec S End ST (%) of FUN\_39 at the time of deceleration

$St2\_ \Delta rpm$ : Acc S End ST (%) of FUN\_37 at the time of acceleration,  
Dec S Start ST (%) of FUN\_38 at the time of deceleration

$St1\_ time$ : The time when  $St1\_ \Delta rpm$  is formed.

$St2\_ time$ : The time when  $St2\_ \Delta rpm$  is formed.

**4) FUN\_49 (Deceleration time for zero speed selection) / FUN\_50 (Zero speed deceleration time)**

This is the time when the motor decelerates from the arbitrary speed to 0 rpm in speed. This is valid only when FUN\_48 is set to 'Yes'. If 'No' is set, the set deceleration time is applied.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_49	Use 0 Dec T	Deceleration time selection for zero speed	No/Yes		No
FUN_50	0 Dec Time	Deceleration time for zero speed	0.00~6000.0	sec	0.00

**5) FUN\_52(Decel time when BX is ON)**

When the motor should be stopped immediately in case of emergency, BX on the control circuit terminal can be used. When BX is ON, the motor decelerates to a stop within 'Emergency deceleration time' set at FUN\_51. But, if the motor does not stop within the deceleration time, it rotates freely after the deceleration time. If the motor is intended to stop at the instant BX is ON, FUN\_51 is set to '0'.


Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_52	BX Time	Deceleration time for emergency stop	0.0 ~ 6000.0	sec	0.0

### 6) FUN\_53 (Pre-excitation)

FUN\_52 (Motor Pre-excitation Time) can be used for the flux build-up in the induction motor to obtain the best control characteristic. FWD and REV LED blink concurrently during the time of pre-excitation.

- **FUN\_52 is activated only when FUN\_02(Spd Ref Sel) is set to Keypad1 or Keypad2.**

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_53	PreExct Time	Pre-excitation time	0 ~ 10000	ms	0

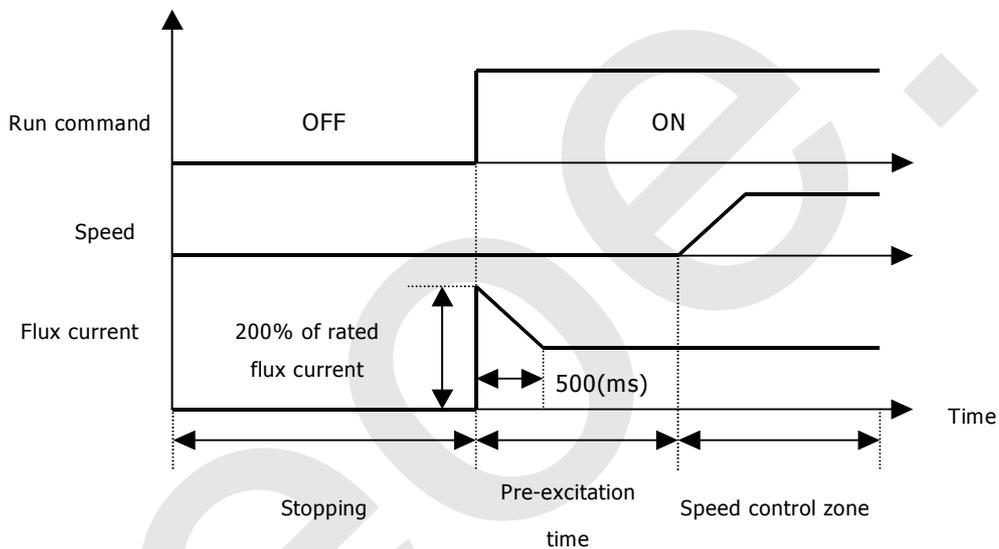

### 7) FUN\_54(Hold Time)

The motor maintains the zero speed for 'Motor Hold Time' after the motor decelerates to a stop.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_54	Hold Time	Motor Hold Time	100 ~ 10000	ms	1000


### 6.4.7 Electronic thermal (motor $I^2T$ ) selection

These functions are required when the motor should be protected against the overheat without installing the thermal relay between the inverter and the motor. If electronic thermal protection is ON, the inverter blocks the IGBT gating signals and issues the trip message.


Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_55	ETH Select	Electronic thermal selection	No Yes		No
FUN_56	ETH 1 Min	Electronic thermal level for 1 minute	FUN_57 ~ 200	%	150
FUN_57	ETH Cont	Electronic thermal level for continuous	50 ~ FUN_56 (up to 150%)	%	100
PAR_09	Cooling Mtd	Motor cooling method	Self-cool Forced-cool		Forced-cool

Electronic thermal protection level is set in % based on the '**Motor rated current**' at PAR\_22. '**1 min.level of electronic thermal**' at FUN\_56 is the current level which should be referred to when the motor is operated for a minute and the motor is estimated to be overheated. '**Continuous level of electronic thermal**' at FUN\_57 is the current level which should be referred to when the motor is operated continuously and the motor is estimated to be in thermal equilibrium. Continuous level is set to the motor rated current (100%) and should be less than '**1 min.level of electronic thermal**' at FUN\_56. PAR\_09 'Cooling type' should be set correctly to ensure the proper electronic thermal protection.

- Self-cool** : This should be set when cooling fan mounted on the motor shaft is used for cooling. The cooling performance is greatly reduced when the motor is operated at the low speed. Compared to high speed region, the motor is rapidly overheated at the low speed region even if the same current flows into it. So like the graph below, according to frequency, the allowable continuous current value of '**Continuous level of electronic thermal**' of FUN\_56 is reduced and electronic thermal function starts operating.
- Forced-cool** : This should be set when the cooling fan is powered by the separate power supply. '**Continuous level of electronic thermal**' at FUN\_57, which is allowable continuous current is applied, regardless of the operating frequency.

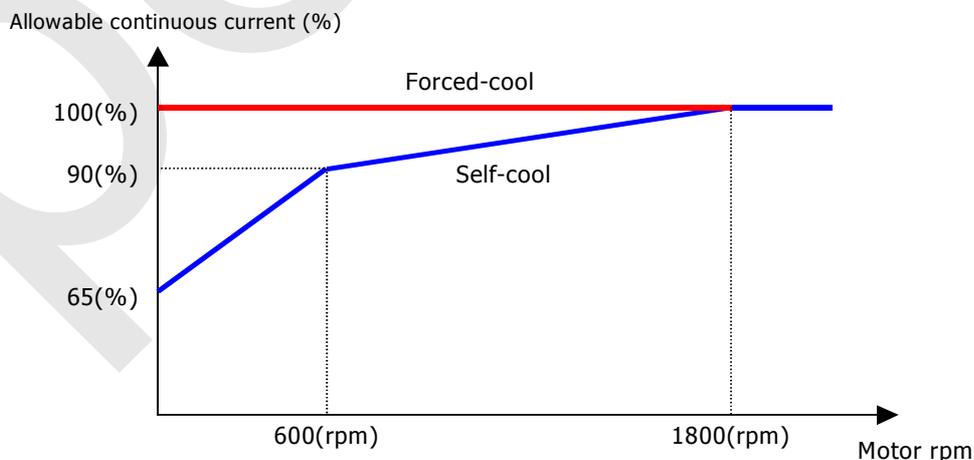

[The characteristic of allowable continuous current with respect to 4 pole, 60Hz motor]

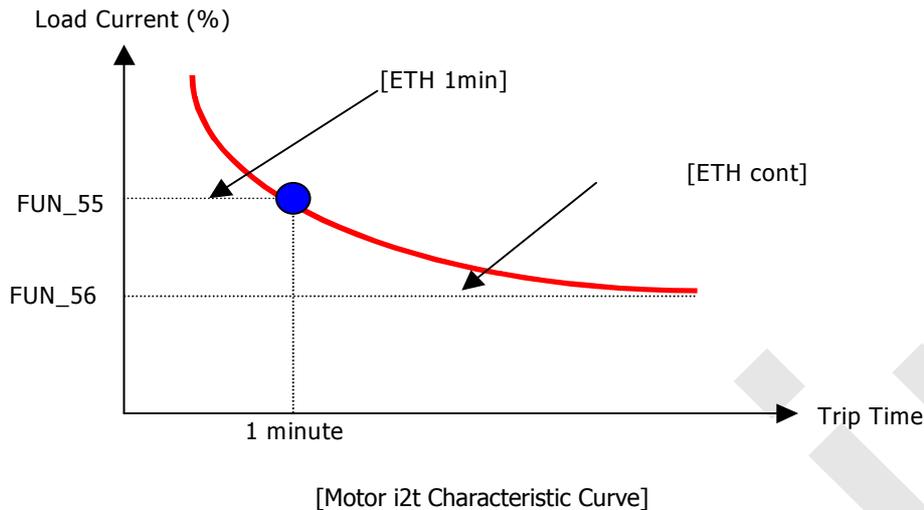

- The motor protection is possible by calculating and accumulating  $I^2t$  even in load variation and frequent run/stop.

### 6.4.8 Inverter switching frequency select

#### 1) FUN\_58 (Inverter switching frequency select)

This parameter affects the audible sound of the motor, noise emission from the inverter, inverter temperature, and leakage current. If the ambient temperature where the inverter is installed is high or other equipment may be affected by potential inverter noise, set this value lower. (setting range: 2.5 ~ 10.0 kHz).

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_58	PWM Freq	Switching frequency select		kHz	



#### 2) Setting range and factory setting of switching frequency

Voltage	Inverter capacity (kW)	Setting range (kHz)	Factory setting (kHz)
200V	2.2 ~ 22(kW)	2.5 ~ 10(kHz)	8(kHz)
	30/37(kW)	2.5 ~ 7(kHz)	5(kHz)
400V	2.2 ~ 22(kW)	2.5 ~ 10(kHz)	8(kHz)
	30 ~ 75(kW)	2.5 ~ 7(kHz)	5(kHz)
	90 ~ 132(kW)	2.5 ~ 5(kHz)	4(kHz)
	160/220(kW)	2.5 ~ 4(kHz)	4(kHz)
	280 ~ 375 (kW)	2(kHz)	2(kHz)

- **Continuous Operation Derating Information**

15kW-400V(MD) class model among 5.5 ~ 22kW-200/400V class MD type models applies the following load rating.

- ① Rated load classified by the switching frequency

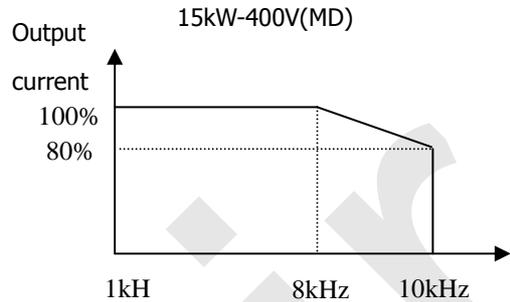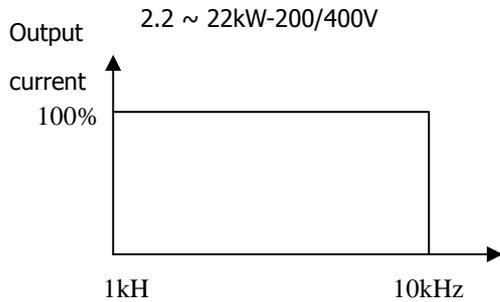

- ② The above graph is only applied when the inverter is operated in the allowable temperature. Pay attention to the air cooling when the inverter is installed in a panel box, and the inside temperature should be within an allowable temperature range.
- ③ This derating curve is based on inverter current rating when rated motor is connected.

### 6.4.9 Power ON start selection (FUN\_59)

In case 'No' is set, the inverter can be operated only if the terminal should be 'On' again after it is 'Off' once. In case 'Yes' is set, the inverter starts to run at the instant the power is supplied to the inverter if FX terminal input is 'On' or RX terminal input is 'On'. If the inverter starts to run while the motor is freely rotating, first, the motor decelerates to a stop and restart.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_59	Power-on Run	Power on start selection	Yes No		No



### CAUTION

Particular attention should be directed to this function due to potential hazard as motor starts to run suddenly upon applying AC input power.

### 6.4.10 Restart after fault reset

#### 1) FUN\_60 (Restart after fault rese)

In case 'No' is set, the inverter can be operated only if the terminal should be 'On' again after it is 'Off' once. In case 'Yes' is set, the inverter starts to run at the instant the inverter fault is cleared if FX terminal input is 'On' or RX terminal input is 'On'. At the time of the inverter trip, the motor start to coast to a stop because the inverter blocks the IGBT gating signals. If the inverter starts to run while the motor is freely rotating, first, the motor decelerates to a stop and restart. If set CON\_49 [Speed search] to bit 1 from previous bit 2, operation begin by speed search function when fault is reset.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_60	RST Restart	Restart after fault reset	Yes No		No

**CAUTION**

Take caution for this function. When FUN\_59 is set, motor runs immediately upon fault is reset.

**2) FUN\_61 (number of auto restart try) / FUN\_62 (delay time before auto restart)**

This function prevents the permanent stop of the inverter due to the trip. The inverter automatically resets the fault and restarts and continues to run after the fault occurs if the number of automatic restart is set and the inverter operation is possible.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_61	Retry Number	Number of auto restart try	0 ~ 10		0
FUN_62	Retry Delay	Delay time before Auto restart	0.0 ~ 60.0	sec	1.0

In case the inverter trip occurs, the inverter restarts by '**The number of automatic restart**' at FUN\_61. In case of the inverter trip, the inverter resets the fault automatically and waits for '**Delay time before automatic restart**' at FUN\_62 and restarts. The inverter will not restart any more, blocks the IGBT gating signals and issues the trip message if the inverter trip occurs more than '**The number of automatic restart**' at FUN\_61. For example, if inverter starts successfully by 'automatic restart' (and trip doesn't occur any more), 'the number of automatic restart' doesn't add. If it fails (trip occurs again) 1 is added based on the previous accumulated number. That is, the number is added continuously without the initialization.

The conditions for the initialization of 'the number of automatic restart'.

- The number automatic restart accumulated so far is initialized by turning the inverter power ON/OFF
- If the number of automatic restart reaches to the set value at FUN\_61, the automatic restart won't be conducted any more. Then push the reset key in loader forcefully for clearing trip so that the number of automatic restart will be initialized again and be increased from the beginning.

**CAUTION**

- Particular attention should be directed to this function as the inverter clears the fault automatically and motor suddenly restarts when trip occurs.
- Auto restart function is disabled when the following trips occur.
  - ① BX (Emergency stop)
  - ② Low Voltage
  - ③ Arm Short-U (V, W, DB)
  - ④ Fuse Open
  - ⑤ Ext Trip-B (External trip B)
  - ⑥ InvOver Heat (inverter overheated)
  - ⑦ MotOver Heat (Motor overheated)
  - ⑧ Encoder Err (Encoder error)
  - ⑨ Over Load (Overload trip)
  - ⑩ E-Thermal (Electronic thermal protection)



**CAUTION**

① FAN/MC PWR, FAN PWR (AC FAN and M/C power source fault)


- If trip does occur in 30 sec after restart, inverter adds the number of restart by one automatically and this cannot exceed setting value.

**6.4.11 Wait time for restart upon stop**

- Only active when FUN\_03 is set to 'Free-run' and operating method is 'Terminal'.
- With above condition, FUN\_63 (Restart Time) will be displayed and it is only operated in terminal operation.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_63	Restart Time	Wait time for Restart upon Stop	0.00 ~ 10.00	sec	0.00
FUN_03	Stop mode	Stop method	Decel <b>Free-run</b>		Decel

Even though restart command is input after stopping the operation, inverter does not run until FUN\_62 setting time elapses.

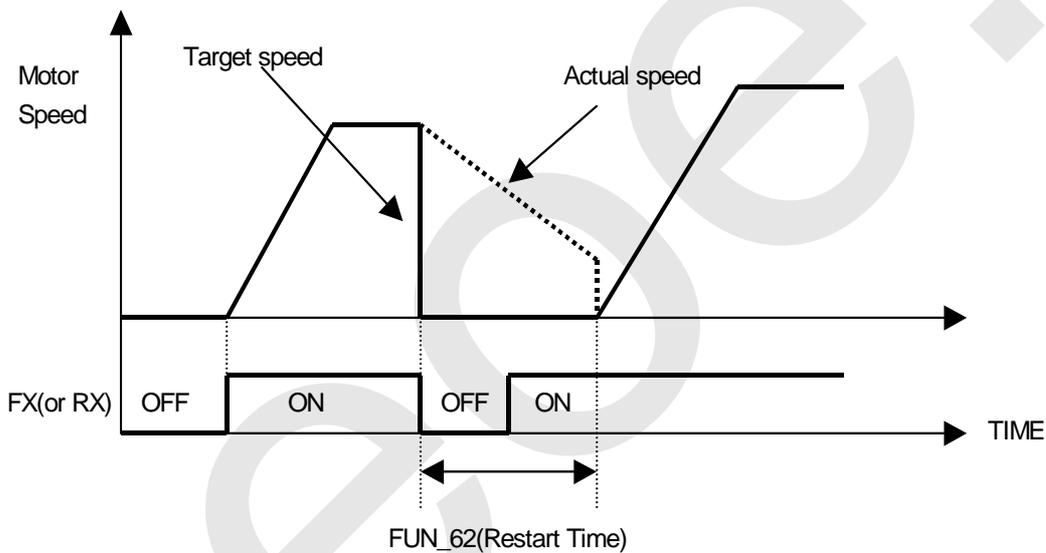

**6.4.12 Overspeed error detection**

- Inverter detects error if motor rpm exceeds its limit. User can set the detection level and time of overspeed.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_64	OverSpdLevel	Overspeed Detection Level	100.0 ~ 130.0	%	120.0
FUN_65	OverSpd Time	Overspeed Detection Time	0.00 ~ 2.00	sec	0.00


- FUN\_64 is based on 100% of FUN\_04(Max Speed).
- When motor speed exceeds FUN\_64 (Overspeed Detection Level) and FUN\_65(Overspeed Detection Time) elapses, overspeed error detection is activated.
- If FUN\_65 is set to 0.00(sec) and motor rpm exceeds FUN\_64, inverter immediately detects overspeed error.

### 6.4.13 Brake opening and closing setting

#### 1) FUN\_66(Brake opening time) / FUN\_67(Brake opening speed) / FUN\_68(Brake opening current) / FUN\_69(Brake closing time) / FUN\_70(Brake closing speed)

- It only operates when multi-aux output terminal(DIO\_41 ~ DIO\_43) is set to Brake Output.  
The motor brake is not opened during motor's Auto-tuning, so be sure to open the brake forcibly when you do the rotating type motor's Auto tuning.
- About Brake opening time, Multi-aux output terminal becomes on after passing initial excitation time of motor and it operates with the brake opening speed during set time.
- About Brake opening speed, Multi-aux output terminal becomes on after passing initial excitation time of motor and it operates with the set speed during brake opening time.
- Brake opening current value is set as the percentage of magnetic current of motor. The brake opening signal operates only after occurring more output current than set value.
- Brake closing time means the set time after multi-aux output terminal is off below the brake closing speed. Set more high brake closing time value than decelerating time between brake closing speed and 0.
- At the brake closing speed, multi-aux output terminal becomes off.
- If Backlash phenomenon occurs when the motor is stopping, increase the brake closing set value more and more until the Backlash phenomenon isn't occur anymore. At the same time, adjust also the brake closing time set value.

Code	Display	Description	Range	Unit	Default
FUN_66	BKOpen Time	Brake opening time	0.00 ~ 30.00	sec	0.00
FUN_67	BKOpen Spd	Brake opening speed	0.0 ~ 500.0	rpm	0.0
FUN_68	Release Curr	Brake opening current	0.0 ~ 150.0	%	20.0
FUN_69	BKClose Time	Brake closing time	0.00 ~ 30.00	sec	0.00
FUN_70	BKClose Spd	Brake closing speed	0.0 ~ 500.0	rpm	0.0

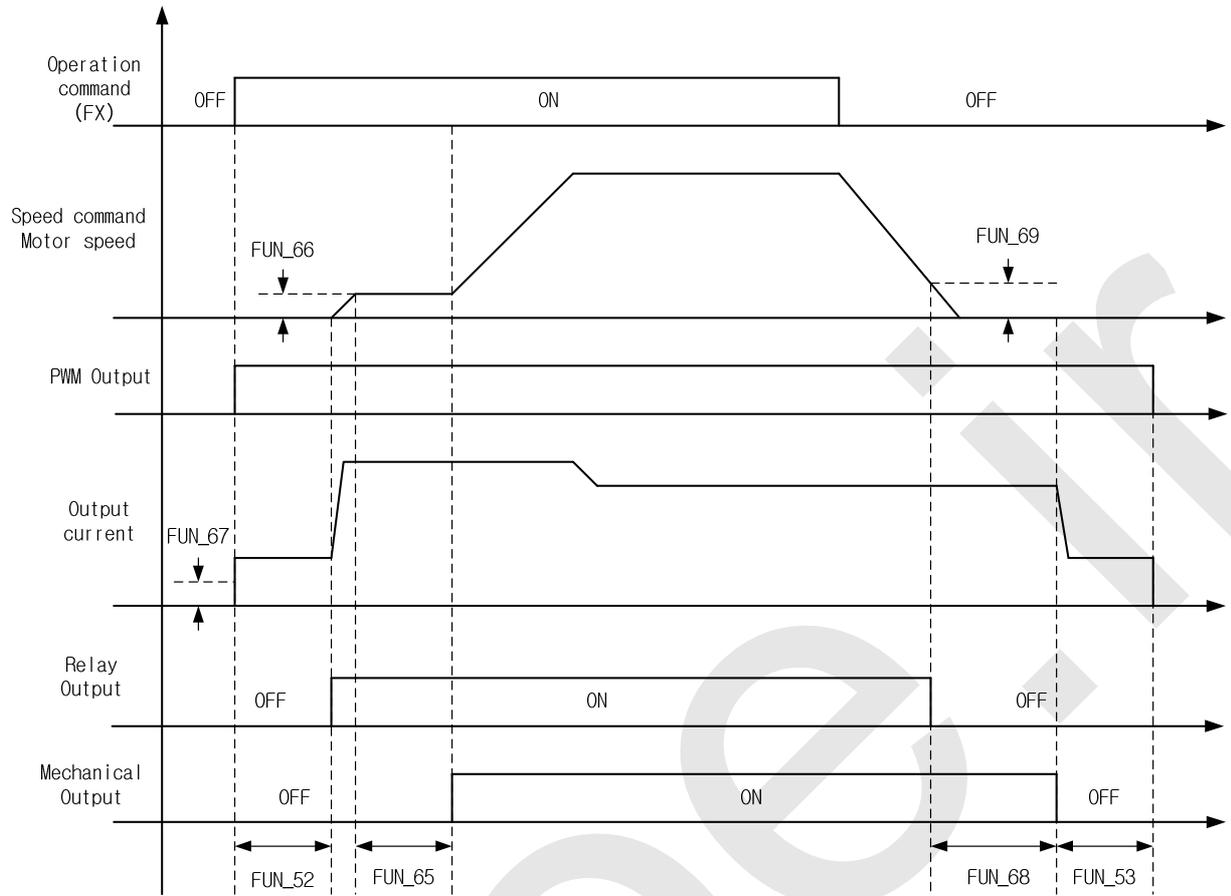

#### 6.4.14 Regeneration prevention for press

This function is to prevent the regeneration in press application. It rises the motor speed automatically in motor regeneration.

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_71	RegenAvd Sel	Selection of regeneration prevention	0 (No) / 1 (Yes)		0 (No)
FUN_72	RegenAvd Lvl	Voltage level for regeneration prevention <sup>1)</sup>	600(300) ~ 800(400) <sup>2)</sup>	V	700(350) <sup>2)</sup>
FUN_73	CompFreq Lmt	Speed limit for regeneration prevention <sup>1)</sup>	0.0 ~ 500.0	rpm	100.0
FUN_74	RegenAvd P	P gain of regeneration prevention <sup>1)</sup>	0.0 ~ 300.0	%	50.0
FUN_75	RegenAvd I	I gain of regeneration prevention <sup>1)</sup>	20 ~ 3000	ms	500

Note1) It is displayed when FUN\_71 is Yes.

Note2) () means it is applied in 200V class.

##### 1) FUN\_71 (Selection of regeneration prevention)

It controls the DC Link voltage level to prevent the regeneration in case the life of DB unit is shortening by repeated regeneration action as press load.

##### 2) FUN\_72 (Voltage level for regeneration prevention)

It sets the voltage level for regeneration prevention that DB avoidance function start when DC link voltage rises by regeneration.

##### 3) FUN\_73 (Speed limit for regeneration prevention)

It sets the range of operation speed which is compared with original speed by regeneration avoidance function.

##### 4) FUN\_74 (P gain of regeneration prevention)

It is a gain of PI controller which changes the motor operation speed.


#### 6.4.15 Battery-operated (Battery Run) speed and Input voltage setting

Battery-operated function operates the motor with external battery at elevator application field when main power is not energized by instantaneous power failure etc.. (it is for 5.5 ~ 22 kW-2/4 products.)

Code	LCD display	Description	Setting range	Unit	Factory setting
FUN_76	Batt. Speed	Battery-operated speed	2.5 ~ 200.0	rpm	50.0
FUN_77	Batt. Volt	Battery input voltage	12 ~ PAR_18	V	48

- FUN-76, 77 code are displayed in case 'Battery Run' of multi-function input DIO\_01~07 is turned On.
- FUN\_76 sets the operation speed during emergency operation.
- FUN\_77 sets the battery voltage used.
- In emergency, battery-operated is activated when the signal is given to terminal which 'Battery Run' function of DIO group is turned On. After it is activated, it is operated with speed set in FUN\_76 and level of low voltage trip is changed lower automatically.

- To return to normal mode, release the signal from 'Battery Run' mode of multi-function input turned On.
- Additional wiring for battery-operated mode is as shown below.
  - Connect the 2 terminals among main circuit input terminal R, S, T to battery positive through MC (Magnetic Contactor).
  - Connect N (-) terminal of main circuit to battery negative.
  - Input UPS auxiliary power supply 220V to AC1 and AC2.

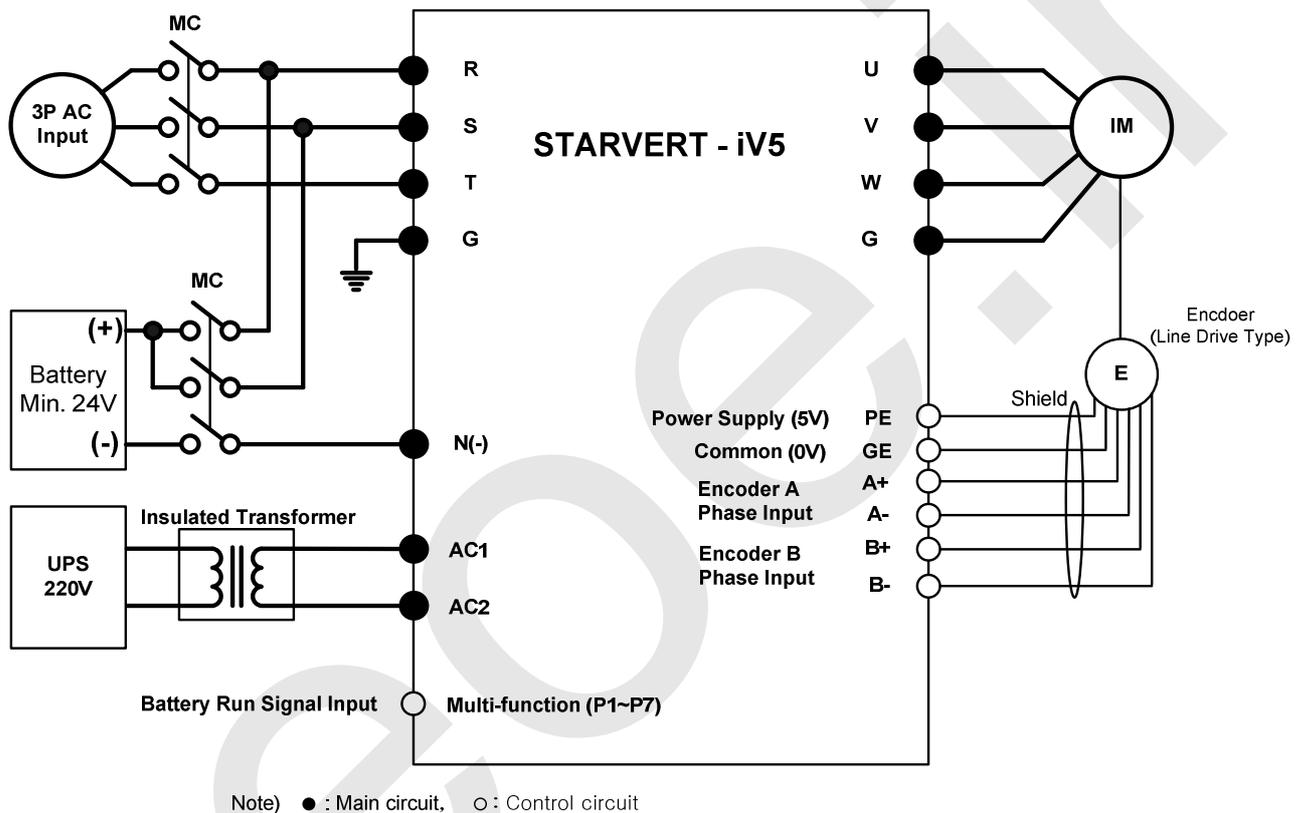

### Features of battery-operated function

- In battery-operated mode, LED on the right side of the loader for current operation mode and 'BAT' are displayed by turns.
- In case multi-function output sets to 'INV Ready', it turns off during battery-operated mode.
- After battery power is energized to inverter, inverter will start 2 seconds later after the time for releasing the low voltage trip and raising the internal voltage.
- If voltage is falling less than about 53% of FUN\_77 set value, it sets down as low voltage trip so it is detected a trip.
- To return to main power, main power must be energized after releasing the magnetic contactor and signal from the battery and then low voltage trip is detected.
- Operation speed (FUN\_77) must be determined according to battery voltage (FUN\_76), base speed (PAR\_17) and motor rated voltage (PAR\_18). Please operate the inverter with low speed by battery capacity.

#### 6.4.16 Detection function of input/output open-phase

This function detects disconnection of input or output wire. If input open-phase error occurs when it is not open-phase condition, increase the FUN\_79 setting value. For the standard setting value, refer to the item PhInOpenLvl in 01 ~ 03 of the DIS group. Set up FUN\_79 with the value which is 150% of the PhInOpenLv value under the maximum load condition.

#### 6.4.17 Aux-speed function

- **FUN\_81 (max aux-speed command)**

Shows the aux-speed command value at the maximum analog input.

- **FUN\_82 (aux-speed calculation method)**

The available calculation modes include; the mode where the aux-speed is to be 0 when the unidirectional analog input (0~10V) is median; and the mode where the aux-speed is to be 0 when the bidirectional analog input (-10~10V) is 0.

0	$M[\text{rpm}] + G[\text{rpm}] \times A[\%]$
1	$M[\text{rpm}] + G[\text{rpm}] \times (A-50) \times 2[\%]$

M= main speed, G=AuxSpeedMax, A=analog input

- **FUN\_83 (aux-speed accelerating time)/ FUN\_84(aux-speed decelerating time)**

When the aux-speed applicability setting is ON and MOP Up/Down is OFF, if the aux-speed command changes, the motor accelerates or decelerates by the time set up here.

- **FUN\_82 (aux-speed absolute/relative mode)**

This function defines the method for deciding the zero aux-speed. When the absolute mode is selected, 0 or 50% of analog input value is recognized as the zero speed. When the relative mode is selected, the analog input at the moment when the aux-speed applicability setting becomes ON is set up as the zero speed. Consequently, in the absolute mode, the aux-speed command is applied when the aux-speed function applicability setting input is ON, however, in the relative mode, the motor speed command does not change when the aux-speed function applicability setting input is ON.

- **AIO\_01,13,25 (Aux-speed analog input)**

The aux-speed command is determined by analog input. Analog input has 3 (5 in extended I/O) channels. The channel to be used as the aux-speed must be set up with Aux Spd Ref to enable aux-speed operation.

- **DIO\_01~06 (select applicability of aux-speed function)**

The applicability of the aux-speed function can be selected and set up using multi-function input. Aux-speed is enabled only when this input is ON.

## 6.5 Control Group (CON\_[][])

### 6.5.1 Jump code (CON\_00)

Jumping directly to any parameter code can be accomplished using CON\_00 [Jump code].

**Example** Jumping to CON\_11

Press [PROG] key first and set 11 using [▲(Up)], [▼(Down)], [SHIFT/ESC] and press [ENT] key to jump to CON\_11.

If the desired code cannot be accessed or void, it automatically jumps to closest code.

CON ▶ Proc PID Ref
11                      0.0 %

After jumping, it is available to jump to other codes using [▲(Up)], [▼(Down)].

### 6.5.2 Control mode select (CON\_01)

In the motor control mode, there are **speed** and **torque** control modes based on the vector control. The speed sensor such as the pulse encoder is required if speed control ('Speed') and torque control ('Torque') are to be used.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_01	Control Mode	Control mode selection	Speed Torque Sensorless		Speed

### 6.5.3 Application mode (CON\_02)

General vector mode or Elevator mode can be selected in CON\_02.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_02	Application	Application mode setting	General Vect Elevator *1) Synchro *2) WEB Control		General Vect

\*1) Only displayed with Elevator option board (EL\_IO) installed.

\*2) Only displayed with Synchronization option board (SYNC\_IO) installed.

### 6.5.4 Automatic speed regulator: ASR

#### 1) CON\_05(ASR LPF Time Constant 1) / CON\_08(ASR LPF Time Constant 2)

One of the two PI gains of ASR can be selected depending on the status of the multi-function terminal input set as the 'ASR Gain Selection'. That is, if the multi-function terminal input is 'Off', 1-numbered gain and LPF time constant is selected. On the contrary, if this input is 'On', 2-numbered gain and LPF time constant are selected.

**(Example)** Programming P4 as ASR PI Gain

Code	LCD display	Description	Setting range	Unit	Set value
DIO_04	P4 define	Multi-function input terminal P4 definition			ASR Gain Sel

The two sets of Lowpass Filter are as follow:

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_05	ASR LPF1	ASR LPF time constant 1	0 ~ 20000	ms	0
CON_08	ASR LPF2	ASR LPF time constant 2	0 ~ 20000	ms	0

## 2) CON\_03 ~ 04(ASR PI Gain 1) / CON\_06 ~ 07(ASR PI Gain 2)

One of 2 sets of PI gain can be selected by "ASR Gain Sel" in Multi-function input terminal.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_03	ASR P Gain1	ASR P Gain 1	0.1 ~ 200.0	%	50.0
CON_04	ASR I Gain1	ASR I Gain 1	0 ~ 50000	ms	300
CON_06	ASR P Gain2	ASR P Gain 2	0.1 ~ 200.0	%	5.0
CON_07	ASR I Gain2	ASR I Gain 2	0 ~ 50000	ms	3000

## 3) CON\_09 (Ramp time for ASR gain Transfer) / CON\_10 (Motor Speed at the time of ASR Gain Transfer)


ASR PI controller can be transferred to P controller depending on the status of the multi-function terminal input set as 'ASR P/PI transfer'.

**Example** When P6 is set to ASR P/PI transfer:

Code	LCD display	Description	Setting range	Unit	Factory setting
DIO_06	P6 define	Multi-function input terminal P6 definition			ASR P/PI Sel


To avoid the shock to the control system due to the rapid change P and I gain in case of ASR gain transfer, if the multi-function terminal input set to 'ASR Gain Sel' is 'On', the transferred P gain changes gradually for the time set at CON\_09. P gain 2 is transferred to P gain 1 at the higher speed than the value set at CON\_10. This happens when the multi-function terminal input set to 'ASR Gain Sel' is 'On', not 'Off'

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_09	ASR Ramp	Ramp time for ASR gain switch-over	10 ~ 10000	ms	1000
CON_10	ASR TarSpd	Target Speed after ASR gain switch-over	0.0 ~ 3600.0	rpm	0.0

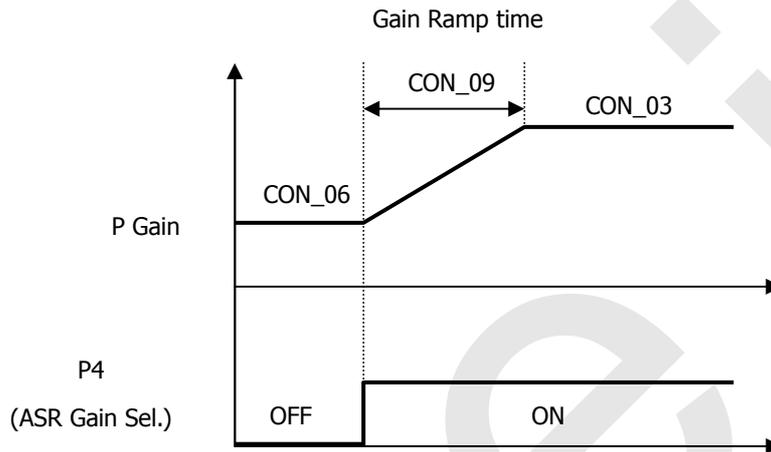

- **How to set the P and I gain of the ASR (Automatic Speed Regulator)**

The P gain(%) of ASR becomes equal to the torque reference(%) when the speed difference between the speed command and the real speed fed back to the ASR is identical to the rated slip. The I gain is the time to be taken to accumulate the torque reference from 0 to 100%. That is, The output of ASR becomes equal to the 100% of the torque reference when P gain is set to 100% and the speed difference is equal to the rated slip. Speed response characteristic may be better, but the control system may be unstable when P gain is increased or I gain is decreased. On the contrary, Speed response characteristic may be degraded if P gain is decreased or I gain is increased.

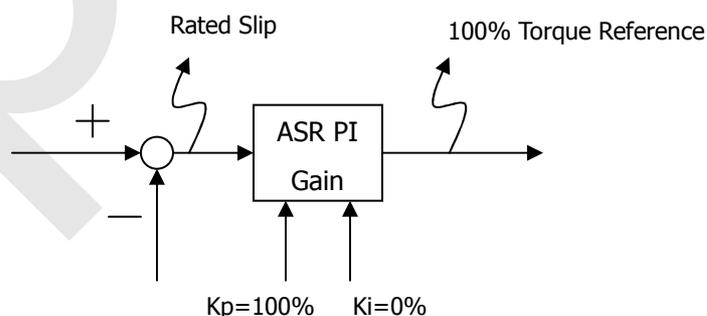

### 6.5.5 Process PID control

Process PID controller is added outside the speed control loop and a wide variety of process control can be implemented without using the stand-alone PID controller outside the speed control loop or PLC. 'Process PID Enb' at CON\_23 determines whether Process PID controller is enabled or not. 'Process PID Enb' at CON\_23 can be set as follows.

**(Example)** programming CON\_23 "Process PID Enable/Disable"

CON_23 (Proc PID Enb)	RUN/STOP command	
	ON	OFF
Disable	Disable	Disable
Enable	<b>Enable</b>	Disable
Terminal	Depending on terminal definition	Disable

If 'Process PID Enb' at CON\_20 is set to 'Terminal', Process PID controller is enabled using 'Proc PID Dis', which is the one of the functions of the multi-function terminal input. To avoid the saturation of the process PID controller, process PI controller is enabled only when the multi-function terminal is set to 'Proc PID Dis' and the terminal is 'OFF' and the run command is 'ON'.

Multi-function input terminal defined as "Proc PID Dis"		RUN/STOP command	
Input signal		ON	OFF
Defined	ON	Disable	Disable
	OFF	<b>Enable</b>	Disable
Not defined		Disable	Disable

The command to Process PID controller uses the digital value (CON\_10) set using the keypad or the analog value ('Process PID F/B') which is the one of the multi-function analog output. The setting range of Process PID digital input at CON\_11 is from -100 to 100% and the setting range of analog input command is from -10 to 10V.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_11	Proc PID Ref	Process PID Reference Source (Keypad)	-100.0 ~ 100.0	%	0.0

## 6. Function Description

The definition of P gain and I gain in the Process PID controller is as follows. If P gain is 100% and I gain is 0% and the input error of the Process PID controller (CON\_11 + Proc PID Ref - Proc PID F/B) is 100%, the output of Process PID controller is 100%. If I gain is 10% and P gain is 0 and the input error is 100%, it takes the output of the Process PI controller 1 second to be accumulated up to 100%. The higher I gain becomes, the faster the response becomes reducing the accumulated time. Finally, the output of Process PID controller (%) multiplied by the maximum motor speed (FUN\_04) is added to the total speed command.

If the proportional gain or integral gain of the Process PID controller is increases, the response of the controller becomes faster, however, the system may become unstable. The proportional gain and integral gain values are small, the system response time becomes longer.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_14	Proc PID Kp	Process PID P gain	0.0 ~ 999.9	%	0.0
CON_15	Proc PID Ki	Process PID I gain	0.0 ~ 100.0	%	0.0
CON_16	Proc PID Kd	Process PID D gain	0.0 ~ 100.0	%	0.0

To prevent the Process PID controller from being saturated by the malfunction of the Process PID controller, the output of the Process PID controller can be limited to the positive or negative value, separately from the main speed controller.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_17	Proc Pos Lmt	Process PID positive limit	-100 ~ 100	%	100
CON_18	Proc Neg Lmt	Process PID negative limit	-100 ~ 100	%	100

Low pass filter at the output of the Process PID controller can be used. In this case, filter output is multiplied by the output gain and fed to the speed command.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_19	Proc Out LPF	Process PID output LPF time constant	0 ~ 500	ms	0
CON_20	Proc OutGain	Process PID output gain	-250.0 ~ 250.0	%	0.0

There is a parameter which determines the range to be used when 100% output of the Process PID is converted to speed command. Setting up CON\_21, the range of the speed command by Process PID is Base Speed(PAR\_17), Ref Speed(command speed), Speed Set(CON\_22), respectively for each case.


Code	LCD display	Description	Setting range	Unit	Factory setting
CON_21	Proc PID Src	Process PID type	0 (Base Speed) 1 (Ref Speed) 2 (Speed Set)		0 (Base Speed)
CON_22	PID SpeedSet	Speed Set setting	100 ~ FUN_04	rpm	100

If the output error of Process PID exists at stopping, it keeps current motor speed during "PID Hold Time" and then free-runs and stops by stopping friction power. If output error is "0", motor is stopped regardless of "PID Hold Time" setting.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_24	PIDHoldTime	Process PID Hold Time	0 ~ 10000	ms	5000

### 6.5.6 Draw control

Draw control is a sort of Open Loop tension control. Draw is the ratio of speed difference between one roll and the other. Tension is generated as in the following equation.

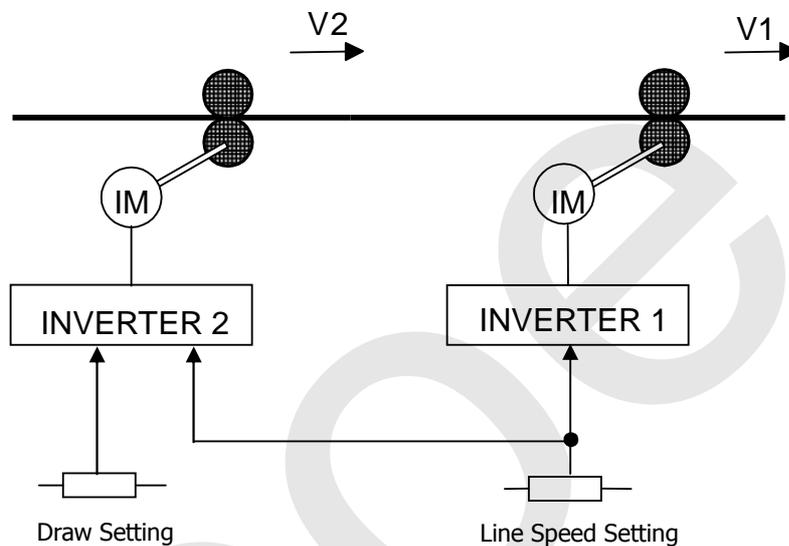

$$D = \frac{V1 - V2}{V2}$$

$$T = E \times S \times D = E \times S \times \frac{V1 - V2}{V2}$$

Where,


V1, V2: Transfer speed of each roll (m/min)

T: Tension (kg)

E: Elasticity coefficient of processed material (kg/mm<sup>2</sup>)

S: Sectional area of processed material (mm<sup>2</sup>)

Draw reference multiplied by draw quantity set at CON\_22 is added up to the speed command and the sum acts as the final speed command.

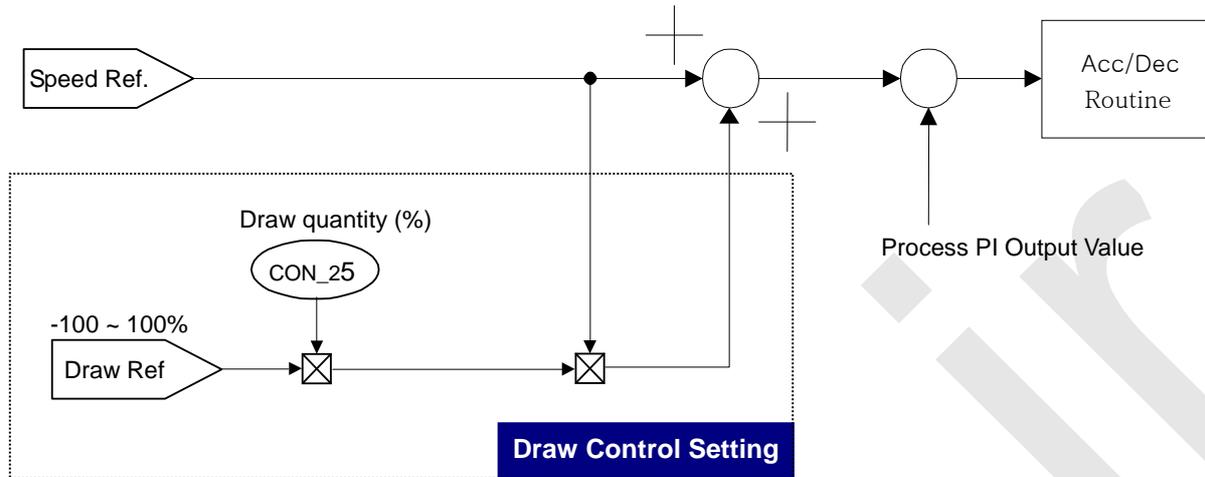


One of the multi-function analog input is set to the draw command ranging from -100% to 100% and the speed command multiplied by Draw quantity is added up to the speed command (Speed Ref) to obtain the final speed command. That is, -100 ~ 100% of the Draw command value is scaled to the Draw quantity (%) of CON\_25, which is multiplied with the speed command value to produce the command value which is proportional to the speed command value.

**Example** Programming Ai2 as the Draw Reference

Code	LCD display	Description	Setting range	Unit	Factory setting
AIO_13	Ai2 Define	Multi-function analog input Ai2 definition			Draw Ref
FUN_02	Spd Ref Sel	Speed reference selection			Keypad1
FUN_12	Speed 0	Multi-speed 0	0.0 ~ 3600.0	rpm	500.0
CON_25	Draw %	Draw Quantity	-100.0 ~ 100.0	%	

$$\text{Run speed} = \text{Spd Ref value} + \text{Spd Ref value} \times \frac{\text{Draw quantity}(\%)}{100(\%)} \times \frac{\text{Analog input}(\text{V})}{10(\text{V})}$$

Sign of analog input operates by absolute value norm.

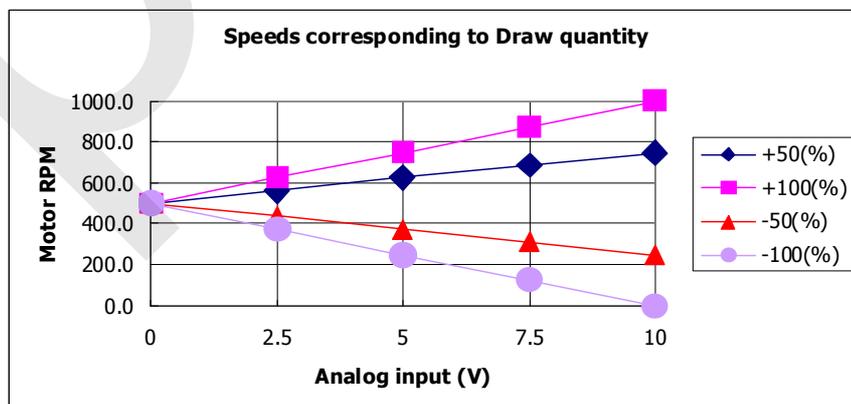


6.5.7 Droop control

Droop control uses the drooping characteristic of the speed with respect to the torque reference. This control method is used to prevent the saturation of the speed controller due to the difference between the speed reference and the real speed when the inverter is used for load balancing of the multiple motors and helper roll, which is the auxiliary device of the main roll. As shown in the figure below, the speed command is adjusted properly depending on the torque reference.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_26	Droop %	Droop Quantity	0.0 ~ 100.0	%	0.0
CON_27	Droop MinSpd	Low speed limit of Droop control	0.0 ~ 3600.0	rpm	0.0
CON_28	Droop MinTrq	Starting torque of Droop control %	0.0 ~ 100.0	%	0.0
CON_29	Droop MinSpd	Droop control min. speed	0.0 ~ 3600.0	rpm	0.0
CON_30	Droop MinTrq	Droop control beginning torque %	0.0 ~ 100.0	%	0.0

If the torque reference (the output of the speed controller) becomes higher than the set Droop start torque, it reduces the speed command and consequently, decreasing the torque reference. Using CON\_27, the speed value corresponding to the 100% of Droop quantity can be set up. Using CON\_28, the change rate by time of Droop quantity can be set up. Speed command in the Droop control is as in the following equation.

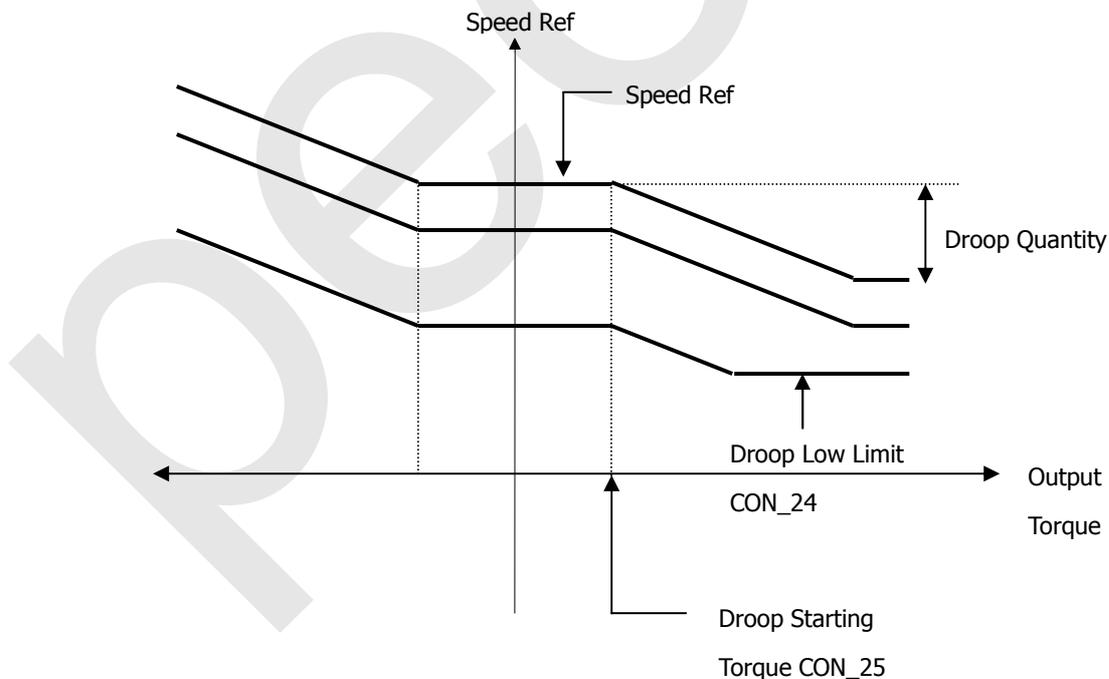

**Droop Control Calculation Example**

- **When Torque Ref is Positive:**

$$\text{Droop Ref speed} = (\text{Torque Ref [\%]} - \text{Droop Starting Torque[\%]} ) * \text{Droop Quantity[\%]}$$

The result value becomes positive. Therefore, final speed ref value decreases and it should be,

$$\begin{aligned} (\text{Speed Ref} - \text{Droop Ref speed}) &> \text{Droop low limit speed} \\ \text{Droop Ref speed} &< (\text{Speed Ref} - \text{Droop low limit speed}) \end{aligned}$$

Therefore, positive limit is "**Speed Ref – Droop Low Limit Speed**".

- **When Torque Ref is Negative:**

$$\text{Droop Ref speed} = -(\text{Torque Ref [\%]} - \text{Droop Starting Torque[\%]} ) * \text{Droop Quantity [\%]}$$

The result value becomes negative. Therefore, final speed ref value increases and it should be,

$$\begin{aligned} (\text{Speed Ref} - \text{Droop Ref speed}) &< \text{Max Motor speed} \\ \text{Droop Ref speed} &> -(\text{Max Motor speed} - \text{Speed Ref}) \end{aligned}$$

Therefore, negative limit is "**Max Motor speed – Speed Ref**".

### 6.5.8 Torque control

One mode among the speed control mode and torque control mode can be set at CON\_01( 'Control Mode'). The default is the speed control mode. Control mode can be selected using the multi-function terminal input set to 'Spd/Trq Sel'. This method has a priority over the one by CON\_01.

**(Setting example)** Programming P6 as Torque control

Code	LCD display	Description	Setting range	Unit	Setting
DIO_06	P6 define	Multi-function input terminal P6 definition			Spd/Trq sel
CON_01	Control Mode	Control mode setting	Speed Torque Sensorless		Torque

#### 1) CON\_31 (Torque Reference Source Selection) / CON\_32 (Torque Reference Source)

In the speed control mode, the output of the ASR acts as the torque reference. In the torque control mode, the torque reference is set by the analog input signal defined as 'Trq Ref Src' on the control circuit terminal or by the option board and the polarity is reversed if the direction of the speed command is changed. If the analog input is used as the torque reference, the analog input ranging from -10V to 10V is converted to the percentage of the rated torque (-100~100%) to obtain the torque reference, which can set from -250% to 250% by the settings of Gain and Bias.

CON\_31 "Torque Ref" defines torque ref. value when torque source is set to Keypad.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_31	Trq Ref Src	Torque reference source selection	None/Analog Keypad/Option Int485		None
CON_32	Torque Ref	Torque Ref (keypad)	-180.0 ~180.0	%	0.0

## 2) CON\_37 (Torque Bias Source Select) / CON\_38 (Torque Bias quantity)

The Torque Bias is the feedforward compensation which is added to the Torque Reference. The source of Torque Bias could be selected by the Keypad (CON\_38) as one of Multi Function Analog Input and the Option. The Torque Bias is enabled by MFi programmed as UseTrq Bias. The MFI should be ON for enabling the Torque Bias.

The Analog Input [-10~+10V] is converted to [-100~+100%] and this could be expanded up to [-250~+250%] with gain and bias.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_37	Trq Bias Src	Torque Bias source selection	None Analog Keypad Option		None
CON_38	Trq Bias	Torque Bias quantity	-150.0 ~ 150.0	%	0.0

## 3) CON\_40 (Torque Balance)

In the lift use, the load torque balance can be adjusted to obtain a good riding comfort at start-up using the load cell, which is a sort of an weighing devices installed at the bottom of the lift. CON\_40 is adjusted to show 50% after the car weight becomes equal to the weight of counter-weight.

The value displayed when pressing [PROG] key on the keypad is the loadcell voltage input to the inverter. Therefore, adjust the percent using [▲(Up)] / [▼(Down)] to make it to be setpoint of actual load compensation.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_40	Trq Balance	Torque Balance quantity	0.0 ~ 100.0	%	50.0

## 4) Torque Bias Enable/Disable

Torque bias is enabled depending on the status of the multi-function terminal input set to 'Torque bias enable'. But, if 'Torque bias enable' is not set and CON\_37 is set to 'Keypad', the torque bias command set at CON\_38 by the keypad, is fed directly to the torque bias quantity regardless of the status of the terminal. Therefore, In order not to use the torque bias command set at CON\_37, CON\_37 should be set to 'None' or the multi-function terminal input should be set to 'Torque bias enable' and then the terminal should be left open.

**(Example)** Programming P5 as Torque Bias EnableTorque Bias

## 6. Function Description

Code	LCD display	Description	Setting range	Unit	Factory setting
DIO_05	P5 define	Multi-function input terminal P5 definition			Use Trq Bias

### 5) CON\_39(Torque Bias F/F)


This is the torque bias quantity to compensate for the friction loss, which varies with the rotational direction of the motor and added up to the torque bias quantity.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_39	Trq Bias FF	Torque compensation for Friction loss	-150.0 ~ 150.0	%	0.0

### 6) CON\_33 ~ 36 (Torque Limit Define, Torque Limit during FWD RUN /REV RUN/Regenerating)

The torque limit can be selected separately depending on the motor control mode such as forward rotation and reverse rotation and regeneration modes. In all modes, the limit values can be set by the function code, the multi-function terminal input and the option board, respectively.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_33	Trq Lmt Src	Torque Limit Source select			Kpd Kpd Kpd

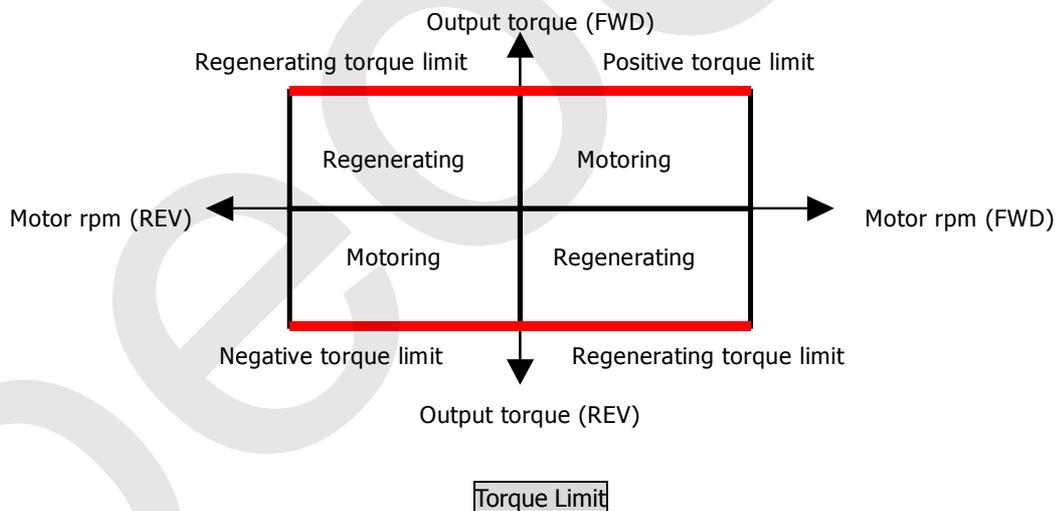

Torque Limit value is determined one of the 9 different combinations shown below depending on CON\_33 setting.

CON_33 set value	Positive Torque Limit	Negative Torque Limit	Regenerating Torque Limit
Kpd Kpd Kpd	CON_29	CON_30	CON_31
Kpd Kpd Ax	CON_29	CON_30	Vx
Kpd Ax Kpd	CON_29	Vx	CON_31
Kpd Ax Ax	CON_29	Vx	Vx
Ax Kpd Kpd	Vx	CON_30	CON_31

CON_33 set value	Positive Torque Limit	Negative Torque Limit	Regenerating Torque Limit
Ax Kpd Ax	Vx	CON_30	Vx
Ax Ax Kpd	Vx	Vx	CON_31
Ax Ax Ax	Vx	Vx	Vx
Opt Opt Opt	Positive Torque Limit of Option	Negative Torque Limit of Option	Regenerating Torque Limit of Option
485 485 485	Positive Torque Limit of 485	Negative Torque Limit of 485	Regenerating Torque Limit of 485

※ Vx marks the Torque Limit value defined in analog input terminal.


### 7) Torque Current reference

The torque reference is converted to the torque current reference. The torque current reference is generated from the rated current and magnetizing current of the motor. The initial value of the rated current and magnetizing current of the motor can be set by OTIS vector motor parameter that is chosen at PAR\_07

Code	LCD display	Description	Setting range	Unit	Factory setting
PAR_07	Motor Select	Motor capacity selection	2.2 ~ 375.0	kW	
PAR_22	Rated-Curr	Motor rated current	1.0 ~ 2000.0	A	
PAR_27	Flux-Curr	Motor flux current	0.0 ~ 70% of PAR_22	A	

### 8) Torque limit by Speed limit

This function limits torque when the speed reaches a certain level during operation in torque mode. The torque limitation is shown in the figure below.

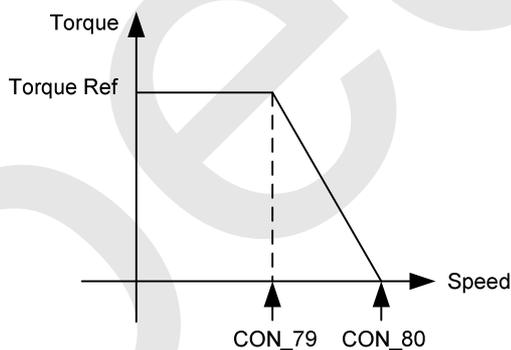

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_79	Spd Lmt Src	Speed limit of Speed/Torque switching	0.1 ~ Max Speed	rpm	
CON_80	SpdLmtBias	Speed bias of Speed/Torque	100.0 ~ Max Speed	rpm	

### 6.5.9 Speed search

This is used to restart the motor during coasting without stopping the motor. The setting for using this function is related to setting of FUN\_59 and FUN\_60. CON\_54 are required for this function. The proper values should be set depending on the inertia moment ( $GD^2$ ) of the load and the torque of the motor in use.

Code	LCD display	Description	Setting range	Unit	Factory setting
CON_54	Speed Search	Speed search setting	1111		0100
CON_75	SS Time	Speed Search time <sup>1)</sup>	10 ~ 60000	ms	300
CON_76	SS P Gain	Speed Search P gain <sup>1)</sup>	1.0 ~ 300.0	%	100.0
CON_77	SS I Gain	Speed Search I gain <sup>1)</sup>	1.0 ~ 300.0	%	100.0
CON_78	SS LPF	Speed Search LPF <sup>1)</sup>	0.1 ~ 300.0	ms	30.0
FUN_58	Power-on Run	Power on Run selection	Yes No		No
FUN_59	RST Restart	Restart after fault reset	Yes No		No

CON\_54 speed search setting is as follows.

Code	Set value				Description
	Bit4	Bit3	Bit2	Bit1	
CON_54				√	Speed search during Accelerating
			√		Speed search during a Fault Reset restarting
		√			Speed search during Instant Power Failure restarting.
	√				Speed search when FUN_58 Power ON starting is set to "Yes"

(1) Bit 1

0: The motor is normally accelerated without the speed search operation.

1: The speed search operation is enabled at the time of acceleration.

(Automatic restart and FUN\_58[Power-on start enable] included)

(2) Bit 2

0: The motor is normally accelerated without the speed search operation after the trip occurs.

1: The speed search is enabled at the time of restart after the trip occurs.

(Automatic restart and FUN\_59[Restart enable after fault reset] included)

(3) Bit 3

0: The motor stops when instantaneous power failure occurs. Run command should be turned ON again to restart the operation.

1: The speed search is enabled at the time of restart after the instantaneous power failure occurs.

(4) Bit 4

0: The motor is normally accelerated only when FUN\_58 [Power-on start enable] is set to Yes.

1: The speed search operation is enabled at the time of acceleration when FUN\_58 [Power-on start enable] is set to Yes.

#### 1) Setting up speed search in sensorless mode

In the sensorless mode, speed search is conducted at start-up, as a default setting. The search time, speed search gain, and the time constant of the low-pass filter for the speed search results can be set up.

## 6.6 User Group (USR\_[][])

User group can be generated by collecting the frequently-used function codes, and it also can be created by using the existing function codes for the specific application.

### 6.6.1 Jump code (USR\_00)

Jumping directly to any parameter code can be accomplished using USR\_00.

#### (Example) Jumping to USR\_03

Press [PROG] key first and set 3 using [▲(Up)], [▼(Down)], [SHITF/ESC] and press [ENT] key to jump to USR\_03. If the desired code cannot be accessed or void, it automatically jumps to closest code.



After jumping, it is available to jump to other codes using [▲(Up)], [▼(Down)].

### 6.6.2 Macro definition

#### 1) USR\_01 (Macro Init)

The initialization of the code type can be defined according to the application the user defines.

Code	LCD display	Description	Setting range	Unit	Factory setting
USR_01	Macro Init	Use Macro Definition	User Define E/L		User Define

If User Define is set up, all the user defined codes from USR\_04 to USR\_67 are initialized to P1 Define. If E/L is set up, the initialization is as presented in the table below. In this case, the codes USR\_61 ~ USR\_67 specified as 'Not Used' are not displayed. Only the last one of the Not Used is indicated.

Code	Setting										
USR_04	DIO_01	USR_15	PAR_09	USR_26	FUN_01	USR_37	FUN_19	USR_48	FUN_44	USR_59	CON_29
USR_05	DIO_02	USR_16	PAR_10	USR_27	FUN_02	USR_38	FUN_34	USR_49	FUN_45	USR_60	Not Used
USR_06	DIO_03	USR_17	PAR_11	USR_28	FUN_04	USR_39	FUN_35	USR_50	FUN_46	USR_61	Not Used
USR_07	DIO_04	USR_18	PAR_13	USR_29	FUN_05	USR_40	FUN_36	USR_51	FUN_47	USR_62	Not Used
USR_08	DIO_05	USR_19	PAR_14	USR_30	FUN_12	USR_41	FUN_37	USR_52	FUN_49	USR_63	Not Used
USR_09	DIO_06	USR_20	PAR_17	USR_31	FUN_13	USR_42	FUN_38	USR_53	FUN_50	USR_64	Not Used
USR_10	DIO_07	USR_21	PAR_18	USR_32	FUN_14	USR_43	FUN_39	USR_54	CON_03	USR_65	Not Used
USR_11	DIO_40	USR_22	PAR_19	USR_33	FUN_15	USR_44	FUN_40	USR_55	CON_04	USR_66	Not Used
USR_12	DIO_41	USR_23	PAR_20	USR_34	FUN_16	USR_45	FUN_41	USR_56	CON_05	USR_67	Not Used
USR_13	PAR_06	USR_24	PAR_21	USR_35	FUN_17	USR_46	FUN_42	USR_57	CON_27		
USR_14	PAR_07	USR_25	PAR_22	USR_36	FUN_18	USR_47	FUN_43	USR_58	CON_28		

#### 2) USR\_02(User Save)

This enables the code type and the set value which the user define to be saved into the memory.

#### 3) USR\_03(User Recall)

This enables the code type and the set value saved by USR\_02('User Save') to be recalled from the memory.


Code	LCD display	Description	Setting range	Unit	Factory setting
USR_02	User Save	User data save selection	No Yes		No
USR_03	User Recall	Recall saved user data	No Yes		No

### 6.6.3 User code define (USR\_04 ~ 67)

It displays the type and value of the user code when [PROG] key is pressed. The code can be set in the same manner as the codes in the other group can be. If the code is 'User Grp' and its set value is 'Not Used', the code can be changed by pressing the [PROG] key once more.

Total 64 user group data can be programmed and saved. To make the unused data invisible, set it to "Not Used".

#### Chaning User group codes

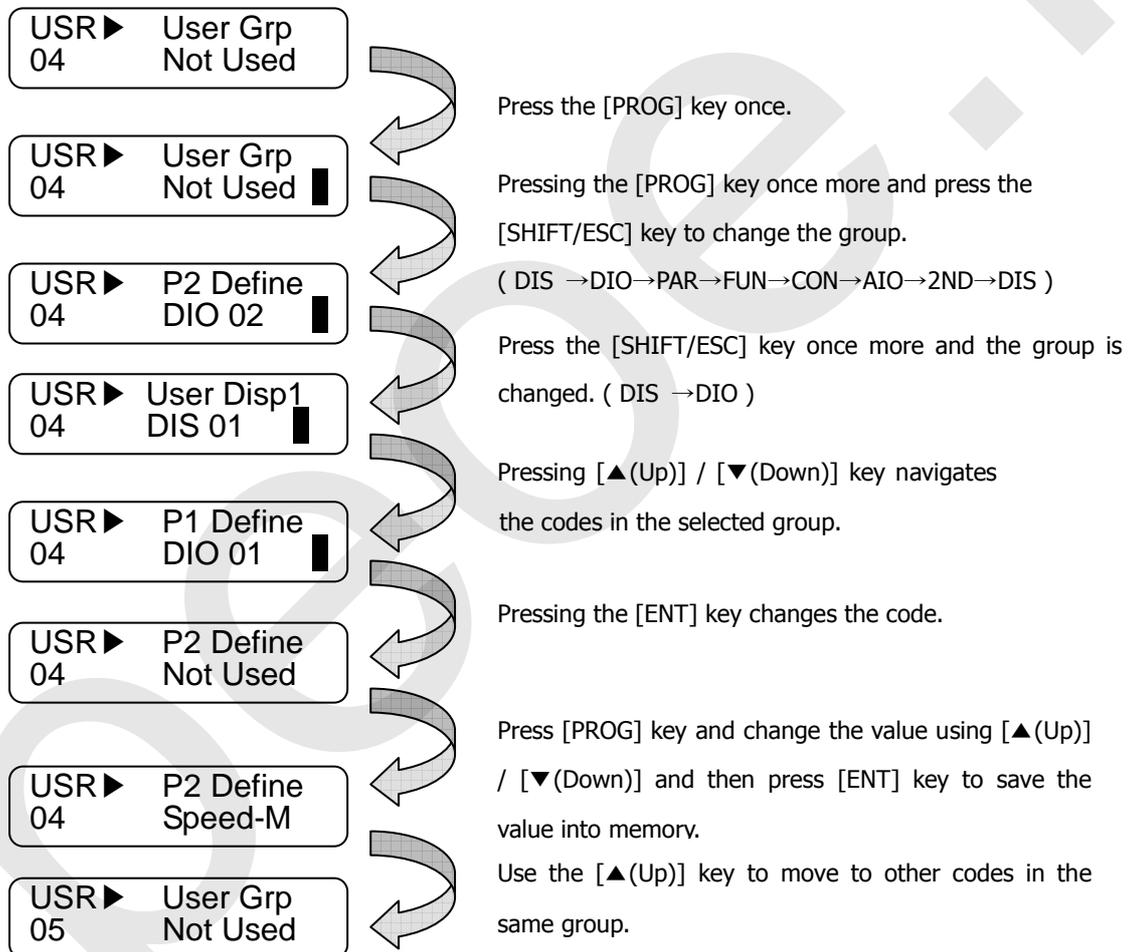

### 6.7 2nd Function Group (2nd\_[][])

2<sup>nd</sup> function group is equivalent to the parameter group which includes the data related to the 2<sup>nd</sup> motor in case single inverter controls 2 motors. One of the multi-function terminal input P1 ~ P7 (DIO\_01 ~ DIO\_07) should be set to "2nd Func". The setting ranges and usage of the 2<sup>nd</sup> motor parameter is basically the same as those of the 1<sup>st</sup> motor parameters. If the multi-function terminal input enables the 1<sup>st</sup> motor, the 1<sup>st</sup> motor parameters become valid. Similarly, if the multi-function terminal input enables the 2<sup>nd</sup> motor, the 2<sup>nd</sup> motor parameters become valid.

#### 6.7.1 Jump code (2nd\_00)

You can move on to the code you want to check using 2nd\_00.

**(Example) If you want to move on to 2nd\_02,**

After pressing the [PROG] key, set to 02 using [SHIFT/ESC] / [▲(Up)] / [▼(Down)] keys and then press the [ENT] key. If the code to jump to is not found, the nearest code number is selected.

```
2nd ▶ 2nd Max Spd
02      1800.0 rpm
```

You can check the other code using [▲(Up)] / [▼(Down)] keys.

#### 6.7.2 2nd motor control mode selection (2nd\_01)

In the motor control mode, there are **speed** and **torque** control modes based on the vector control. The speed sensor such as the pulse encoder is required if speed control (**Speed**) and torque control (**Torque**) is to be used.

Code No.	LCD display	Function	Setting range	Unit	Factory setting
2nd_01	2nd Ctl Mode	2 <sup>nd</sup> motor control mode selection	Speed Torque		Speed

#### 6.7.3 2nd motor speed setting

1) 2nd\_02: The 2<sup>nd</sup> motor maximum speed / 2nd\_04: The 2<sup>nd</sup> digital speed setting

Code No.	LCD display	Function	Setting range	Unit	Factory setting
2nd_02	2nd Max Spd	2 <sup>nd</sup> motor maximum speed	400.0 ~ 3600.0	rpm	1800.0
2nd_04	2nd Spd 0	2 <sup>nd</sup> motor multi-step speed 0	0.0 ~ 2 <sup>nd</sup> _02	rpm	0.0

## 6.7.4 2nd motor parameters related to acceleration and deceleration

Setting range and factory setting value should be referred to FUN\_41 to FUN\_48.

Code No.	LCD display	Function	Setting range	Unit	Factory setting
2nd_05	2nd Acc S St	2 <sup>nd</sup> motor S ratio 1 in accel. start	0.0 ~ 50.0	%	0.0
2nd_06	2 <sup>nd</sup> Dec S Ed	2 <sup>nd</sup> motor S ratio 2 in accel. end	0.0 ~ 50.0	%	0.0
2nd_07	2nd Dec S St	2 <sup>nd</sup> motor S ratio 1 in decel. start	0.0 ~ 50.0	%	0.0
2nd_08	2nd Dec S Ed	2 <sup>nd</sup> motor S ratio 2 in decel. end	0.0 ~ 50.0	%	0.0
2nd_09	Time scale2	2 <sup>nd</sup> motor acc./dec. time scale	0 (0.01 sec) 1 (0.1 sec)		0 (0.01 sec)
2nd_10	2nd Acc time	2 <sup>nd</sup> motor acceleration time	0.01 ~ 6000.0	sec	10.0
2nd_11	2nd Dec time	2 <sup>nd</sup> motor deceleration time	0.01 ~ 6000.0	sec	10.0

## 6.7.5 2nd motor parameters related to the pulse encoder

Code No.	LCD display	Function	Setting range	Unit	Factory setting
2nd_13	2nd Enc #	2 <sup>nd</sup> motor encoder pulse number	360 ~ 4096	%	1024
2nd_14	2nd Enc Dir	2 <sup>nd</sup> motor encoder direction set	A Phase Lead B Phase Lead		A Phase Lead
2nd_15	2nd Enc Chk	2 <sup>nd</sup> motor encoder test enable	Yes No		Yes
2nd_16	2nd Enc LPF	2 <sup>nd</sup> motor encoder LPF time constant	00 ~ 100	ms	1

## 6.7.6 2nd motor parameters

Code No.	LCD display	Function	Setting range	Unit	Factory setting
2nd_18	2nd BaseSpd	2 <sup>nd</sup> motor base speed	300.0 ~ 3600.0	rpm	1800.0
2nd_19	2nd R-Volt	2 <sup>nd</sup> motor rated voltage	120 ~ 560	V	
2nd_20	2nd Pole #	the number of poles of the 2 <sup>nd</sup> motor	2 ~ 12		4
2nd_21	2nd Mot Eff.	2 <sup>nd</sup> Motor Efficiency	70 ~ 100	%	72
2nd_22	2nd R-Slip	2 <sup>nd</sup> motor rated slip	10 ~ 250	rpm	
2nd_23	2nd Flx Cur	2 <sup>nd</sup> motor magnetizing current	0.0~ Inverter rated current	A	
2nd_24	2nd Mot Tr	2 <sup>nd</sup> motor rotor time constant	30 ~ 3000	ms	
2nd_25	2nd Mot Ls	2 <sup>nd</sup> motor stator inductance	0.00 ~ 500.00	mH	
2nd_26	2nd Mot sLs	2 <sup>nd</sup> motor leakage coefficient	0.00 ~ 10.00	mH	
2nd_27	2nd Mot Rs	2 <sup>nd</sup> motor stator resistance	0.000 ~ 5.000	ohm	
2nd_28	2nd Mot Ls	2nd motor stator inductance	0.00 ~ 500.00	mH	-
2nd_29	2nd Mot sLs	2nd motor leakage coefficient	0.00 ~ 300.00	mH	-
2nd_30	2nd Mot Rs	2nd motor stator resistance	0.000 ~ 15.000	ohm	-

## 6.7.7 2nd motor miscellaneous parameters

Code No.	LCD display	Function	Setting range	Unit	Factory setting
2nd_11	2nd Cool Mtd	2 <sup>nd</sup> motor cooling method	Same as the 1 <sup>st</sup> motor		Self-cool
2nd_35	2nd ETH 1min	2 <sup>nd</sup> motor 1 min. level for electronic thermal protection	Same as the 1 <sup>st</sup> motor		150
2nd_36	2nd ETH Cont	2 <sup>nd</sup> motor continuous level for electronic thermal protection	Same as the 1 <sup>st</sup> motor		100
2nd_37	2nd Inertia	2 <sup>nd</sup> motor inertia coefficient	Same as 1 <sup>st</sup> motor	kg · m <sup>2</sup>	0.072

## 6.8 Analog AIO Group (AIO\_[][])

### 6.8.1 Jump code (AIO\_00)

In AIO\_00, jumping directly to any parameter code can be accomplished by entering the desired code number.

#### (Example) Moving to AIO\_13

Press [PROG] and set to 5 using [SHIFT/ESC] / [▲(Up)] / [▼(Down)] and press [ENT] key to move to AIO\_13. If the desired code cannot be set, the closest code will be displayed.

AIO▶	Ai2 define
13	Not Used

Jumping other code is available using [▲(Up)] / [▼(Down)] keys.

### 6.8.2 Multi-function analog input

#### 1) AIO\_01 ~ 60 (Multi-function analog input terminal definition, input source, Min. input, Bias, Max. input, Gain, LPF Time constant, criterion of command loss)

3 analog input are assigned for AIO board. Ai3 serves as the Motor NTC input port and voltage or current signal can be fed into Ai1 and Ai2 by the jumper setting. Analog input on the control circuit terminal can be used as single function among the following 8 functions in the table below (10 functions for Ai3 – including Motor NTC). Voltage input range is  $-10 \sim 10\text{V}$  and current input range is  $0 \sim 20\text{mA}$ . Any analog input cannot be set as the same function as the other inputs. If 2 analog inputs are set to the same function, last set analog input is changed to "Not Used". When analog input is changed to the other function, previously set value is initialized to 0.

(In the case of EXTN\_I/O, 5 analog inputs are possible and Mot NTC input is possible for Ai5)

Setting value	Definition	Description
Speed Ref	Speed Reference	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of maximum speed.
Aux Spd Ref	Aux. speed reference	$\pm 10\text{V}$ input is equivalent $\pm 100\%$ of speed reference of FUN_81 AuxSpeedMax.
Proc PID Ref	Process PID Reference	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of reference of Process PI controller.
Proc PID F/B	Process PID F/B	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of F/B quantity of Process PI controller.
Draw Ref	Draw Control Reference	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of reference of Draw controller.
Torque Ref	Torque Reference	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of rated torque. It can be set up to $-250 \sim 250\%$ of rated torque by the gain and bias adjustment.
Flux Ref	Flux Reference	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of rated flux.
Torque Bias	Torque Bias	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of rated torque. It can be set up to $-250 \sim 250\%$ of rated torque by the gain and bias adjustment.
Torque Limit	Torque Limit	$\pm 10\text{V}$ input is equivalent to $\pm 100\%$ of rated torque. It can be set up to $0 \sim 250\%$ of rated torque by the gain and bias adjustment.
Use Mot NTC	Use Motor NTC	Thermal sensor in the motor(NTC) is fed into this terminal. In this case, the motor temperature is displayed and motor overheat alarm and trip signal can be triggered. <b>Caution: This is applied only to LG-OTIS Vector-controlled Motor.</b>

Code setting about analog command definition is as follow.

## 6. Function Description

Code	Display	Definition		Unit	Function Description
		Name	Setting range		
AIO_01	Ai1 Define	Definition of Multi function analog input Ai1	Speed Ref Aux Spd Ref Proc PID Ref Proc PID F/B Draw Ref Torque Ref Flux Ref Torque Bias Torque Limit		It defines the type of Multi function analog input Ai1.
AIO_02	Ai1 Source	Definition of input source of Multi function analog input Ai1	-10 → 10V 10 → -10V 0 → 10V 10 → 0V 0 → 20mA 20 → 0mA		It defines input source of Multi function analog input Ai1.
AIO_03	Ai1 In X1	Min. input of Multi function analog input Ai1	Ai1 In -X1 ~ Ai1 In X2	%	It sets Min. value of analog input. Without reference to AIO_02 set value, it is based on 0[V](voltage) or 0[mA](current)
AIO_04	Ai1 Out Y1	Min. input Bias of Multi function analog input Ai1	Ai1 Out -Y1 ~ Ai1 Out Y2	%	It defines the set value of AIO_01 responding to analog input value of AIO_03.
AIO_05	Ai1 In X2	Max. input of Multi function analog input Ai1	0.00 ~ 100.00	%	It set Max. input value of analog input value.
AIO_06	Ai1 Out Y2	Max. input gain of Multi function analog input Ai1	0.00 ~ 250.00	%	It defines the set value of AIO_01 responding to analog input value of AIO_05.
AIO_07	Ai1 In -X1	-Min. input of Multi function analog input Ai1	Ai1 In X2 ~ 0.00	%	It sets -Min. value of analog input. Without reference to AIO_02 set value, it is based on 0[V](voltage) or 0[mA](current)
AIO_08	Ai1 Out -Y1	-Min. input Bias of Multi function analog input Ai1	Ai1 Out Y2 ~ 10.00	%	It defines the set value of AIO_01 responding to analog input value of AIO_07.
AIO_09	Ai1 In -X2	-Max. input of Multi function analog input Ai1	-100.00 ~ 0.00	%	It set -Max. input value of analog input value.
AIO_10	Ai1 Out -Y2	-Max. input gain of Multi function analog input Ai1	-250.00 ~ 0.00	%	It defines the set value of AIO_01 responding to analog input value of AIO_09.
AIO_11	Ai1 LPF	Input LFP time constant of Ai1	0 ~ 2000	ms	It sets LPF time constant about analog input
AIO_12	Ai1 Wbroken	Option for criterion of command loss of Multi function analog input	None Half of x1 Below x1		It chooses criterion of command loss of analog input Ai1

AIO\_13 ~ AIO\_36(Ai2 ~ Ai3) are the same with the analog input 1(Ai1) above. (In the case of EXTN\_I/O, same up to AIO\_37 ~ AIO\_60(Ai4 ~ Ai5). But in the case of Ai3 and Ai5, there is no current input.

AIO\_03 Ai1 In X1 displays the analog input voltage or analog min. input current that inverter recognize as % unit.

It means the percentage(%) of max.input voltage 10[V] or max. input current 20[mA]. For example, if you set AIO\_03 Ai1 In X1 as 20[%], the voltage becomes 2[V], the current becomes 4[mA]. And if AIO\_04 Ai1 Out Y1 is set as 0[%], the analog input value that is under voltage 2[V], or current 4[mA] that is fed into analog input terminal will not be recognized.

AIO\_04 Ai1 Out Y1 sets the min. level of analog input voltage or current that inverter actually recognizes. For example, if you set AIO\_03 Ai1 In X1 as 0[%] and set AIO\_04 Ai1 Out Y1 as 20[%] and then, you feed into analog input terminal voltage 2[V] or current 4[mA], when the actual analog input voltage or current that inverter recognizes is 0, inverter recognizes as 20[%].


AIO\_05 Ai1 In X2 displays the analog input voltage or analog max. input current that inverter recognize as % unit.

For example, if you set AIO\_05 Ai1 In X2 as 50[%], when the actual voltage or current that is fed into analog input terminal is more than 5[V] or 10[mA], inverter recognizes it as max. analog input value.

AIO\_06 Ai1 Out Y2 sets the max. level of analog input voltage or current that inverter actually recognizes.

For example, if you set AIO\_05 Ai1 In X2 as 100[%] and AIO\_06 Ai1 Out Y2 as 50[%], although the voltage 10[V] or the current 20[mA] is actually fed into analog input terminal, inverter recognizes the final analog input value as 50[%].

If you set as above and the rated speed is 1800[rpm], you cannot set more than 900[rpm] although you feed 10[V] into analog input terminal

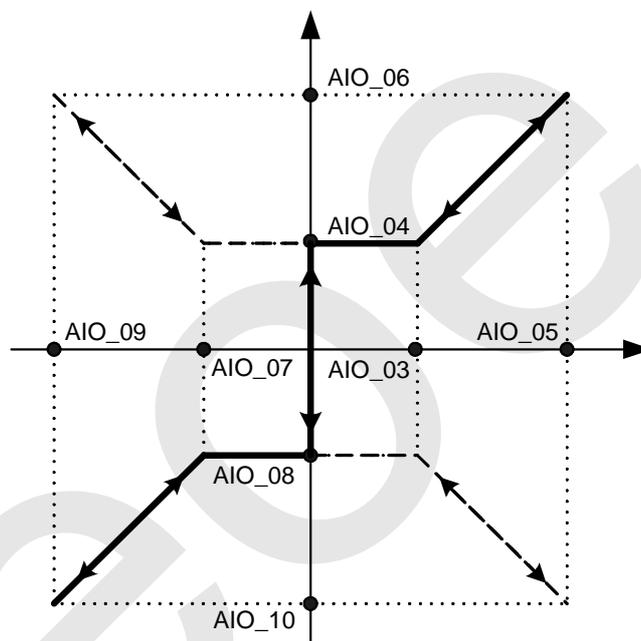

Analog input Mapping diagram

AIO\_03 Ai1 In X1 and AIO\_05 Ai1 In X2 are for setting the allowed range of voltage of current that is fed into analog input terminal, so generally you can set AIO\_03 Ai1 In X1 as 0[%], and AIO\_05 Ai1 In X2 as 100[%]. But, the analog input device make happen Chattering around 0[%], you can adjust the set value of AIO\_03 Ai1 In X1 up to the level of escaping the Chattering.

When Main Controller recognizes the voltage or current that is fed into analog input terminal, the difference can occur by the detail of I/O devices. . AIO\_04 Ai1 Out Y1 and AIO\_06 Ai1 Out Y2 are for correcting this error in Main Controller, so they are a kind of Bias and Gain. If the analog input is negative value, you can set AIO\_07 ~ AIO\_10 as the same as the above.

It is possible for iV5 inverter to input also the upper limit of 2, 4 according to the setting of AIO\_02 Ai1 Source, not only the upper limit of 1, 3 as the analog input Mapping diagram. It is also possible to operate along the dotted line according to the setting of AIO\_03 ~ AIO\_10.

2) Adjusting Bias: Out Y1 and Gain: Out Y2 by Loader

● **AIO\_04 Ai1 Out Y1 adjustment**

Connect the voltage source or current source between Ai1 ~ 5G, multi-analog terminals of standard I/O devices.  
 Feed 0[V] or 0[mA] with the AIO\_03 In X1 set as 0% and then follow as below.

Key	LCD Display	Description
	AIO▶ Ai1 Out Y1 04 0.00 %	Initial Gain (Factory setting)
<b>PROG</b>	AIO▶ Ai1 0.18 % 04 Bias 0.00 %	When pressing the [PROG] key, current output [%] to input value is displayed on the first line and current setting bias on the second line.
<b>▲</b>	AIO▶ Ai1 0.00 % 04 Bias 0.18 %	If you want to adjust Bias to be 0.00% at 0V input on the first line, adjust it to be 0.00% using [▲(Up)] key.
<b>ENT</b>	AIO▶ Ai1 Out Y1 04 0.18 %	After setting 0.00% Bias and pressing [ENT] key, it is displayed and the changed value is saved.


● **AIO\_06 Ai1 Out Y2 adjustment**

Connect the voltage source or current source between Ai1 ~ 5G, multi-analog terminals of standard I/O devices.  
 Feed 10[V] or 20[mA] with AIO\_05 In X2 set as 100% and then follow as below.

Key	LCD Display	Description
	AIO▶ Ai1 Out Y2 06 100.00 %	Initial Gain (Factory setting)
<b>PROG</b>	AIO▶ Ai1 98.00 % 06 Gain 100.00 %	When pressing the [PROG] key, current output [%] to input value is displayed on the first line and current setting gain on the second line.
<b>▲</b>	AIO▶ Ai1 100.00 % 06 Gain 102.00 %	If you want to adjust Gain to be 100.00% at 10V input on the first line, adjust gain to be 102.00% using [▲(Up)] key.
<b>ENT</b>	AIO▶ Ai1 Out Y2 06 102.00 %	After setting 102.00% Gain and pressing [ENT] key, it is displayed and the changed gain is saved.

The same procedure is applied to AIO\_08 Ai1 –Out Y1 and AIO\_10 Ai1 –Out Y2 and also to the other multi-function analog input

For example about multi-function analog input setting , In X1 : 20%, In X2 : 70%, Out Y1 : 30%, Out Y2 : 80% for the 0 ~ 10V input, analog command changes are as follows.

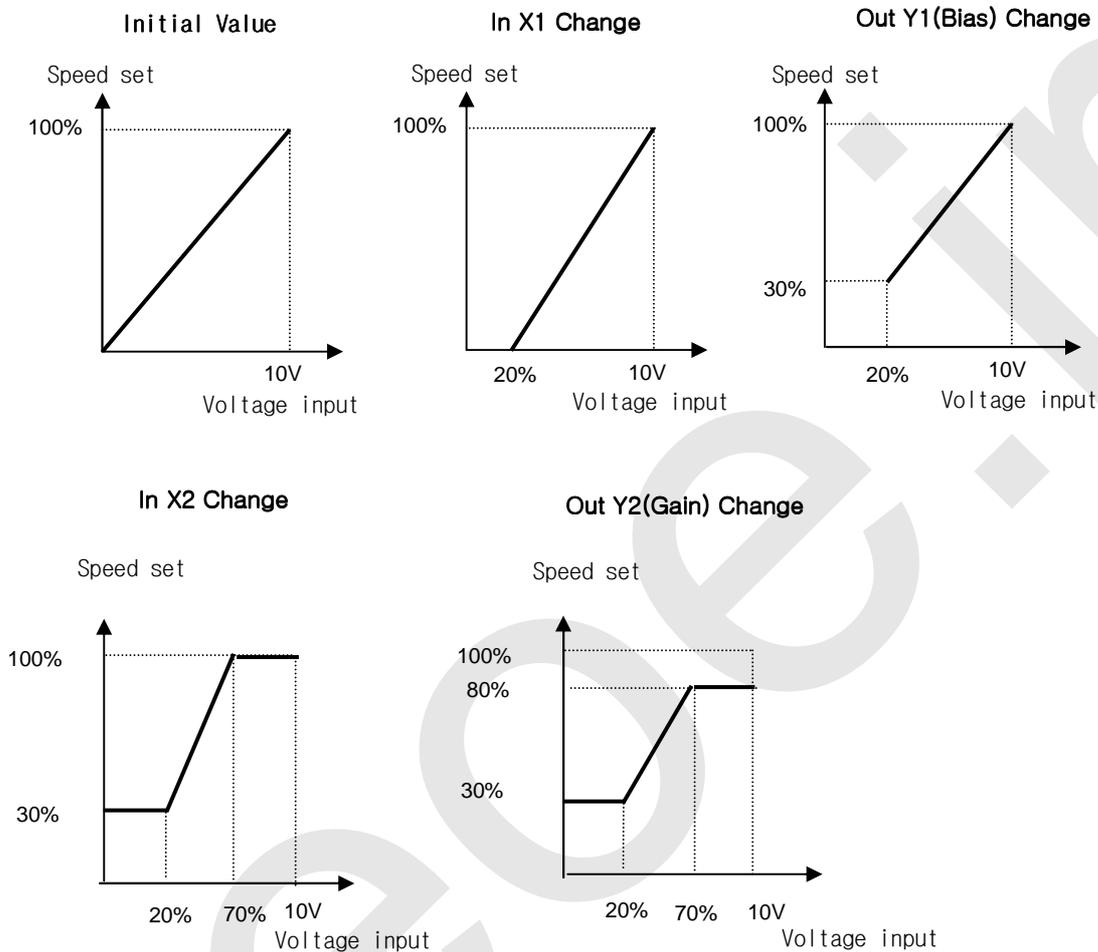

### 3) Criterion for command loss of Multi analog input Ai1 (AIO\_1)

You can choose criterion for command loss of signal that is fed into multi-function analog input.

Code	Display	Definition		Unit	Function description
		Name	Setting range		
AIO_12	Ai1 Wbroken	Criterion for command loss of Multi analog input Ai1	None		Do not set analog loss
			Half of x1		If the analog input according to AIO_02 i1 Source is under the range of below, it means analog loss.
				-10 → 10V	
				10 → -10V	$(AIO\_07 \text{ Ai1 } -In \text{ X1})/2$ $\sim (AIO\_03 \text{ Ai1 } In \text{ X1})/2$

Code	Display	Definition		Unit	Function description			
		Name	Setting range					
					0 → 10V	0 ~ (AIO_03 Ai1 In X1)/2		
					10 → 0V	0 ~ (AIO_03 Ai1 In X1)/2		
					0 → 20mA	0 ~ (AIO_03 Ai1 In X1)/2		
					20 → 0mA	0 ~ (AIO_03 Ai1 In X1)/2		
		Below x1					If the analog input according to AIO_02 Ai1 Source is under the range of below, it means analog loss	
							-10 → 10V	(AIO_07 Ai1 -In X1) ~ (AIO_03 Ai1 In X1)
							10 → -10V	(AIO_07 Ai1 -In X1) ~ (AIO_03 Ai1 In X1)
							0 → 10V	0 ~ (AIO_03 Ai1 In X1)
							10 → 0V	0 ~ (AIO_03 Ai1 In X1)
							0 → 20mA	0 ~ (AIO_03 Ai1 In X1)
							20 → 0mA	0 ~ (AIO_03 Ai1 In X1)

There are same functions for choosing the criterion of command loss of the other multi-function analog input.

#### 4) Time out for command loss of Multi-function analog input (AIO\_73 Time out)

It means the time for judging the loss time of analog input. If the time that is set at AIO\_73 Time Out is passed, it can be considered as analog input loss

Code	Display	Definition		Unit	Function description
		Name	Setting range		
AIO_73	Time out	Time for loss of Multi-function analog input	0.1 ~ 120.0	sec	It sets the time for judging command loss when the analog input is keeping from the moment of satisfying the condition set at multi-function analog input loss criterion until the set time.

AIO\_73 Time out can be applied 세 AIO\_12 Ai1 Wbroken, AIO\_24 Ai2 Wbroken, AIO\_36 Ai3 Wbroken.

(In the case of I/O(EXTN\_I/O, it can also be applied to AIO\_48 Ai4 Wbroken, AIO\_60 Ai5 Wbroken.)

If multi-functional analog input is lost, the inverter stops by decelerated stop or by Free Run. The stopping method can be set up at DIO\_97. See DIO\_97 for further details.

6.8.3 Analog output


1) AIO\_74 ~ 87 (description for multi-function analog output terminal, output source , Bias, Gain, setting absolute value)

SV-iV5 offers 2 analog outputs and according to the options of user, you can vary the description for using.

The output rage is -10V ~ +10V and the types are as follows.

Key	Display	Function Definition		Unit	Function Description
		Name	Range		
AIO_74	AO1 Define	Multi-function analog output A01 definition			It describes type of multi-function analog output A01.
AIO_75	AO1 Source	Multi-function analog output A01 output source definition.	-10 → 10V 10 → -10V 0 → 10V 10 → 0V		It describes source of multi-function analog output A01.
AIO_76	AO1 Bias	Multi-function analog output A01 Bias	-100.0 ~ AIO_77	%	It describes Bias of multi-function analog output A01.
AIO_77	AO1 Gain	Multi-function analog output A01 Gain	0.0 ~ 500.0	%	It describes Gain of multi-function analog output A01.
AIO_78	AO1 -Bias	Multi-function analog output A01 Bias	0 ~ AIO_79	%	It sets the negative bias of multi-function analog output A01.
AIO_79	AO1 -Gain	Multi-function analog output A01 Gain	0.0 ~ 500.0	%	It sets the negative gain of multi-function analog output A01.
AIO_80	AO1 ABS	Multi-function analog output A01 the absolute value setting	No / Yes		It is possible to have positive absolute value of analog output A01.

The other multi-function analog output terminals have same functions. The following pictures is the diagram of Multi-function analog output A01 definition. It can be output as the dotted line according to the setting of A01 Source.

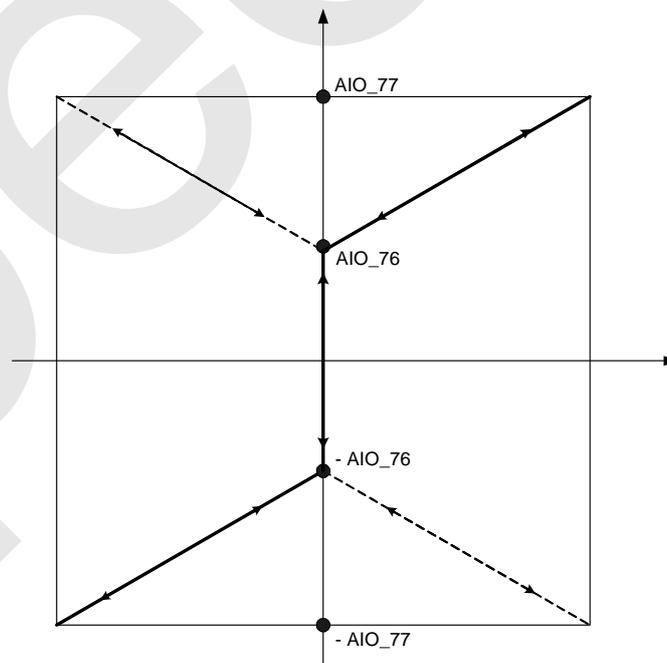

Analog Output Mapping Diagram

2) Adjusting Gain and Bias by Keypad

- AIO\_76 AO1 Bias setting

It can be set the Bias value of analog output value. It can occur actual output more than the Bias value.


Key	LCD Display	Description
	AIO▶ A01 Bias 76 0.0 %	Initial Gain (Factory setting)
<b>PROG</b>	AIO▶ Ao1 0.18 % 76 Bias 0.00 %	When pressing the [PROG] key, current output [%] to input value is displayed on the first line and current setting bias on the second line.
<b>▲</b>	AIO▶ Ao1 0.00 % 76 Bias 30.0 %	If you want to adjust Bias so that output is occurs when is more than 30% , adjust it to be 30.0% using [▲(Up)] key.
<b>ENT</b>	I/O▶ A01 Bias 76 30.0%	After adjusting Bias and pressing [ENT] key, it is displayed and the changed value is saved.

- AIO\_77 AO1 Gain setting


You can set the slope of output so that max. output of analog output can be 10V.

Key	LCD Display	Description
	AIO▶ AO1 Gain 77 100.0 %	Initial Gain (Factory setting)
<b>PROG</b>	AIO▶ Ao1 30.0 % 77 Gain 100.0 %	When pressing the [PROG] key, current output [%] to input value is displayed on the first line and current setting gain on the second line.
<b>▲</b>	AIO▶ Ao1 30.0 % 77 Gain 200.0 %	If you want to adjust Gain to be 10V output at more than 200% on the first line, adjust gain to be 200.0% using [▲(Up)] key.
<b>ENT</b>	AIO▶ AO1 Gain 77 200.00 %	After setting 102.00% Gain and pressing [ENT] key, it is displayed and the changed gain is saved.


In examples for output setting of multi-function analog output, according to setting of Bias, Gain and the absolute value at -10 ~ 10V input, the output waveform varies as below.

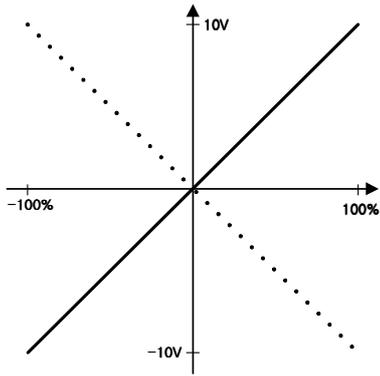


Initial Value (Bias : 0%, Gain : 100%)

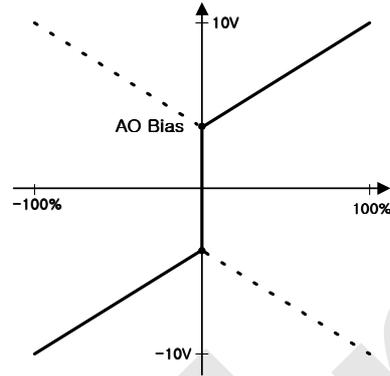

Bias 30% setting

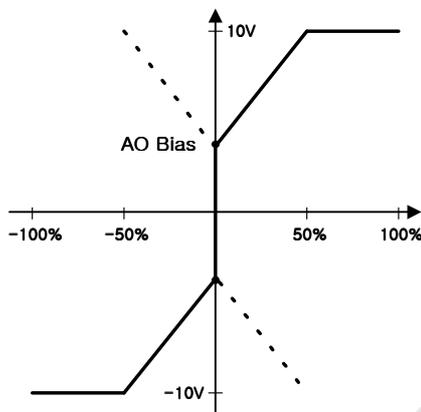

Gain 200% setting

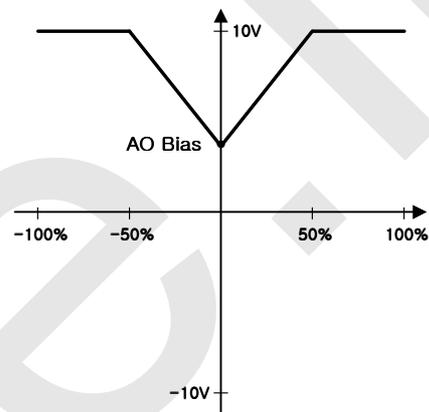

Absolute value setting

Multi-function analog output setting types and range are as below

Setting	Description	Output signal level
AiX Value	Analog input value	$\pm 10$ V: 10V, 20mA
PreRamp Ref	Pre Ramp Reference	$\pm 10$ V: Max Speed
PostRamp Ref	Post ramp reference	$\pm 10$ V: Max Speed
ASR Inp Ref	ASR Input Reference	$\pm 10$ V: Max Speed
Motor Speed	Motor Rotating Speed	$\pm 10$ V: Max Speed
Motor Spd Est	Estimated motor speed	$\pm 10$ V: Max Speed
Speed Dev	Speed Deviation	$\pm 10$ V: Rated slip * 2
ASR Out	ASR Output	$\pm 10$ V: 250%
Torque Bias	Torque bias	+6 V: 150%
PosTrq Limit	Positive Trq Limit	10V: 250%
NegTrq Limit	Negative Trq Limit	10V: 250%
RegTrq Limit	Regeneration Trq Limit	10V: 250%
Torque Ref	Torque Reference	$\pm 10$ V: 250%
IqeRef	Torque current ref.	$\pm 10$ V: 250% of rated torque current
Iqe	Torque current	$\pm 10$ V: 250% of rated torque current
Flux Ref	Flux reference	10V: Flux rating * 2
IdeRef	Flux Current ref.	$\pm 10$ V: Rated flux current * 2
Ide	Flux Current	$\pm 10$ V: Rated flux current * 2

Setting	Description	Output signal level
ACR_Q Out	ACR output of axis Q	+10 V: 300/600
ACR_D Out	ACR output of axis D	+10 V: 300/600
VdeRef	Voltage reference of axis D	+10 V: 300/600
VqeRef	Voltage reference of axis Q	+10 V: 300/600
Out Amps RMS	Output current	10 V: Rated current * 2
Out Volt RMS	Output voltage	+10 V : 300/600
Power	Output power	+10 V: Rated output * 2
DC Bus Volt	DC LINK voltage	10 V: 500/1000V
Proc PI Ref	Process PI reference	+10 V: Rating
Proc PI FB	Process PI Feedback	+10 V: Rating
Proc PI Out	Process PI output	+10 V: Rating
Mot NTC Temp	Motor temperature	+10V : 150°C
Inv Temp	Inverter temperature	+10 V: 100°C
Inv i2t	Inverter i2t	10 V: 150%

### ⚠ CAUTION

- At the moment when the inverter is powered, the analog output may be unstable until before the controller board functions. Please keep this in mind if the analog output is used for control purpose.
- Analog output is not generated in the area prior to the shut down of the controller board which is triggered by the DC terminal voltage of the inverter becomes lower than the Low Voltage.

## 6.9 Sensorless Control Group (SLS\_[][])

CON\_01 has to be set to Sensorless to enable the sensorless group to be displayed on the keypad. The sensorless control refers to the control mode where motor speed (torque) is controlled without speed sensor (encoder). This controller provides sensorless speed mode only, not the sensorless torque mode. Since control is performed without speed sensor, additional parameter setting is required for control. Most of the parameters can be applied with the default values, however, it may be necessary to change the parameters according to the motor and/or load.

### 6.9.1 Jump function (SLS\_00)

You can jump directly to the desired code using SLS\_00.

- (Example) To jump to SLS\_13;**

Press the [PROG] key, and press [SHIFT/ESC] / [▲(Up)] / [▼(Down)] key to select 13. Press [ENT] key to conduct jumping as shown below. If the code selected for jumping is unavailable, the system jumps to the nearest next number.

SLS ▶ SpdEst PGain
13                      100.0 %

After a jumping, you can move to another code using the [▲(Up)] / [▼(Down)] keys.

### 6.9.2 Magnetic flux building time

- **SLS\_01(Flux BD Time)**

Before the motor starts to run, DC voltage is applied to the stator winding in order that the stator winding carries current at a certain level (exiting current).

### 6.9.3 Magnetic flux estimator gain control

- **SLS\_02(FlxEst PGain) / SLS\_03(FlxEst IGain)**

The gain of the magnetic flux estimator used for sensorless control can be adjusted. The default value is applicable. Increase both P Gain and I Gain up to 200, if load response or speed is unstable.

### 6.9.4 Speed controller

In the sensorless control mode, a speed controller gain, which is different from the Speed control mode, is applied. If the speed response of the motor is slow or speed control error is large, observe the condition while increasing the SLS\_04 up to 50, at the step of 10.

### 6.9.5 Speed estimator gain

This gain relates to the motor speed estimation. In most cases, it is not necessary to change the value.

### 6.9.6 Current controller cut-off frequency

This is the cut-off frequency of the current controller exclusively for sensorless control.

### 6.9.7 Regeneration avoiding operation

Since the control of the regenerative operation (load opposite to the direction of rotation) near the zero speed is unstable, this function increases speed command temporarily to get out of the regenerative operation range. When this function is active, the motor speed may be different from the speed specified by the speed command, according to the magnitude of the regenerative load.

### 6.9.8 Speed controller gain monitoring

In the sensorless mode, you can observe the calculated PI gain value of the speed controller in order to check and compare the value with the value of the sensed mode.

### 6.9.9 Magnetic flux estimator monitoring

The command and the feed-back value of the magnetic flux estimator can be monitored.

### 6.9.10 Stator resistance scale

This parameter is used to solve the problems in starting-up large motors whose capacity is 37kW or above. For smaller capacity motors, this parameter can be set up by 100%, or for larger capacity motors, increase the value to 120%, which is the default setting.

## Chapter 7 WEB Control Application

### 7.1 Change into WEB control mode

LCD loader display is indicated up to 32 digits in English letters and Arabic numerals, allowing you to directly check a variety of settings on screen.

Shown below are the appearance of LCD loader and the functions of each part.

When setting control (CON) group CON\_02 (Application) to “**WEB Control**”, LCD loader home screen is changed into web control mode as shown in the following figure. For the function of each key of the loader, please refer to ‘Loader’ in 4.1, Chapter 4.



#### 7.1.1 Method of Changing into Web Control Mode

CON ▶ Application  
02 General Vect

Move to Application Mode of Control (CON) Group

CON ▶ Application  
02 General Vect ■

Universal Vector Application Mode – Cursor appears (■)

CON ▶ Application  
02 WEB Control ■


Change into WEB control mode using [▲(Up)] key.

CON ▶ Application  
02 WEB Control

Set to WEB control mode pressing [ENT] key..

### 7.2 Loader Display in WEB Control Mode

#### 7.2.1 Home Screen

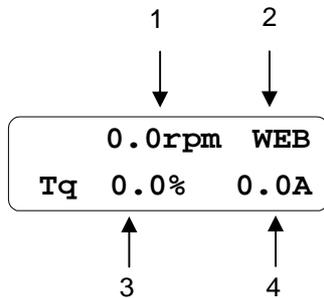

The status of the screen as above is called “**Home Screen of Display Group**” or “**Home Screen**”, and you can return to this home screen by pressing SHIFT/ESC key. Each item on the screen shows the associated information as shown in the table below.

Item No.	Title	Function
1	Motor Speed	Indicate actual rotating speed of the motor in rpm
2	Motor Control Mode	SPD : Speed Control Mode TRQ : Torque Control Mode WEB : WEB control mode BX : Indication of Emergency Stop State
3	Detent Torque	Indicate detent torque occurred against 100% rating output of the motor
4	Inverter Output Current	Indicate effective value for the inverter’s actual output current

### 7.3 change of Parameter Group

When selecting WEB control application mode WEB Control Group (WEB) is added following the user group.

Name of Group	LCD loader (Left upper corner of LCD)	Major Description
Display Group	DIS	Motor Speed, Motor Control Mode, Detent Torque, Inverter Output Current, User Selection Display, Process PID Output / Ref / Fdb, Current Failure State, User Group Display Setting
Digital I/O Group	DIO	Digital Input Parameter, Digital Output Parameter, etc.
Parameter Group	PAR	Parameter Initialization, Parameter READ / WRITE / LOCK / PASSWORD, Motor-related Constant, Auto-Tuning, etc.
Function Group	FUN	Operation Frequency, Operation Method, Stop Method, Acceleration/Deceleration Time and Pattern, Carrier Frequency, Electronic Thermal Selection, etc.
Control Group	CON	Control Mode, ASR PI Gain, Process PID Gain, Draw Control Setting, Droop Control-Related Constant, Torque Control-Related Constant, etc.
External Group	EXT	Parameter Setting for Communication Option Mode, etc.
Analog I/O Group	AIO	Analog Input- Related Parameter, Analog Output Parameter, etc.
WEB group	WEB	Diameter and tension control setting parameters, etc. at the time of Web Control

- For further details by groups except WEB group, please refer to Function in Chapter 6 of the Main Manual.

## 7.4 Parameter Setting required for Web Control

To conduct WEB control, be sure to set inverter parameters in following sequence. For further details of the function, please refer to the explanation on WEB group function.

### 7.4.1 WEB Control Mode Setting (Compulsory)

In order to use exclusively for web control, be sure to set the setting of CON\_02 Application to "WEB Control". Upon setting it to "WEB CONTROL", Web group is displayed. When set to "General Vect" WEB group is not displayed.

CON ▶ Application
02 WEB Control

### 7.4.2 Line Speed Command Setting (Option)

iV5 speed command is available by selecting one out of "Analog, Keypad1, Keypad2, Option, Line SPD Ref, Line SPD Opt" in FUN\_02 Spd Ref Sel. In order to use it exclusively for WEB CONTROL, be sure to use either "Line SPD Ref" or "Line SPD Opt" selected. At this time, CON\_02 Application should be set to "WEB Control", and then you have to select line speed command in FUN\_02 Spd Ref Sel. As the line speed command by analog input one of AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, and AIO\_25 Ai3 Define should be set to "Line Spd Ref". "Line SPD Opt" is the line speed command by communication, and therefore you may set this line speed command in the communication common area 0x050D. For further detail of communication, please refer to the communication common area of communication option board manual.

- ① Line Speed Command by Analog Input

FUN ▶ Spd Ref Sel
02 Line SPD Ref

AIO ▶ Ai1 Define
01 Line SPD Ref

- ② Line Speed Command by Communication

FUN ▶ Spd Ref Sel
02 Line SPD Opt

### 7.4.3 Diameter Hold Function Setting (Option)

If you desire Hold rather than Computation during operation in exclusive using WEB CONTROL, you may use it after setting one of the multi function inputs (DIO\_01 ~ DIO\_07) to "Dia Hold". In case the multi-function input set is On, the diameter will not be computed any more maintaining the motor speed corresponding with the currently computed diameter only. When the multi-function input is Off, the diameter is computed again.

DIO ▶ P1 Define
01 Dia Hold

#### 7.4.4 Diameter Initialization Function Setting (Compulsory)

When rewound to full diameter or web is completely unwound from the core, core should be replaced. In this case, you need to inform inverter of the core being replaced. A diameter initialization function can be selected out of multi-function input (DIO\_01 ~ DIO\_07), analog input, and communication. Diameter initialization source can be selected from WEB\_03 DiaPresetSrc.

① Diameter initialization by multi-function input

In the diameter initialization by multi-function input, WEB\_03 DiaPresetSrc is set to "Keypad". In this case, one of multi-function inputs (DIO\_01 ~ DIO\_07) should be set "Dia Preset". Then the rest of multi-function inputs are set to "Core size-L" and "Core size-H", and the preset value selected out of four diameter preset values of WEB-04 ~ WEB-07 by the following combination becomes the initial diameter value in accordance with On/Off of the multi-function input terminal where "Dia Preset" is set. The minimum of the initial diameter value is limited by the WEB\_10 Min Diameter.

WEB ▶ DiaPresetSrc  
03 Keypad

DIO ▶ P2 Define  
02 Dia Preset

DIO ▶ P3 Define  
03 CoreSize-L

DIO ▶ P4 Define  
04 CoreSize-H

P3 ON/OFF	P4 ON/OFF	Applicable Preset Core Value
OFF	OFF	WEB-04 (Diam Preset 1)
ON	OFF	WEB-05 (Diam Preset 2)
OFF	ON	WEB-06 (Diam Preset 3)
ON	ON	WEB-07 (Diam Preset 4)

② Diameter Initialization by Analog

Diameter initialization by analog is conducted by setting WEB\_03 DiaPresetSrc to "Analog". In this case, one of AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, and AIO\_25 Ai3 Define should be set to "Diam Preset". The minimum of the initial diameter value is limited by WEB\_10 Min Diameter.

WEB ▶ DiaPresetSrc  
03 Analog

DIO ▶ P2 Define  
18 Dia Preset

## ③ Diameter Initialization by Communication

To conduct the diameter initialization by communication, WEB\_03 DiaPresetSrc should be set to "Option". In this case, command can be set in communication common area 0x0510. For further detail of communication, please refer to communication common area of communication option board manual.

**WEB ▶ DiaPresetSrc**  
03      Option

**7.4.5 Tension Disable Function Setting (Compulsory)**

When using it exclusively for WEB CONTROL only, you may conduct tension control using LoadCell or Dancer. In this case, tension control carries out PID control where it is the Tension Disable Function to perform On/Off of the final output of this PID control. With WEB\_27 Tension Enb set to "Enable", if Tension Disable is Off, it outputs the final output of PID control while if Tension Disable is On, it interrupts the final output of PID control. When WEB\_27 Tension Enb is set to "Disable", Tension Disable Function is not applicable. To conduct the setting Tension Disable Function, you may use it by setting one of the multi-function inputs (DIO\_01 ~ DIO\_07) to "TensionDisable".

**DIO ▶ P5 define**  
05 TensionDisable

**WEB ▶ Tension Enb**  
27      Enable

WEB\_27 should be set to "Enable"

**7.4.6 Maximum Motor Speed Setting (Compulsory)**

This is the setting of maximum rotating speed of the motor in minimum diameter to maintain the maximum line speed in case of exclusively using WEB CONTROL. This can be done by setting WEB\_08 MaxMotor SPD. In case of maximum line speed in 100 [m/m], gear ratio in 5:1, and core diameter in 100 [mm], the motor maximum speed can be calculated in the following formula;

$$\text{Max. Motor Speed [rpm]} = \text{Gear Ratio} \times \frac{\text{Max. Line Speed}}{\text{Core Diameter} \times \pi} = 5 \times \frac{100 [m/m]}{0.1 [m] \times \pi} = 1591.55 [rpm]$$

**WEB ▶ MaxMotor SPD**  
08      1591.5 rpm

**7.4.7 Minimum Effective Line Speed Setting (Compulsory)**

Minimum effective line speed is the minimum value of the line speed command that can compute the diameter. The line speed command at the time of web control should be larger than the minimum effective line speed. If the line speed command is small than this value, diameter computation is not operated. Setting is done in WEB\_09 MinLine SPD.

```

WEB ▶ MinLine SPD
09          10.0 %

```

#### 7.4.8 Minimum Diameter Setting (Compulsory)

Minimum diameter indicates the diameter of the smallest core in % against the maximum diameter in full diameter. Minimum diameter is used as the minimum limit of diameter computation during operation, and the selected initial core value is restricted by the minimum diameter. Therefore, it should be set equal to or less than the diameter initialized by multi-function input, analog input, or communication. It can be set in WEB\_10 Min Diameter.

```

WEB ▶ Min Diameter
10          10.0 %

```

#### 7.4.9 Diameter Computation Source Setting (Compulsory)

In WEB CONTROL mode, the diameter determines the motor speed keeping a certain line speed. At this time, as the diameter becomes less, motor rotating speed gets faster, while as the diameter become larger, the motor rotating speed gets slower, keeping a certain line speed. Accordingly, the diameter computation source is the function that decides whether to calculate the diameter computation by inverter internal S/W or to calculate the analog output of the diameter sensor attached to the system through the analog input terminal of the inverter.

① Diameter Computation Source when computing the diameter by inverter S/W

Computation of diameter by inverter S/W is to compute the diameter by the built-in S/W. You may set WEB\_14 Diameter Src to "Internal".

```

WEB ▶ Diameter Src
14          Internal

```

② Diameter Computation Source when computing the diameter using diameter sensor

To compute the diameter using diameter sensor, you need, first, to set WEB\_14 Diameter Src to "External", and then one of Analog input AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, and AIO\_25 Ai3 Define to "Diameter".

```

WEB ▶ Diameter Src
14          External

```

```

AIO ▶ Ai1 Define
01          Diameter

```

**Note) When the diameter computation source is set to "External", the diameter initialization function doesn't move.**

#### 7.4.10 Rewind/Unwind Function Setting (Compulsory)

Tension control is divided into three (3) method; First, Unwind Function – tension control in such manner as time goes by the diameter of material gets smaller keeping rewinding; Second, tension control of a fixed roll such as Bridle Roll or Nip Roll; Lastly, Wind or Rewind Function – tension control in such manner as time goes by the diameter of material gets larger keeping winding. In case of setting Rewind/Unwind function, please set to “Rewind” when winding the material in WEB\_17 Re/Un Wind or when it is Bridle Roll or Nip Roll, while set to “Unwind” when unwinding the material. Motor rotating direction and splicing operation direction is decided depending on the setting of WEB\_17 Re/Un Wind.

- ① When it is Bridle Roll or Nip Roll, or in case of winding the material;

WEB ▶	Re/Un Wind
17	Rewind

- ② In case of unwinding material

WEB ▶	Re/Un Wind
17	Unwind

#### 7.4.11 Overwind/Underwind Function Setting (Compulsory)

In case of Rewinding or Unwinding, there are two kinds of method depending on the location when winding or unwinding the material; First – Overwinding that is winding or unwinding the material from the upper part, Second – Underwinding that is winding or unwinding the material from the lower part. Roll rotating direction and PID output are decided depending on the setting of inverter operation command, WEB\_17 Re/Un Wind, and WEB\_18 O/U Wind. Selection of Overwind/Underwind function can be set in WEB\_18 O/U Wind.

- ① In case of winding or unwinding the material from the upper part;

WEB ▶	O/U Wind
18	Overwind

- ② In case of winding or unwinding the material from the lower part;

WEB ▶	O/U Wind
18	Underwind

Following figure and table shows line speed command, PID output command, splicing command direction **following the setting of Rewind/Unwind** function and **Overwind/Underwind** function. For further detail, please refer to the explanation on WEB group.

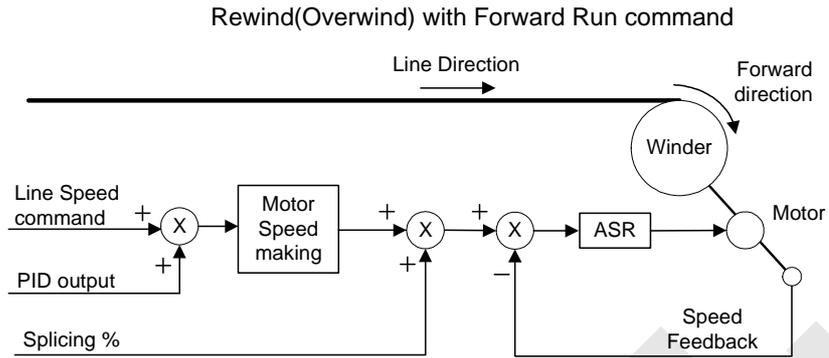


Figure 1. Roll Rotating Direction at the time of Rewind/Overwind Setting, Forward Direction Operation Command

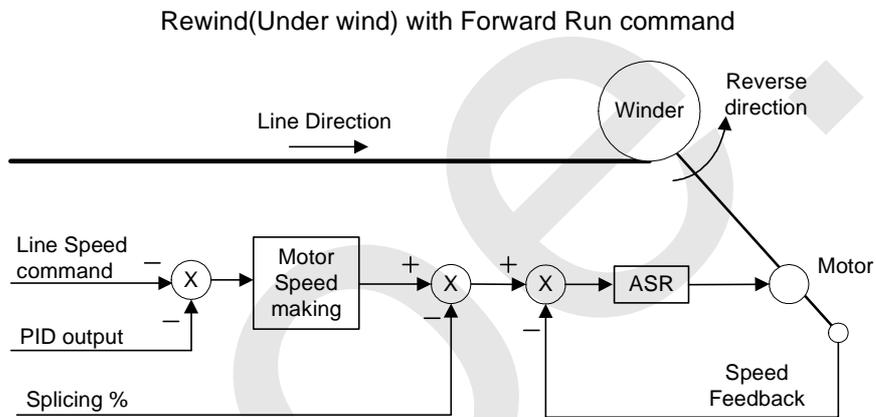


Figure 2. Roll Rotating Direction at the time of Unwind/Overwind Setting, Forward Direction Operation Command

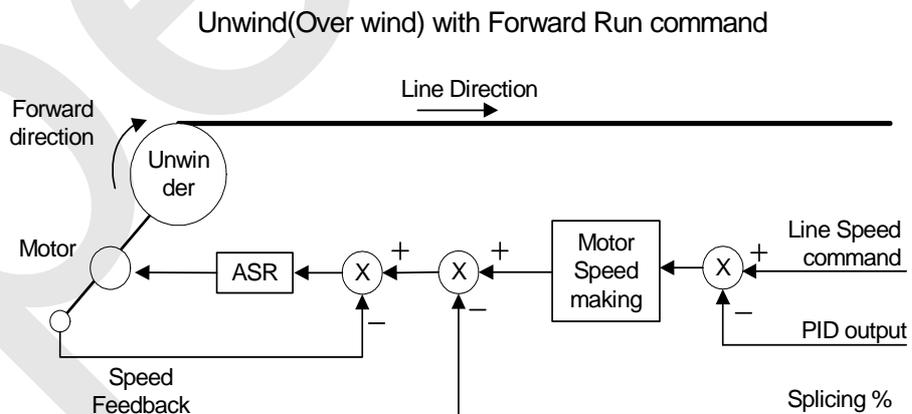


Figure 3. Roll Rotating Direction at the time of Unwind/Overwind Setting, Forward Direction Operation Command

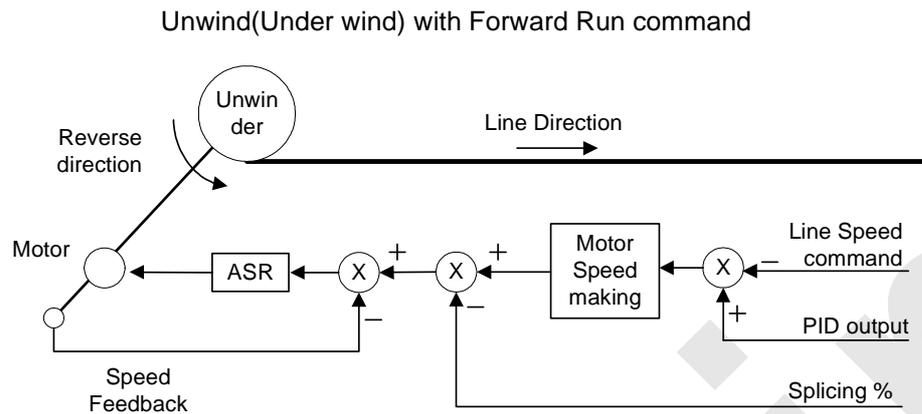


Figure 4. Roll Rotating Direction at the time of Unwind/Overwind Setting, Forward Direction Operation Command

#### 7.4.12 tension Reference input Setting (Compulsory)

In case of using loadcell for tension control sensor, tension reference is used for setting the set point of actual tension. In this case, final tension Reference, the output of set block becomes the reference input of PID control. When not using Taper function, Boost function, and Stall function, tension reference input value becomes the reference input of PID control. Tension reference input setting constitute three methods; by keypad, by analog input, and by communication. The sum of the values from these three method is input, that is the sum of WEB\_19 Tension input + Analog input + communication. Furthermore, upper/lower limit is restricted within the range of  $-100.0\% \sim 100.0\%$ . At this time, WEB\_28 PIDRef Sel should be set to "Taper Out". If dancer is used, it means controlling the position of dancer rather than actual tension. Therefore if WEB\_28 PIDRef Sel is set to "Dancer Pos", the value set in tension input reference input is meaningless. If dancer taper function is used where analog output(AIO\_74, AIO\_79) is set to "Tension Out", its usage is meaningful. For the dancer position, like in the case of tension reference, the sum of WEB\_29 Dancer Pos + Analog input + communication is input

##### ① Tension Reference Input Setting by Keypad (In case of using loadcell)

To conduct tension reference input setting by keypad, you may set WEB\_19 Tension Input.

<b>WEB ▶ TensionInput</b>
19                      50.0 %

##### ② Tension Reference Input Setting by Analog Input (In case of using loadcell)

To conduct tension reference input setting by analog input, you may set one of Analog input AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, and AIO\_25 Ai3 Define to "Tension Ref".

<b>AIO ▶ Ai1 Define</b>
01      Tension Ref

③ Tension Reference Input Setting by Communication (In case of using loadcell)

To conduct tension reference input setting by communication, you may use communication common area Address 0x0511. For further detail, please refer to communication common area data.

④ Dancer Position Input Setting by Keypad (In case of using dancer)

To conduct dancer position input setting by Keypad, you may set WEB\_28 PIDRef Sel to "Dancer Pos" and then set WEB\_29 Dancer Pos.

WEB ► PIDRef Sel  
28 Dancer Pos

WEB ► Dancer Pos  
29 50.0 %

⑤ Dancer position input Setting by analog input (In case of using dancer)

To conduct dancer position input setting by analog input, you may set WEB\_29 PIDRef Sel to "Dancer Pos", and then set one of Analog input AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, and AIO\_25 Ai3 Define to "Dancer Ref".

WEB ► PIDRef Sel  
28 Dancer Pos

AIO ► Ai1 Define  
01 Dancer Ref

⑥ Dancer position input Setting by communication (In case of using dancer)

To conduct dancer position input setting by communication, you may set WEB\_28 PIDRef Sel to "Dancer Pos" and then use communication common area address 0x0512.. For further detail, please refer to communication common area data.

WEB ► PIDRef Sel  
28 Dancer Pos

**All the functions related with PID control should be set. The relevant function codes are as follows;**

**-. WEB\_30 ProcPID Kp1**

**-. WEB\_32 ProcPID Ki1**

**-. WEB\_42 PIDOGainRe or WEB\_43 PIDOGainUn**

**-. Please operate it with the rest function codes related with PID control set to default. If any change required, please refer to the explanation on WEB group function.**

**7.4.13 PID Control Feedback Source Setting (Compulsory)**

Setting the amount of feedback at the time of PID control can be conducted in two ways; First, PID feedback by analog input, Second, PID feedback by communication. You can set it in WEB\_47 PID F/B Src.

① PID Feedback Setting by Analog Input

To conduct PID feedback setting by analog input, first, you may set WEB\_47 PID F/B Src to "Analog", and then set one of Analog input AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, and AIO\_25 Ai3 Define to "Tension F/B".

**WEB ▶ PID F/B Src**  
**47        Analog**

**AIO ▶ Ai1 Define**  
**01        Tension F/B**

② PID Feedback Setting by Communication

To conduct PID feedback setting by communication, first, you may set WEB\_47 PID F/B Src to "Option" and then use communication common area Address 0x0513. For further detail, please refer to communication common area data. In case of using PID Feedback for communication, however, its feedback should be done with communication cycle not exceeding 10 [msec]. If communication cycle exceeds 10 [msec], PID feedback setting by communication should not be conducted.

**WEB ▶ PID F/B Src**  
**47        Option**

**7.5 Display Group (DIS\_[ ] [ ])**

**7.5.1 DIS\_01 ~ 03 (User Selection Display 1, 2, and 3)**

In the User Selection Display 1, 2, and 3, one of the followings selected can be indicated. Factory default is "PreRamp Ref" for DIS\_01, "DC Bus Volt" for DIS\_03, and "Terminal In" for DIS\_03. If "WEB Control" is selected for CON\_02 Application of Control(CON) Group, it displays the following. Please be noted that the displays at the time of WEB CONTROL are summarized only in this data.

Function Code	Loader Display	Name of Function	Unit	Explanation on Function
DIS_01 ~ DIS_03	Diameter	Diameter	%	Displays diameter in % value
	Line SPD CMD	Line Speed Command	%	Display line speed command in % value
	Reel SPD	Roll Speed	%	Display roll rotating speed in % value

### 7.5.2 Digital Input/Output Group (DIO\_[ ])

#### 1) DIO\_01 ~ DIO\_07 (Definition of multi-function input P1~7)

In case of selecting CON\_02 Application of Control(CON) Group as "WEB Control", you may select the following function in addition. For further detail, please refer to the explanation on WEB group function.

Function Code	Loader Display	Name of Function	Unit		
DIO_01 ~ DIO_07	Dia Hold	Diameter Computation Hold Command	Select when desiring to hole the diameter computation		
	Dia Preset	Diameter Initialization Command	Select when initializing diameter		
	CoreSize-L	Core Select 1 Function	Select one of WEB_04 ~ WEB_07 by On/Off of the multi-function input terminal at the time of diameter initialization by keypad		
	CoreSize-H	Core Select 2 Function	<b>CoreSize-L</b>	<b>CoreSize-H</b>	<b>Preset Core Applied</b>
			OFF	OFF	WEB_04 Diam Preset 1
			ON	OFF	WEB_05 Diam Preset 2
			OFF	ON	WEB_06 Diam Preset 3
	ON	ON	WEB_07 Diam Preset 4		
	Tension Disable	Tension Control Prohibition	Prohibit the process PID controller output when the set multi-function input terminal is On.		
	PI Gain Sel	Process PID Controller PI Gain Transfer	PI Gain of process PID is transferred from 1 to 2 when the set multi-function input terminal is On. (WEB_30) (WEB_31) (WEB_32) (WEB_33)		
	PID ITerm Clear	Accumulated portion of I controller of Process PID controller is initialized	Accumulated portion of I controller of Process PID controller is initialized when the set multi-function input terminal is On.		
	Taper Disable	Taper Function Prohibition	Stops the taper function when the multi-function input terminal set during operation mode by taper function is On		
	Stall Enable	Stall Function Setting	Stall function operates when the set multi-function input terminal is On.		
	Boost Enable	Boost Function Setting	Boost function operates when the set multi-function input terminal is On		
	Quick Stop	Emergency Stop Function Setting	Inverter stops after the lapse of the time set in WEB_54 when the multi-function input terminal set to stop the inverter operation at emergency is On		
Jog Web	Jog operation function Setting	Jog operates when the set multi-function input terminal is On. <b>FUN_01 should be set to "Terminal 1"</b> , and Jog operates even if Fx terminal is not On			
Under Wind	Under wind function Setting	Although the value in WEB_18 is set to "Overwind", it operates Under wind if the set multi-function input terminal is On.			
Unwinder	Unwinder function Setting	Although the value in WEB_17 set to "Rewind", it operates Unwinder if the set multi-function input terminal is On.			

### (1) Diameter Hold function :

If the multi-function input terminal set to "Dia Hold" is On, it stops diameter computation and maintains the diameter value. At this time, the diameter hold function operates if one of the following conditions is satisfied.

- ① Condition of diameter initialization (Except function code initialization) is not satisfied, and the multi-function input terminal set to "Dia Hold" is On
- ② Condition of diameter initialization (Except function code initialization) is not satisfied, and the multi-function input terminal set to "Quick Stop" is On
- ③ Condition of diameter initialization (Except function code initialization) is not satisfied, and the multi-function input terminal set to "Quick Stop" is On, and the multi-function input terminal set to "TensionDisable" is On, or WEB\_27 Tension Enb is "Disable"
- ④ Condition of diameter initialization (Except function code initialization) is not satisfied, and the multi-function input terminal set to "Jog Web" is On.
- ⑤ Condition of diameter initialization (Except function code initialization) is not satisfied, and WEB Break occurs.

### (2) Diameter Preset Function :

The multi-function input terminal set to "Dia Preset becomes On, when the diameter preset function operates if one of the following conditions is satisfied.

- ① The multi-function input terminal set to "Dia Preset becomes On, and the line speed command is less than the set value of WEB\_09 MinLine SPD
- ② The multi-function input terminal set to "Dia Preset becomes On, and the multi-function input terminal set to "TensionDisable" is On.

When initializing the function code in PAR\_01 Para. Init, the initialized value of diameter in this case is always initialized with the set value of WEB\_04 Diam Preset 1.

### (3) Jog operation function :

Jog operates if one of the following conditions is met where the multi-function input terminal set to "Jog Web" becomes On.

- ① FUN\_01 Run/Stop Src is set to "Terminal 1", and only the multi-function input terminal set to "Jog Web" is On
- ② FUN\_01 Run/Stop Src is set to "Keypad", and only the multi-function input terminal set to "Jog Web" is On after the FWD button is pressed in keypad
- ③ **When FUN\_01 Run/Stop Src is set to "Terminal 1", the inverter doesn't operate if both Fx signal and Jog Web signal are On.**

### 2) Multi-function Auxiliary Output Terminal Definition (AX1~AX2) and Open collector (OC1) output

When CON\_02 Application of Control (CON) Group is selected as "WEB Control", you can select the following function in addition. For further detail, please refer to WEB group function explanation.

Function Code	Loader Display	Definition of Function		Unit	Explanation of Function
		Name	Setting Range		
DIO_41	AX1 Define	Web Break Detection	WEB Break	%	Detects and outputs the short of Web
		Up to Speed Detection	Up to Spd	%	Detects and outputs the deviation between line speed command and actual line speed
		False Core Detection	False Core	%	Outputs if the diameter is less than the set value in WEB_16

The rest of the multi-function output terminal has the same function. In the standard input/output board, however, AX1 and AX2 are relay output while OC1 is open collector output.

### 7.5.3 Analog Input/Output Group (AIO\_[][])

If you select "WEB Control" at CON\_02 Application, you can select following functions more. The function description is simple, so refer to WEB Group function description for more details.

Function Code	Loader Display	Definition of Function		Unit	Explanation of Function
		Name	Setting Range		
AIO_01	Ai1 Define	Line Speed Command	Line SPD Ref	%	The set value of WEB_08 MaxMotor SPD is maximum line speed command 0 ~ 100% where the input is 0 ~ 10V. In case of ±10V input, it recognizes 0 ~ 10V.
		Tension Command	Tension Ref	%	It means the maximum tension command value is ±10 where the input is ±10V
		Dancer Position Command	Dancer Ref	%	It means dancer command value is ±100% where the input is ±10V
		Taper Command	Taper Ref	%	It means taper command value is ±100% where the input is ±10V
		Tension Feedback	Tension F/B	%	It means the amount of tension feedback is ±100% where the input is ±10V
		Diameter Input	Diameter	%	In case of using the diameter sensor, it means the diameter is ±100% where the input is ±10V
		Diameter Initialization	Diam Preset	%	In case of using diameter initialization by analog input, it means the diameter is ±100% where the input is ±10V
AIO_74	AO1 Define	Final Line Speed Command	Line Speed	%	Outputs the final line speed command that is the sum of line speed command and PID controller output
		Final Tension Command	Tension Out	%	Outputs the final tension command after computing Taper, Boost, and Stall
		Diameter	Diameter	%	Outputs the current diameter

#### 7.5.4 Function Group (FUN\_[][])

If CON\_02 Application of Control (CON) Group is selected as "WEB Control", you may select the following function in addition. For further detail, please refer to the explanation on WEB group function.

Function Code	Loader Display	Definition of Function		Unit	Explanation of Function
		Name	Setting Range		
FUN_02	Spd Ref Sel	Speed Setting Method	Line SPD Ref		It is set when conducting line speed command with analog input at the time of Web control.
			Line SPD Opt		It is set when conducting line speed command with communication at the time of Web control..

**Note)** In case of setting FUN\_02 Spd Ref Sel to the other value than "Line SPD Ref" or "Line SPD Opt", you cannot make exact Web control. Therefore, please set "Line SPD Ref" or "Line SPD Opt" without fail.

#### 7.5.5 Control Group (CON\_[][])

CON\_02 Application allows you the setting of general vector control mode and WEB control mode. **In case of conducting Web control, please set "WEB Control" without fail. Only when setting "WEB Control", you can confirm all the function and Web group necessary for WEB control in the keypad.**

Function Code	Loader Display	Definition of Function		Unit	Explanation of Function
		Name	Setting Range		
CON_02	Application	application control	General Vect		It is set when using the general vector function.
			WEB Control		It is set when using Web control function.

### 7.6 Function Code of WEB Application Group (WEB\_[][])

Code No.	Comm. Addr	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
WEB_00	-	Selection of Function Code	Jump Code	1 ~ 59			Yes	
WEB_01	7C01	Diameter Size Display	Diameter	5.0 ~ 100.0	%	10.0	No	7-18
WEB_02	7C02	Selected Initial Diameter	Current Core (Display Only)	0 (Diam Preset 1) 1 (Diam Preset 2) 2 (Diam Preset 3) 3 (Diam Preset 4) 4 (Analog) 5 (Option)		0 (Diam Preset 1)	No	7-18
WEB_03	7C03	Setting of the Type of Diameter Initialization	DiaPresetSrc	0 (Keypad) 1 (Analog) 2 (Option)		0 (Keypad)	No	7-18
WEB_04	7C04	1 <sup>st</sup> Diameter Initial Value	Diam Preset 1	WEB_10 ~ 100.0	%	10.0	No	7-20
WEB_05	7C05	2nd Diameter Initial Value	Diam Preset 2	WEB_10 ~ 100.0	%	15.0	No	7-20
WEB_06	7C06	3rd Diameter Initial Value	Diam Preset 3	WEB_10 ~ 100.0	%	20.0	No	7-20
WEB_07	7C07	4th Diameter Initial Value	Diam Preset 4	WEB_10 ~ 100.0	%	25.0	No	7-20
WEB_08	7C08	Motor Maximum Rotating Speed with Min. Diameter	MaxMotor SPD	75.0 ~ 3600.0	rpm	300.0	Yes	7-21
WEB_09	7C09	Minimum Effective Line Speed	MinLine SPD	0.0 ~ 100.0	%	5.0	No	7-21
WEB_10	7C0A	Minimum Diameter	Min Diameter	5.0 ~ 100.0	%	10.0	No	7-22
WEB_11	7C0B	Selection of Acceleration/Deceleration Time Setting in case of WEB Control	AccDecWeb	0 (No) / 1 (Yes)		1 (Yes)	No	7-22
WEB_12	7C0C	Acceleration Time in case of WEB Control	Acc TimeWeb	0.00 ~ 6000.0	sec	0.50	Yes	7-22
WEB_13	7C0D	deceleration Time in case of WEB Control	Dec TimeWeb	0.00 ~ 6000.0	sec	0.50	Yes	7-22
WEB_14	7C0E	Setting of the Type of Diameter Computation	Diameter Src	0 (Internal) 1 (External)		0 (Internal)	No	7-22
WEB_15	7C0F	Time Constant of Diameter Computation LPF	Diameter LPF	0.01 ~ 300.00	sec	5.00	Yes	7-23
WEB_16	7C10	False Core Value	False Core	0.0 ~ 50.0	%	5.0	Yes	7-23
WEB_17	7C11	Rewind/Unwind Setting	Re/Un Wind	0 (Rewind) 1 (Unwind)		0 (Rewind)	No	7-23
WEB_18	7C12	Overwind Setting /Underwind Setting	O/U Wind	0 (Overwind) 1 (Underwind)		0 (Overwind)	No	7-24
WEB_19	7C13	Tension Reference Input Setting	TensionInput	-100.0 ~ 100.0	%	0.0	Yes	7-26
WEB_20	7C14	Taper Type Setting	Taper Type	0 (None) 1 (Hyperbolic) 2 (Linear)		0 (None)	No	7-26
WEB_21	7C15	Taper Input Value Setting	Taper Input	-100.0 ~ 100.0	%	0.0	No	7-26
WEB_22	7C16	Boost Type Setting	Boost Type	0 (Proportional) 1 (Fixed)		0 (Proportional)	No	7-27
WEB_23	7C17	Boost Input Value Setting	Boost Input	0.0 ~ 50.0	%	0.0	No	7-27
WEB_24	7C18	Stall Type Setting	Stall Type	0 (Proportional) 1 (Fixed)		0 (Proportional)	No	7-28
WEB_25	7C19	Stall Input Value Setting	Stall Input	0.0 ~ 50.0	%	0.0	No	7-28
WEB_26	7C1A	Ramp Time Setting of Tension Reference Input Value	Tension Ramp	0.00 ~ 600.00	sec	5.00	Yes	7-29
WEB_27	7C1B	Tension Control Enable Setting	Tension Enb	0 (Disable) 1 (Enable)		1 (Enable)	No	7-30
WEB_28	7C1C	PID Reference Type Setting	PIDRef Sel	0 (Dancer Pos) 1 (Taper Out)		1 (Taper Out)	No	7-30
WEB_29	7C1D	Dancer Reference position Setting	Dancer Pos	-100.0 ~ 100.0	%	0.0	Yes	7-31
WEB_30	7C1E	Process PID P1 Gain Setting	ProcPID Kp1	0.0 ~ 999.9	%	10.0	Yes	7-31
WEB_31	7C1F	Process PID P2 Gain Setting	ProcPID Kp2	0.0 ~ 999.9	%	0.0	Yes	7-31
WEB_32	7C20	Process PID I1 Gain Setting	ProcPID Ki1	0.0 ~ 100.0	sec	5.0	Yes	7-31
WEB_33	7C21	Process PID I2 Gain Setting	ProcPID Ki2	0.0 ~ 100.0	sec	0.0	Yes	7-31

## 7. WEB Control Application

Code No.	Comm. Addr.	Code Name	LCD DISPLAY	Setting Data			Adjustment During Run	PAGE
				Range	Unit	Default		
WEB_34	7C22	PID Gain Ramp Time Setting	PIDGain RAMP	0.1 ~ 100.0	sec	1.0	Yes	7-32
WEB_35	7C23	Process PID P Gain Profiler Type Setting	P Profiler	0 (Linear) 1 (Square) 2 (Cubed) 3 (Quadratic)		0 (Linear)	No	7-32
WEB_36	7C24	Process PID P Gain Profiler Gain Setting	P Apt Gain	-1.00 ~ 10.00		0.00	No	7-32
WEB_37	7C25	Process PID D Gain Setting	ProcPID Kd	0.0 ~ 100.0	%	0.0	Yes	7-33
WEB_38	7C26	Process PID D Gain LPF	ProcKd LPF	0.0 ~ 100.0	sec	2.0	Yes	7-33
WEB_39	7C27	Process PID Positive Limit	Proc Pos Lmt	-100.0 ~ 100.0	%	100.0	Yes	7-33
WEB_40	7C28	Process PID Negative Limit	Proc Neg Lmt	-100.0 ~ 100.0	%	-100.0	Yes	7-33
WEB_41	7C29	Process PID Output LPF Time Constant	PID Out LPF	0.00 ~ 100.00	sec	1.00	Yes	7-34
WEB_42	7C2A	Rewind-Use Process PID Output Gain	PIDOGainRe	-250.0 ~ 250.0	%	0.0	Yes	7-34
WEB_43	7C2B	Unwind-Use Process PID Output Gain	PIDOGainUn	-250.0 ~ 250.0	%	0.0	Yes	7-34
WEB_44	7C2C	PID Controller Type Setting	PID Type	0 (Proportional) 1 (Fixed)		0 (Proportional)	No	7-34
WEB_45	7C2D	Minimum PID Controller Output Setting	Min FPID	0.0 ~ 50.0	%	10.0	No	7-34
WEB_46	7C2E	Time of Maintenance of PID Controller After Break	PIDHoldTime	0.0 ~ 100.0	sec	5.0	Yes	7-36
WEB_47	7C2F	Process PID Feedback Type Setting	PID F/B Src	0 (Analog) 1 (Option)		0 (Analog)	No	7-36
WEB_48	7C30	WEB Break Detection Function Setting	WB Enable	0 (No) / 1 (Yes)		0 (No)	Yes	7-38
WEB_49	7C31	Setting of Time Delayed until Web Break Detection after Inverter Operation	INV WB Delay	0.1 ~ 600.0	sec	1.0	Yes	7-38
WEB_50	7C32	Time Delayed for WEB Break Detection	WB Delay	0.1 ~ 600.0	sec	1.0	Yes	7-38
WEB_51	7C33	WEB Break Detection Level	WB Level	0.0 ~ 100.0	%	0.0	Yes	7-38
WEB_52	7C34	Up to Speed Judgment Setting	UTS Enable	0 (No) / 1 (Yes)		0 (No)	Yes	7-39
WEB_53	7C35	Up to Speed Level	UTS Level	0.0 ~ 100.0	%	0.0	Yes	7-39
WEB_54	7C36	Quick Stop time Setting	Quick Stop	0.0 ~ 100.0	sec	1.0	Yes	7-39
WEB_55	7C37	Jog Speed Setting	JogSpd Web	0.0 ~ 100.0	%	10.0	Yes	7-40
WEB_56	7C38	Jog Acceleration/Deceleration Time Setting Select	JogTime Sel	0 (No) / 1 (Yes)		1 (Yes)	No	7-40
WEB_57	7C39	Jog Acceleration Time Setting	JogAcc Time	0.00 ~ 6000.0	sec	5.00	Yes	7-40
WEB_58	7C3A	Jog deceleration time Setting	JogDec Time	0.00 ~ 6000.0	sec	5.00	Yes	7-40
WEB_59	7C3B	Splicing Level Setting	Splice Level	0.0 ~ 100.0	%	0.0	Yes	7-40

## 7.7 WEB Group Function

### 7.7.1 Jump code(WEB\_00)

You may directly jump into the code desired using WEB\_00.

**(Example) If you want to move to WEB\_03;**

Press [PROG] key, and then press [SHIFT/ESC] / [▲UP] / [▼DOWN] keys to set 3.

Then you may move to the following mode by pressing [ENT] key.



After jump movement, you can move to the other code using [▲UP] / [▼DOWN] key.

### 7.7.2 Diameter Display

#### 1) WEB\_01 Diameter : Diameter Size Display

It indicates in % value the sizes of the diameter computed by the inverter internal S/W or the diameter of the analog output of the diameter sensor built in the inverter stem input through the analog input terminal.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_01	Diameter	Diameter Size Display	5.0 ~ 100.0	%	10.0

#### 2) WEB\_02 Current Core : Display of Initial Diameter Selected

It indicates the initial diameter selected. It is displayed as follow depending on the setting of WEB\_03 DiaPresetSrc. First, when set to "Keypad", depending on the combination of multi-function input (DIO\_01 ~ DIO\_07) it displays "Diam Preset 1 ~ Diam Preset 4". Second, when set to "Analog", it displays "Analog". Lastly, when set to "Option", it displays "Option".

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_02	Current Core	Displays initial diameter selected (Display Only)	Diam Preset 1 Diam Preset 2 Diam Preset 3 Diam Preset 4 Analog Option		Diam Preset 1

### 7.7.3 Diameter Initialization

#### 1) WEB\_03 DiaPreset Src : Diameter Initialization Type Setting

The core will be replaced when winding out the material in case of rewinding or when unwinding out the material. In this case, it requires informing the inverter of the core being replaced when winding or unwinding the material again, and then initializing the computed diameter. Core initialization method constitutes the methods by multi-

function input terminal, by analog input terminal , and by communication.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_03	DiaPresetSrc	Diameter Initialization Type Setting	Keypad Analog Option		Keypad

① Initialization of Core by Multi-function Input Terminal

- Initialization of Core by Multi-function Input Terminal requires setting WEB\_03 to "Keypad" first.
- Select one of multi-function input terminals (DIO\_01 ~ DIO\_07), and set it to "Dia Preset".
- Select two of multi-function input terminals (DIO\_01 ~ DIO\_07), and set them to "CoreSize-L" and "CoreSize-H".
- Core can be initialized according to On/Off of multi-function input terminal set to "Dia Preset". The core value initialized becomes, however, one of the initial values set in WEB\_04 ~ WEB\_07 according to On/Off of the multi-function input terminal set to "CoreSize-L" and "CoreSize-H".
- In case of using the core in one kind only, you don't need to set "CoreSize-L" and "CoreSize-H". In this case, only WEB\_04 Diam Preset 1 is applied to the core.

**Example)** The initial diameter value when DIO\_01, DIO\_02, and DIO\_03 are set to "Dia Preset", "CoreSize-L", and "CoreSize-H" respectively.

WEB ▶ Preset Src  
03 Keypad

DIO ▶ P1 define  
01 Dia Preset

DIO ▶ P2 define  
02 CoreSize-L

DIO ▶ P3 define  
03 CoreSize-H

P2 ON/OFF	P3 ON/OFF	Preset Core Value Applied
OFF	OFF	WEB_04 Diam Preset 1
ON	OFF	WEB_05 Diam Preset 2
OFF	ON	WEB_06 Diam Preset 3
ON	ON	WEB_07 Diam Preset 4

## ② Initialization of Core by Analog Input Terminal

- Initialization of Core by Analog Input Terminal requires setting of WEB\_03 to "Analog" first.
- Select one of multi-function input terminals (DIO\_01 ~ DIO\_07) and then set it to "Dia Preset".
- Select one of analog input terminal definitions (AIO\_01, AIO\_13, AIO\_25), and then set it to "Diam Preset".
- You may initialize the diameter according to On/Off of multi-function input terminal set to "Dia Preset". The diameter value initialized, however, becomes the value of analog input terminal set, and it is restricted to WEB\_10 Min Diameter.

**Example)** Setting DIO\_01 and AIO\_01 to "Dia Preset" and "Diam Preset" respectively

WEB ▶	Preset Src
03	Analog

DIO ▶	P1 define
01	Dia Preset

AIO ▶	Ail Define
01	Diam Preset

## ③ Initialization of Core by Communication

- Initialization of Core by Communication requires setting of WEB\_03 to "Option" first.
- Select one of multi-function input terminals (DIO\_01 ~ DIO\_07), and then set it to "Dia Preset".
- You may initialize the diameter according to On/Off of multi-function input terminal set to "Dia Preset". The diameter value initialized becomes the value of communication set, and is restricted to WEB\_10 Min Diameter.

**2) WEB\_04 Diam Preset 1 : 1st diameter initial value****3) WEB\_05 Diam Preset 2 : 2nd diameter initial value****4) WEB\_06 Diam Preset 3 : 3rd diameter initial value****5) WEB\_07 Diam Preset 4 : 4th diameter initial value**

The diameter initialization in tension control (Diam Preset) means empty core at the time of winder operation, while full core at the time of Unwinder operation. In case of initialize the core with multi-function input terminal, it is set with one of WEB\_04 Diam Preset 1 ~ WEB\_07 Diam Preset 4 according to the WEB\_04 Diam Preset 1 ~ WEB\_07 Diam Preset 4 set to "CoreSize-L" and "CoreSize-H". In case all the defined multi-function input terminals are Off or are not set with the multi-function input, the initial value of diameter is set to "Diam Preset 1". If applying to bridle roll or nip roll instead of general winder and unwinder, you may set all the initial values to 100.0 %. In the core initialization using analog and communication, any initial value of WEB\_04 Diam Preset 1 ~ WEB\_07 Diam Preset 4 is not applied. The reference of the set value is the diameter initial value expressed in [%] at the time of full diameter.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_04	Diam Preset 1	1st Core initial value	WEB_10 ~ 100.0	%	10.0
WEB_05	Diam Preset 2	2nd Core initial value	WEB_10 ~ 100.0	%	15.0
WEB_06	Diam Preset 3	3rd Core initial value	WEB_10 ~ 100.0	%	20.0
WEB_07	Diam Preset 4	4th Core initial value	WEB_10 ~ 100.0	%	25.0

The condition of diameter initialization is as follow.

- ③ Multi-function input terminal set to "Dia Preset" is On and the line speed command is less than the set value of WEB\_09 MinLine SPD
- ④ Multi-function input terminal set to "Dia Preset" is On and the multi-function input terminal set to "TensionDisable" is On
- ⑤ In case of initializing the function code in PAR\_01 Para. Init. In this case, however, the diameter initialization value is always initialized with the set value of WEB\_04 Diam Preset 1.

### 7.7.4 Speed setting when doing WEB controlling

#### 1) WEB\_08 MaxMotor SPD : Motor Maximum Rotating Speed in case of Minimum Diameter

This function indicates the motor maximum rotating speed in case of the minimum diameter with the maximum line speed command given. Accordingly, to maintain the exact line speed, it requires setting the exact motor rotating speed in WEB\_08 MaxMotor SPD. Setting can be conducted as follow. Assuming maximum line speed in 100[m/m], gear ratio in 5:1, and core diameter in 100[mm], the maximum motor speed set value becomes 1591.5[rpm].

$$\text{Max. motor speed [rpm]} = \text{Gear Ratio} \times \frac{\text{Max. Line Speed}}{\text{Core Diameter} \times \pi} = 5 \times \frac{100 [m/m]}{0.1 [m] \times \pi} = 1591.55 [rpm]$$

**WEB ▶ MaxMotor SPD**  
**08      1591.5 rpm**

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_08	MaxMotor SPD	Motor Maximum Rotating Speed in case of Minimum Diameter	75.0 ~ 3600.0	rpm	300.0

**Note) After the installation of the system, be sure to check the motor rotating speed using the gauge when the maximum line speed command is given by the empty core.**

#### 2) WEB\_09 MinLine SPD : Minimum Effective Line Speed

This function is the function related with diameter computation and diameter initialization. The set value is the minimum value of the line speed command that can compute the diameter, that is expressed in [%] in proportion of maximum line speed (100[%]). At the time of winder operation, the line speed command should be larger than the set value to compute the diameter. If the line speed command is smaller than the set value, the diameter

computation is not conducted. If the line speed command is smaller than the set value, and the multi-function input terminal set to "Dia Preset" is On, the diameter can be initialized. The reference of the set value is the [%] of maximum line speed.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_09	MinLine SPD	Minimum Effective Line Speed	0.0 ~ 100.0	%	5.0

### 3) WEB\_10 Min Diameter : Minimum Diameter

It indicates the diameter of the smallest core [%], which is used as the minimum limit of diameter computation at the time of Taper computation, P Gain Profiler computation, and Unwinder operation, the minimum limit in diameter computation at the time of Unwinder operation, and the minimum limit in the diameter initialization using analog communication, diameter initialization using communication, diameter computation using diameter sensor. In the inverter S/W, if the set value of WEB\_10 Min Diameter is larger than the set value of WEB\_04 Diam Preset 1 ~ WEB\_07 Diam Preset 4, it is limited to the set value of WEB\_10 Min Diameter. Therefore, the set value of WEB\_10 Min Diameter should be set to the set value equal to or less than that of WEB\_04 Diam Preset 1 ~ WEB\_07 Diam Preset 4. If applying Bridle Roll or Nip Roll other than general winder and unwinder, the set value of WEB\_10 Min Diameter should be set as 100[%].

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_10	Min Diameter	Minimum Diameter	5.0 ~ 100.0	%	10.0

### 4) WEB\_11 AccDecWeb : Selecting Acceleration/Deceleration Time Setting at the time of Web Control

### 5) WEB\_12 Acc TimeWeb : Acceleration Time at the time of Web Control

### 6) WEB\_13 Dec TimeWeb : Deceleration Time at the time of Web Control

When setting WEB\_11 AccDecWeb to "No", WEB\_12 Acc TimeWeb and WEB\_13 Dec TimeWeb are not displayed on Keypad, but acceleration/deceleration time of FUN\_40 Acc Time-1, FUN\_41 Dec Time-1 is applied at the time of Web control. When set to "Yes", WEB\_12 Acc TimeWeb and WEB\_13 Dec TimeWeb are displayed on Keypad, and then the set value of WEB\_12 Acc TimeWeb and WEB\_13 Dec TimeWeb are applied to the acceleration/deceleration time, and the reference of acceleration/deceleration reference is "Max Speed".

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_11	AccDecWeb	Selecting Acceleration/Deceleration Time Setting at the time of Web Control	No Yes		Yes
WEB_12	Acc TimeWeb	Acceleration Time at the time of Web Control	0.00 ~ 6000.0	sec	0.50
WEB_13	Dec TimeWeb	Deceleration Time at the time of Web Control	0.00 ~ 6000.0	sec	0.50

### 7.7.5 Diameter Computation

#### 1) WEB\_14 Diameter Src : Diameter Computation Type Setting

This function is the function code that determine whether to calculate the diameter computation by inverter internal S/W or to receive the input diameter via the analog output of the diameter sensor attached to the system through the analog input terminal of the inverter. In case of setting WEB\_14 Diameter Src to "Internal", diameter is computed by the inverter internal S/W, while if set to "External", the diameter is input by the diameter sensor. Accordingly, when set to "External", the diameter is not computed in the diameter inverter, and furthermore, the diameter preset function doesn't operate.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_14	Diameter Src	Diameter Computation Type Setting	Internal External		Internal

#### 2) WEB\_15 Diameter LPF : Diameter Computation LPF Time Constant

When computing the diameter, to avoid the sudden change in diameter you may set low pass filter(LPF). This set value operates with LPF delay time. In case set the set value in large scale, diameter computation becomes slow, while setting in small scale, diameter computation becomes quicker.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_15	Diameter LPF	Diameter Computation LPF Time Constant	0.01 ~ 300.00	sec	5.00

#### 3) WEB\_16 False Core : False Core Value Setting

In case the diameter received by the inverter through the diameter computation S/W inside the inverter or by the system where the diameter sensor is built in is smaller than the set value in the WEB\_16 False Core, it is judged as "False Core". At this time, if one of multi-function output DIO\_41 AX1 Define ~ DIO\_43 OC1 Define is set to "False Core", the set multi-function output is On. The reference of the set value is [%] of the diameter.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_16	False Core	False Core Value Setting	0.0 ~ 50.0	%	5.0

### 7.7.6 Winder setting

#### 1) WEB\_17 Re/Un Wind : Rewind/Unwind Setting

There are three methods in general at the time of tension control. First, to control the tension of the fixed roll using Bridle Roll or Nip Roll. Second, to wind the Web as in the Winder in which the diameter of Winder get larger as time goes by. Lastly, to unwind the Web as in the Unwinder in which the diameter of Unwinder gets smaller as time goes by. In this function, you may set to "Rewind" in case of winding the web as in the Winder or control the

tension of the fixed roll using Bridle Roll or Nip Roll while set to "Unwind" in case of unwinding the web as in the Unwinder.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_17	Re/Un Wind	Rewind/Unwind Setting	Rewind Unwind		Rewind

### 2) WEB\_18 O/U Wind : Overwind/Underwind Setting

There are two methods in case of winding or unwinding the web with Winder or Unwinder. First, to wind or unwind the web from up to down centered on the roll. Second, to wind or unwind the web from down to up centered on the roll. This function is the code deciding the way of winding or unwinding the web. According to the set value of the function code, the motor rotating direction is decided. The following figure and the table show the direction of line speed command, PID output command, and splicing command according to WEB\_17 Re/Un Wind and WEB\_18 O/U Wind settings.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_18	O/U Wind	Overwind/Underwind Setting	Overwind Underwind		Overwind


Type Items	Wind	Rewind		Unwind	
		Overwind	Underwind	Overwind	Underwind
Line Speed direction		Positive	Negative	Positive	Negative
PID direction		Positive	Negative	Negative	Positive
Splicing direction		Positive	Negative	Negative	Positive

Table 1. Line Speed, PID and Splicing Direction in case of Forward Direction Command

Type Items	Wind	Rewind		Unwind	
		Over wind	Under wind	Over wind	Under wind
Line Speed direction		Negative	Positive	Negative	Positive
PID direction		Negative	Positive	Positive	Negative
Splicing direction		Negative	Positive	Positive	Negative


Table 2. Line Speed, PID and Splicing Direction in case of Reverse Direction Command

### Direction of PID output, Line Speed

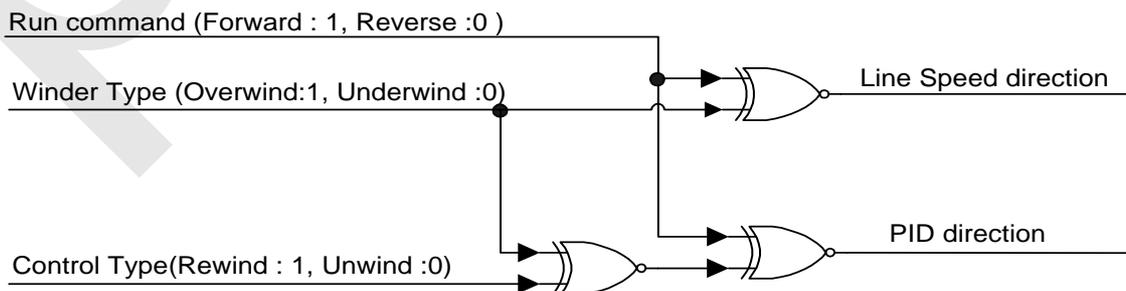


Line Speed, PID direction according to the Command and Function Code

Rewind(Overwind) with Forward Run command

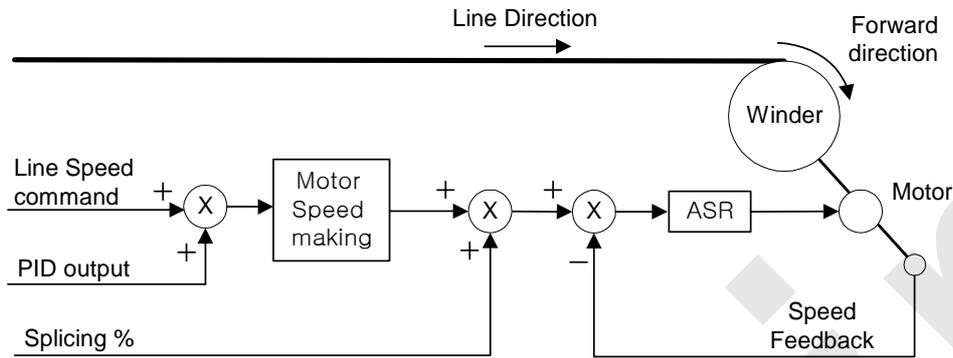


Rewind/Overwind Setting, Roll Rotating Direction in case of Forward Direction Operation

Rewind(Under wind) with Forward Run command

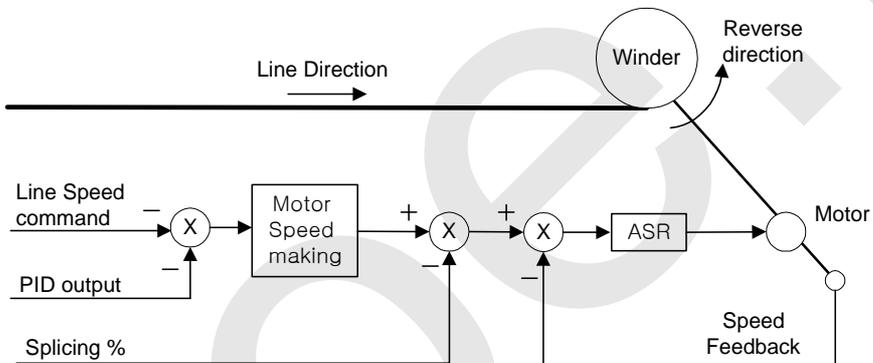


Rewind/Underwind Setting, Roll Rotating Direction in case of Forward Direction Operation

Unwind(Over wind) with Forward Run command

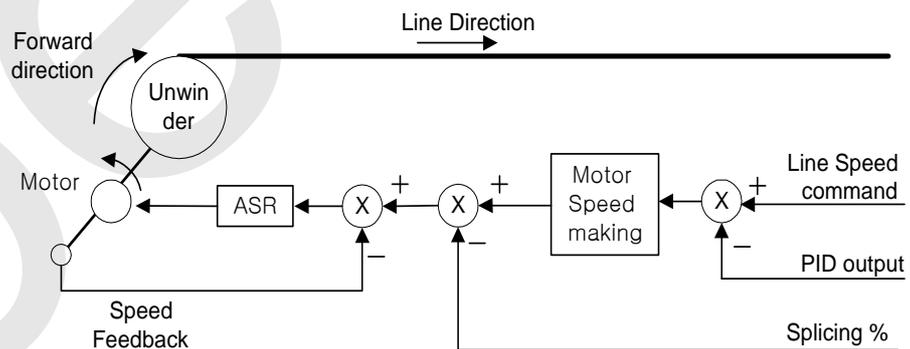

Unwind/Overwind Setting, Roll Rotating Direction in case of Forward Direction Operation

Unwind(Under wind) with Forward Run command

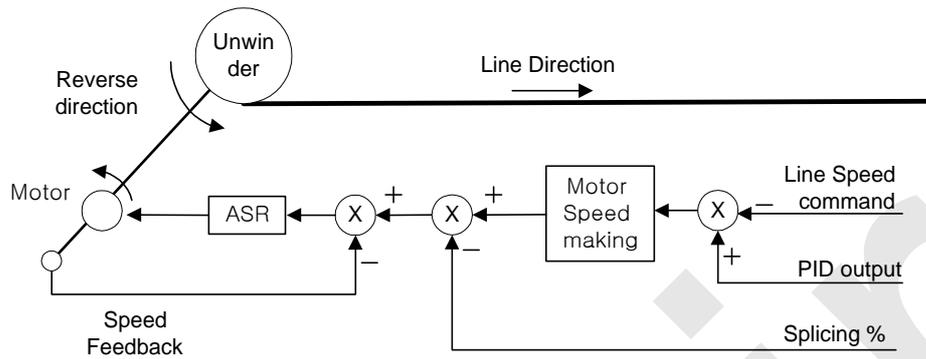

Unwind/Underwind Setting, Roll Rotating Direction in case of Forward Direction Operation

### 7.7.7 Tension controlling setting

#### 1) WEB\_19 Tension Input : tension Reference Input Setting

In case of using loadcell in the tension control you have to set tension reference. If using dancer, you have to set the position reference of dancer. In this case, Taper, Stall and Boost are required according to the system requirement. This function code is the function code where tension reference is set when using the loadcell as the tension control-use sensor. Tension reference is input with the sum of the analog input value at the time of setting WEB\_19 Tension Input and analog input (Ai1 ~ Ai3 Define) to "Tension Ref" and the set value of Address 0x0511 in common area. For further detail, please refer to Block Diagram at the time of Web Control. In case of using dancer, this function code plays the role giving the dancer Taper function. In case of setting the set value of WEB\_28 PIDRef Sel to "Dancer Pos", and setting WEB\_29 Dancer Pos, WEB\_19 Tension Input can be set with the input tension of the dancer. At this time, you may connect with the dancer after setting one of analog output (AIO\_74 AO1 Define, AIO\_79 AO2 Define) to "Tension Out".

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_19	Tension Input	Tension Reference Input	-100.0 ~ 100.0	%	0.0

#### 2) WEB\_20 Taper Type : Taper Type Setting


#### 3) WEB\_21 Taper Input : Taper Amount Input

In case of Winder, as the diameter gets larger, the tension toward the center direction of the diameter increases. Desired tension is, as shown in the Figure 12, toward the direction of dot line. The tension occurs from the stress, however, and therefore the sum of two vectors work as the total tension. To maintain the tension toward the desired direction, you may use this taper function. There are three methods of using taper function. First; it is not to use taper function, that is taper function is not applicable in case of powering On after setting WEB\_20 to "None", setting WEB\_20 to the others than "None" but setting WEB\_21 Taper Input to 0.0[%], and setting one of multi-function inputs (DIO\_01 ~ DIO\_07) to "Taper Disable". Second; it is to set to "Hyperbolic" when the tension


changes showing non-linear behavior depending of the diameter. Third; it is to set to "Linear", when the tension changes showing linear behavior depending on the diameter.

By inputting the amount of taper, the sum of the set value of WEB\_21 Taper Input, the input value of analog input terminal set to Taper Ref", and the set value of address 0x0514 in the common area is decided as the amount of final taper. In general, the value larger than 0 is input as the taper input, but in specific case, the value less than 0 can be input, which means as the diameter gets larger, the tension becomes larger.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_20	Taper Type	Taper Type	None Hyperbolic Linear		None
WEB_21	Taper Input	Taper Input	-100.0 ~ 100.0	%	0.0

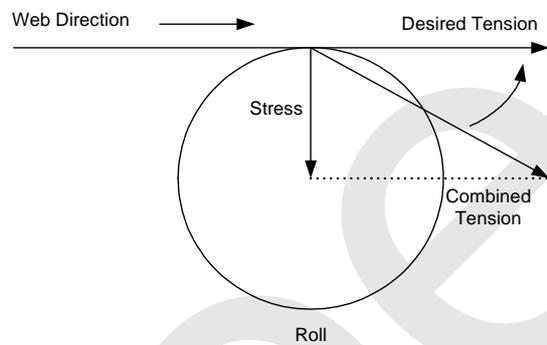

Tension Composition Diagram

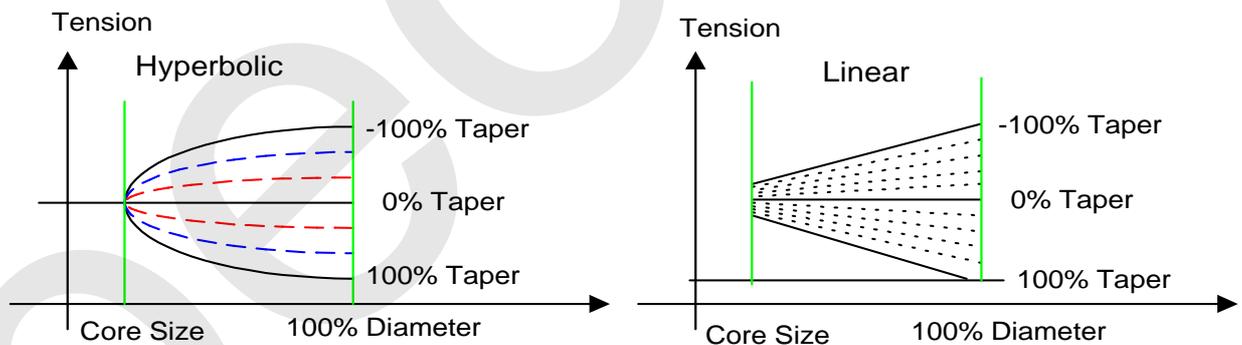

Taper Type and Tension according to the Amount of Taper Set

#### 4) WEB\_22 Boost Type : Boost Type

#### 5) WEB\_23 Boost Input : Boost Input

This function is used when Web is wound with the stronger tension than the preset tension. If WEB\_22 Boost Type is set to "Fixed", the sum of WEB\_23 Boost Input set value and the set value of tension becomes the final set value of tension. For example, with the taper function unused, if the set value of tension is 50[%], and WEB\_23 Boost Input set value is 20[%], the final set value of tension becomes 70[%]. If WEB\_22 Boost Type is set to "Proportional", the set value of tension multiplying by WEB\_23 Boost Input set value is added. For example, with the taper function unused, if the set value of tension 50[%] and WEB\_23 Boost Input set value is 20[%], the set

value of final tension becomes 60[%]. In the boost function, the set value of WEB\_23 Boost Input is not always 0, but it just operates in case of the multi-function input terminal (DIO\_01 ~ DIO\_07) set to "Boost Enable" being On.


Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_22	Boost Type	Boost Type	Proportional Fixed		Proportional
WEB_23	Boost Input	Boost Input	0.0 ~ 50.0	%	0.0

### 6) WEB\_24 Stall Type : Stall Type

### 7) WEB\_25 Stall Input : Stall Input

This function is used when Web is wound with the weaker tension than the preset tension. In case of setting WEB\_24 Stall Type to "Fixed", the set value of tension less WEB\_25 Stall Input set value becomes the set value of final tension. For example, with the taper function unused, if the set value of tension is 50[%], and WEB\_24 Stall Input set value is 20[%], the set value of final tension becomes 30[%]. If WEB\_24 Stall Type is set to "Proportional", the set value of tension multiplying by WEB\_25 Stall Input set value is subtracted. For example, with the taper function unused, if the set value of tension is 50[%] and WEB\_25 Stall Input set value is 20[%], the set value of final tension becomes 40[%]. In the Stall function, the set value of WEB\_25 Stall Input is not always 0, but it just operates in case of the multi-function input terminal (DIO\_01 ~ DIO\_07) set to "Stall Enable" in On.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_24	Stall Type	Stall Type	Proportional Fixed		Proportional
WEB_25	Stall Input	Stall Input	0.0 ~ 50.0	%	0.0

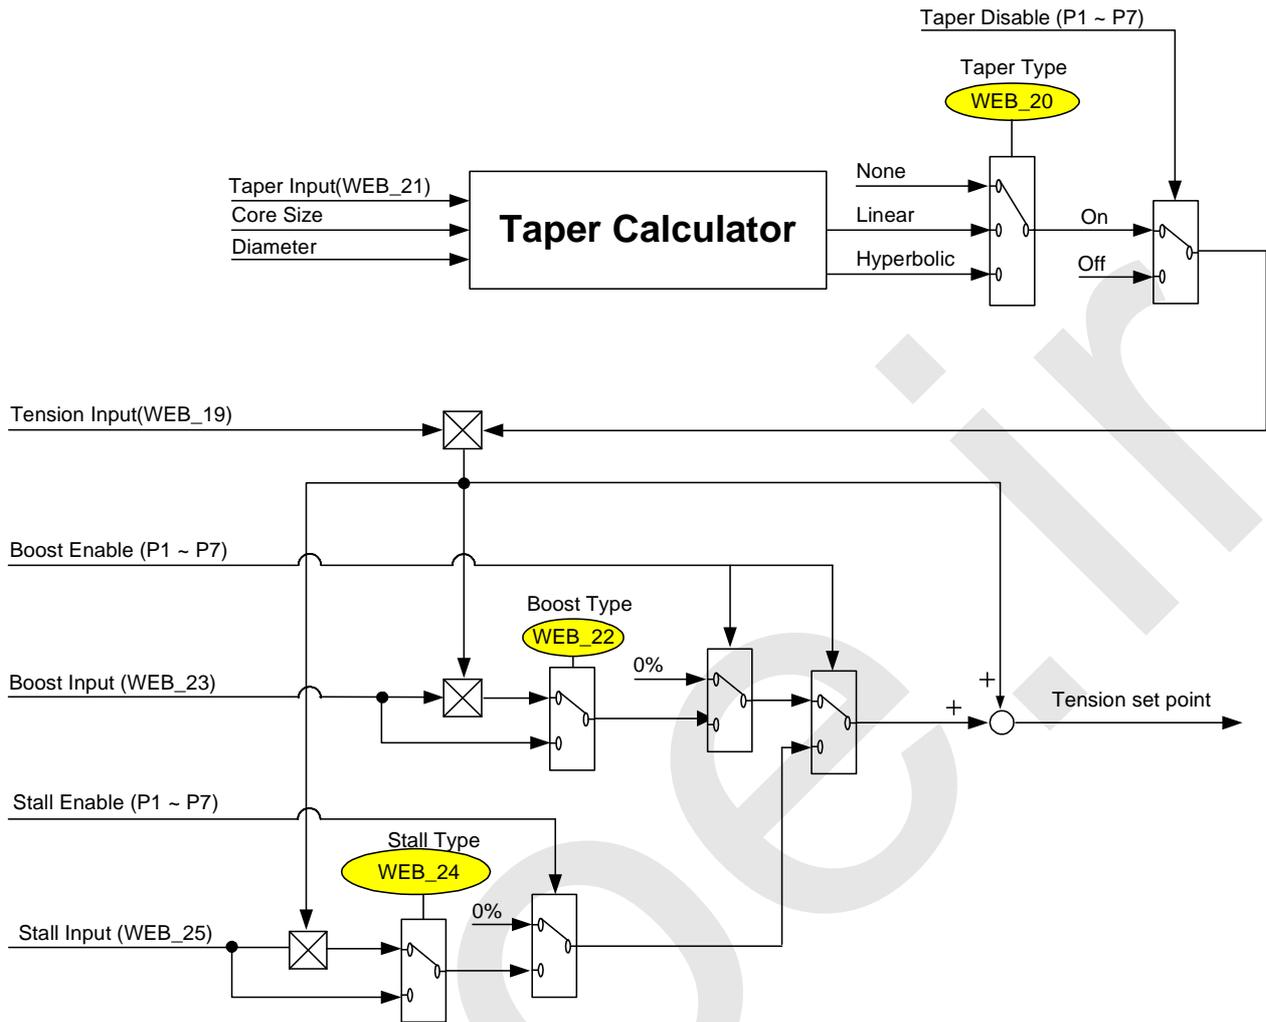


Tension Reference taking Taper, Boost, and Stall into account

**8) WEB\_26 Tension Ramp : Setting of Ramp in Tension Reference Input**

When the machinery starts, Web is in loose state because of lower tension. Therefore the sudden tension command at earlier operation stage may cause unexpected change in tension. To avoid such phenomenon when the command value of loadcell or dancer is applied to the step, the change can be led in smooth manner so that the normal PID controller movement can be carried out by setting the ramp time of the tension input command value. If WEB\_26 Tension Ramp is set to 10.0[sec], and the final PID command set to 50[%], the tension command will operate as shown in the Figure 15.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_26	Tension Ramp	Ramp Time of Tension Reference Input	0.00 ~ 600.00	sec	5.00

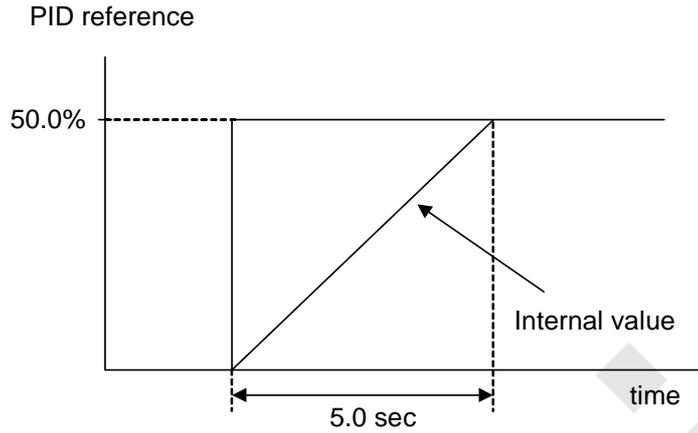


Tension Command where Ramp Time is applied

**9) WEB\_27 Tension Enb : Setting of Tension Control Enable Function**

This is the function of conducting On/Off of the final output of PID controller. If the multi-function input terminal (I/O\_01 ~I/O\_07) set to "TensionDisable" is Off, and WEB\_27 Tension Enb becomes "Enable", PID controller operates. In any other case, PID controller doesn't operate any longer.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_27	Tension Enb	Tension Control Enable Function Setting	Disable Enable		Enable

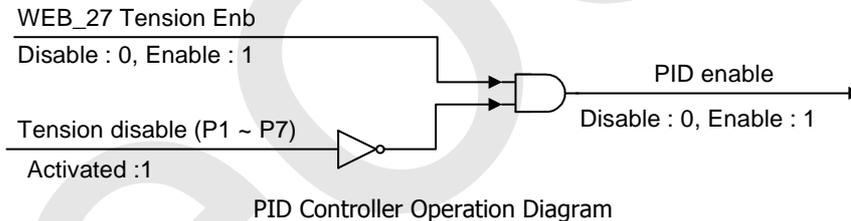

**7.7.8 WEB PID Control**

**1) WEB\_28 PIDRef Sel : PID Reference Type Setting**

When loadcell is used at the time of tension control, PID controller controls actual tension. Accordingly, the reference input of PID controller should be the output of taper computation. Therefore, the set value of WEB\_28 PIDRef Sel in the tension control where loadcell is used becomes "Taper Out". If dancer is used, it controls the actual dancer position where the set value of WEB\_28 PIDRef Sel is "Dancer Pos", and in this case to carry out the tension control of web, you need to set one of analog outputs (AI/O\_74 AO1 Define, AIO\_79 AO2 Define) to "Tension Out", and then connect it with dancer. At this time WEB\_29 Dancer Pos becomes the reference input of PID controller.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_28	PIDRef Sel	PID Reference Type Setting	Dancer Pos Taper Out		Taper Out

### 2) WEB\_29 Dancer Pos : Dancer Reference Position Setting

To maintain the desired tension, you should set the reference position of dancer. In this case it follows the reference position value of dancer with the deviation between the reference position of dancer set to WEB\_29 Dancer Pos and the actual dancer position fed back from outside using PID controller. The reference position of dancer is the sum of the set value of WEB\_29 Dancer Pos and "Dancer Ref" set to Analog inputs (AIO\_01 Ai1 Define, AIO\_13 Ai2 Define, AIO\_25 Ai3 Define).

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_29	Dancer Pos	Dancer Reference Position	-100.0 ~ 100.0	%	0.0


### 3) WEB\_30 ProcPID Kp1 : Process PID Kp1 Gain Setting

### 4) WEB\_31 ProcPID Kp2 : Process PID Kp2 Gain Setting

P Gain means the output of PID controller becomes 100[%] when 100% error is maintained where I Gain is 0. Furthermore, P Gain 50[%] means the output of PID controller becomes 50[%] when 100% error is maintained where I Gain is 0.

When setting multi-function input(DIO\_01 ~ DIO\_07) to "PI Gain Sel" and then powering it On, P Gain is transferred from WEB\_30 ProcPID Kp1 to WEB\_31 ProcPID Kp2 during WEB\_34 PIDGain RAMP Time. For further detail on gain transfer, please refer to WEB\_34 PIDGain RAMP.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_30	ProcPID Kp1	Process PID P1 Gain Setting	0.0 ~ 999.9	%	100.0
WEB_31	ProcPID Kp2	Process PID P2 Gain Setting	0.0 ~ 999.9	%	0.0

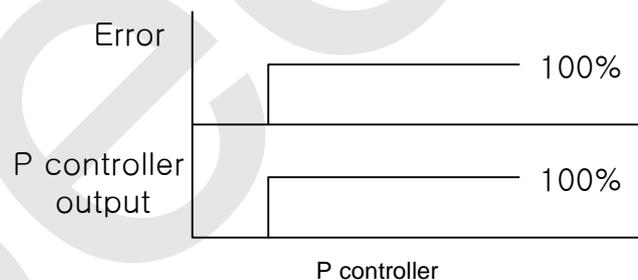


### 5) WEB\_32 ProcPID Ki1 : Process PID Ki1 Gain Setting

### 6) WEB\_33 ProcPID Ki2 : Process PID Ki2 Gain Setting

I Gain 1[sec] means the time taken for the output to be accumulated up to 100[%] when 100[%] Error is maintained where P Gain is 0. After setting the multi-function input (DIO\_01 ~ DIO\_07) to "PI Gain Sel" and then powering it On, I Gain is transferred from WEB\_32 ProcPID Ki1 to WEB\_33 ProcPID Ki2 during the WEB\_34 PIDGain RAMP Time. For further detail on gain transfer, please refer to WEB\_34 PIDGain RAMP.


Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_32	ProcPID Ki1	Process PID I1 Gain Setting	0.0 ~ 100.0	sec	5.0
WEB_33	ProcPID Ki2	Process PID I2 Gain Setting	0.0 ~ 100.0	sec	0.0

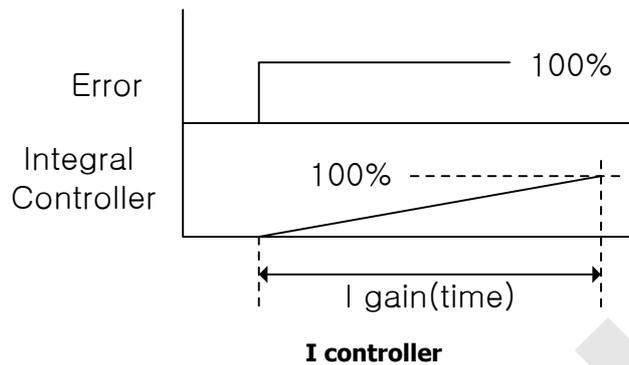

**7) WEB\_34 PIDGain RAMP : PID Gain Ramp Time Setting**

Sudden change in PI Gain may cause unexpected oscillation. To avoid such phenomenon, you need to carry out setting in slow way for a certain period of time when you transfer gain. This is the function of transferring the gain as shown in the Figure when setting multi-function input(DIO\_01 ~ DIO\_07) to "PI Gain Sel" and then powering it On.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_34	PIDGain RAMP	PID Gain Ramp Time Setting	0.1 ~ 100.0	sec	1.0

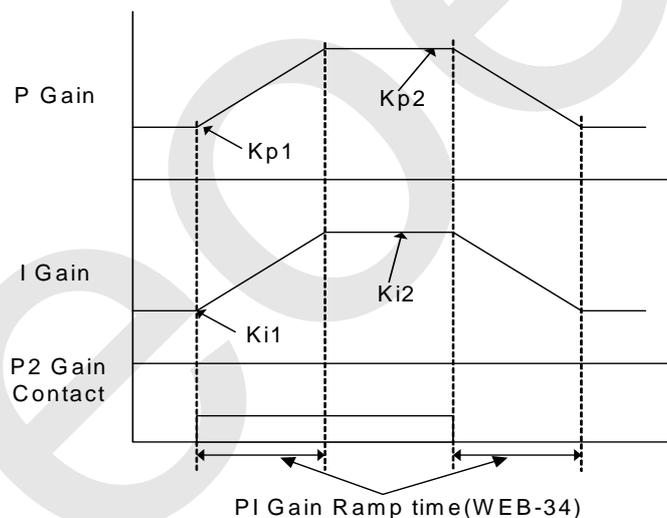


**PI Gain Ramp Time**

**8) WEB\_35 P Profiler : Process PID P Gain Profiler Type Setting**

**9) WEB\_36 P Apt Gain : Process PID P Gain Profiler Gain Setting**

In case of Winder, the inertia increases as the diameter increases when winding the web. Therefore, P Gain has to change to achieve the same winding performance regardless of the increase of inertia following the increased diameter. There exist four (4) types of profiles; Linear, Square, Cubed, and Quadratic being decided in accordance with the kind of web. WEB\_35 P Profiler is the function code that sets the type of P Gain Profiler, while WEB\_37 P Apt Gain is the function code that sets the gain applicable to P Gain Profiler. If WEB\_36 P Apt Gain is set as 0, Profiler function doesn't operate..

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_35	P Profiler	Process PID P Gain Profiler Type Setting	Linear Square Cubed Quadratic		Linear
WEB_36	P Apt Gain	Process PID P Gain Profiler Gain Setting	-1.00 ~ 10.00		0.00

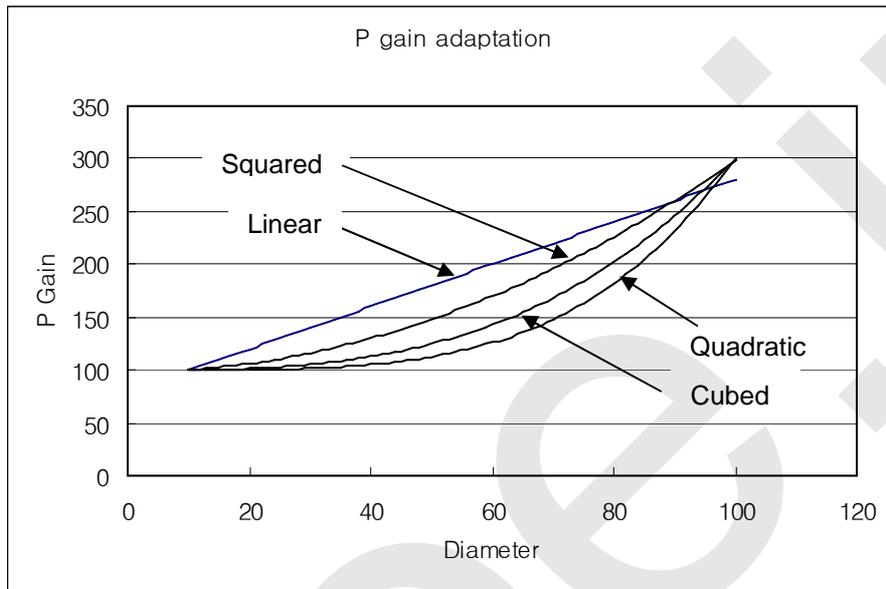

P Gain applicable where P Gain : 100.0[%], Adaptation Gain : 2.00, Core Size : 10.0[%]

### 10) WEB\_37 ProcPID Kd : Process PID D Gain

### 11) WEB\_38 ProcKd LPF : Process PID D Gain LPF Time Constant

WEB\_37 ProcPID Kd and WEB\_38 ProcKd LPF constitute D controller of Process PID controller. When the error deviation is 100[%] where WEB\_37 ProcPID Kd setting is 100 [%], it means D controller output before going through LPF is 100 [%]. Without LPF, D controller generates outputs when the error changes only. As this characteristic makes the system unstable, LPF is a necessary function in D controller.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_37	ProcPID Kd	Process PID D Gain Setting	0.0 ~ 100.0	%	0.0
WEB_38	ProcKd LPF	Process PID D Gain LPF Time Constant	0.0 ~ 100.0	sec	2.0

### 12) WEB\_39 Proc Pos Lmt : Process PID Positive Limit Setting

### 13) WEB\_40 Proc Neg Lmt : Process PID Negative Limit Setting

WEB\_39 Proc Pos Lmt and WEB\_40 Proc Neg Lmt are the upper and lower limits of the final output of Process PID controller. WEB\_39 Proc Pos Lmt sets the (+) limit of PID controller output value, while WEB\_40 Proc Neg Lmt sets (-) limit of PID controller output value. This function expresses the PID controller output in % value. For example, if error is 100[%] and P Gain of PID controller is set as 200[%], the output of PID controller before restricted becomes

200[%]. If the upper limit of PID controller is set as 100[%], however, the final output of PID controller becomes 100[%].

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_39	Proc Pos Lmt	Process PID Positive Limit	-100.0 ~ 100.0	%	100.0
WEB_40	Proc Neg Lmt	Process PID Negative Limit	-100.0 ~ 100.0	%	-100.0

#### 14) WEB\_41 PID Out LPF : Process PID output LPF

This function sets LPF time constant against the process PID controller final output value. As the time constant increases, the responsiveness of PID controller output gets slower, but its stability increases.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_41	PID Out LPF	Process PID output LPF	0.00 ~ 100.00	sec	1.00

#### 15) WEB\_42 PIDOGainRe : Rewind-use Process PID Output Gain

#### 16) WEB\_43 PIDOGainUn : Unwind-use Process PID Output Gain

This function sets the final output gain of Process PID controller. You may set WEB\_42 PIDOGainRe in case of winding the web, that is, when setting "Rewind" in WEB\_17 Re/Un Wind. On the contrary, you may set WEB\_43 in case of unwinding the web, that is when setting "Unwind" in WEB\_17 Re/Un Wind. The set value is the [%] value against the maximum line speed command. For example, if you set WEB\_44 PID Type to "Fixed" and PID output Gain to 10[%] where the line speed command is 50[%], the final line speed command becomes 60[%]. In case the set value of PID output Gain is (-), PID controller operates in reverse direction. This is useful in the sensor in inverse proportion. For example, if the highest pressure falls under the 0[V] voltage of loadcell and the final pressure falls under 10[V] voltage of loadcell, you may use it by setting PID output Gain as (-) value.

**In case of Process PID control, if the line speed command is 0 where PID output is in minus value, the motor may rotate in reverse direction. To avoid this, iV5 is programmed in such manner that it cannot be operated in reverse direction when the PID output is larger than the line speed command in internal S/W.**

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_42	PIDOGainRe	Rewind-use Process PID Output Gain	-250.0 ~ 250.0	%	0.0
WEB_43	PIDOGainUn	Unwind-use Process PID Output Gain	-250.0 ~ 250.0	%	0.0

#### 17) WEB\_44 PID Type : PID Controller Type Setting

#### 18) WEB\_45 Min FPID : Minimum PID Output Setting

In this function, there are two (2) types of Process PID controllers. If WEB\_44 PID Type is set to "Fixed", a certain value of PID controller is output regardless of the line speed command. That is, the final line speed command is the sum of line speed command and PID output. For example, if the line speed command is 50[%] and PID output is 10[%], the final line speed command becomes 60[%]. If the line speed command is changed from 50[%]

to 60[%], the final line speed command becomes 70[%].

- A.** When WEB\_44 PID Type is "Fixed", the final line speed command is;

$$\text{Final Line Speed Command [\%]} = \text{Line Speed Command [\%]} + \text{PID Output [\%]}$$

When WEB\_44 PID Type is set to "Proportional", PID output is generated in proportion with the line speed command. That is, the final line speed command is the sum of line speed command and the PID output in proportion with the line speed command. For example, if the speed command is 50[%] and PID output is 10[%], the final line speed command becomes 55[%]. In this case, the line speed command is larger than the set value of WEB\_45 Min FPID.

- B.** When WEB\_44 PID Type is "Proportional", the final line speed command (in case of line speed command > WEB\_45 Min FPID) is;


$$\text{Final Line Speed Command [\%]} = \text{Line Speed Command [\%]} + \frac{\text{PID Output [\%]} \times \text{Line Speed Command [\%]}}{100}$$

In case of initial operation, the system should maintain the tension of web starting with initial web tension and 0[%] speed command in possession. In the above formula, if the line speed command is 0[%], the final line speed command becomes 0[%], where the tension of web cannot be maintained. Accordingly, to maintain the tension of web, if the line speed command is less than WEB\_45 Min FPID, the final line speed command under the following formula can be applied.

- C.** When WEB\_44 PID Type is "Proportional", the final line speed command (In case of line speed command < WEB\_45 Min FPID) is;

$$\text{Final Line Speed Command [\%]} = \text{Line Speed Command [\%]} + \frac{\text{PID Output [\%]} \times \text{WEB\_45}}{100}$$

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_44	PID Type	PID Controller Type Setting	0 (Proportional) 1 (Fixed)		0 (Proportional)
WEB_45	Min FPID	Minimum PID Output Setting	0.0 ~ 50.0	%	10.0

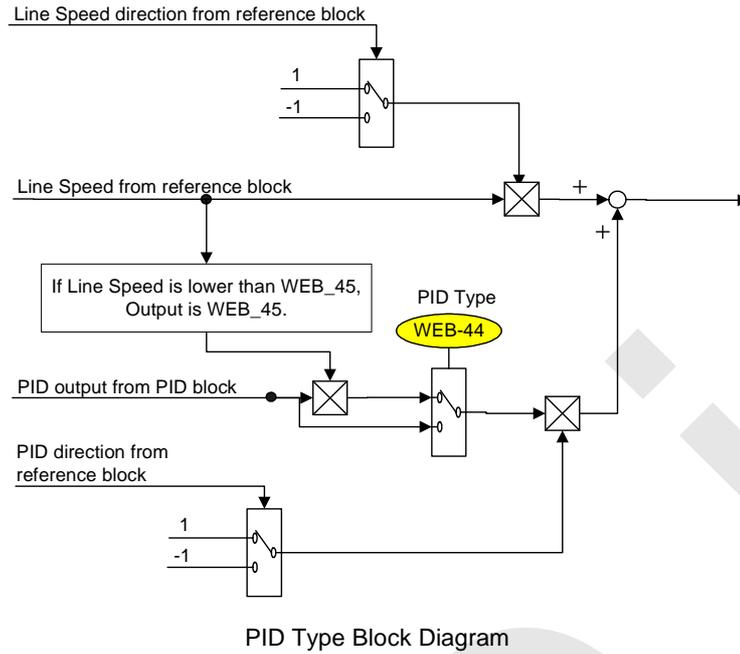

**19) WEB\_46 PIDHoldTime : PID controller Maintenance Time after Hold**

In case of Inverter Hold Command, the motor speed is reduced to 0. In case the output deviation of Process PID controller exists, the motor is operated by the deviation of PID output. To avoid this, this is the function where it conducts PID operation for the period of time set to WEB\_46 PIDHoldTime, and then the motor carries out free run and stops by the friction force of the system. If the output of Process PID is 0, the motor stops regardless of the time set to WEB\_46 PIDHoldTime.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_46	PIDHoldTime	PID Controller Maintenance Time after Hold	0.0 ~ 100.0	sec	5.00


**20) WEB\_47 PID F/B Src : Process PID Feedback Source Setting**

WEB\_47 PID F/B Src is the function where the feedback source is set when Process PID controller is used. When set to "Analog", the definition of analog input terminal (AIO\_01, AIO\_13, AIO\_25) is set to "Tension F/B", and such amount of feedback is input to the inverter. In this case, the amount of feedback is "0" unless the terminal is defined. In case set to "Option", it is to input the amount of feedback to inverter through communication. In this case, the amount of feedback is "0" unless such value is input.

**In case of setting to "Option", please conduct communication cycle not exceeding 10[ms].**

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_47	PID F/B Src	PID Feedback Source	Analog Option		Analog

PID Block

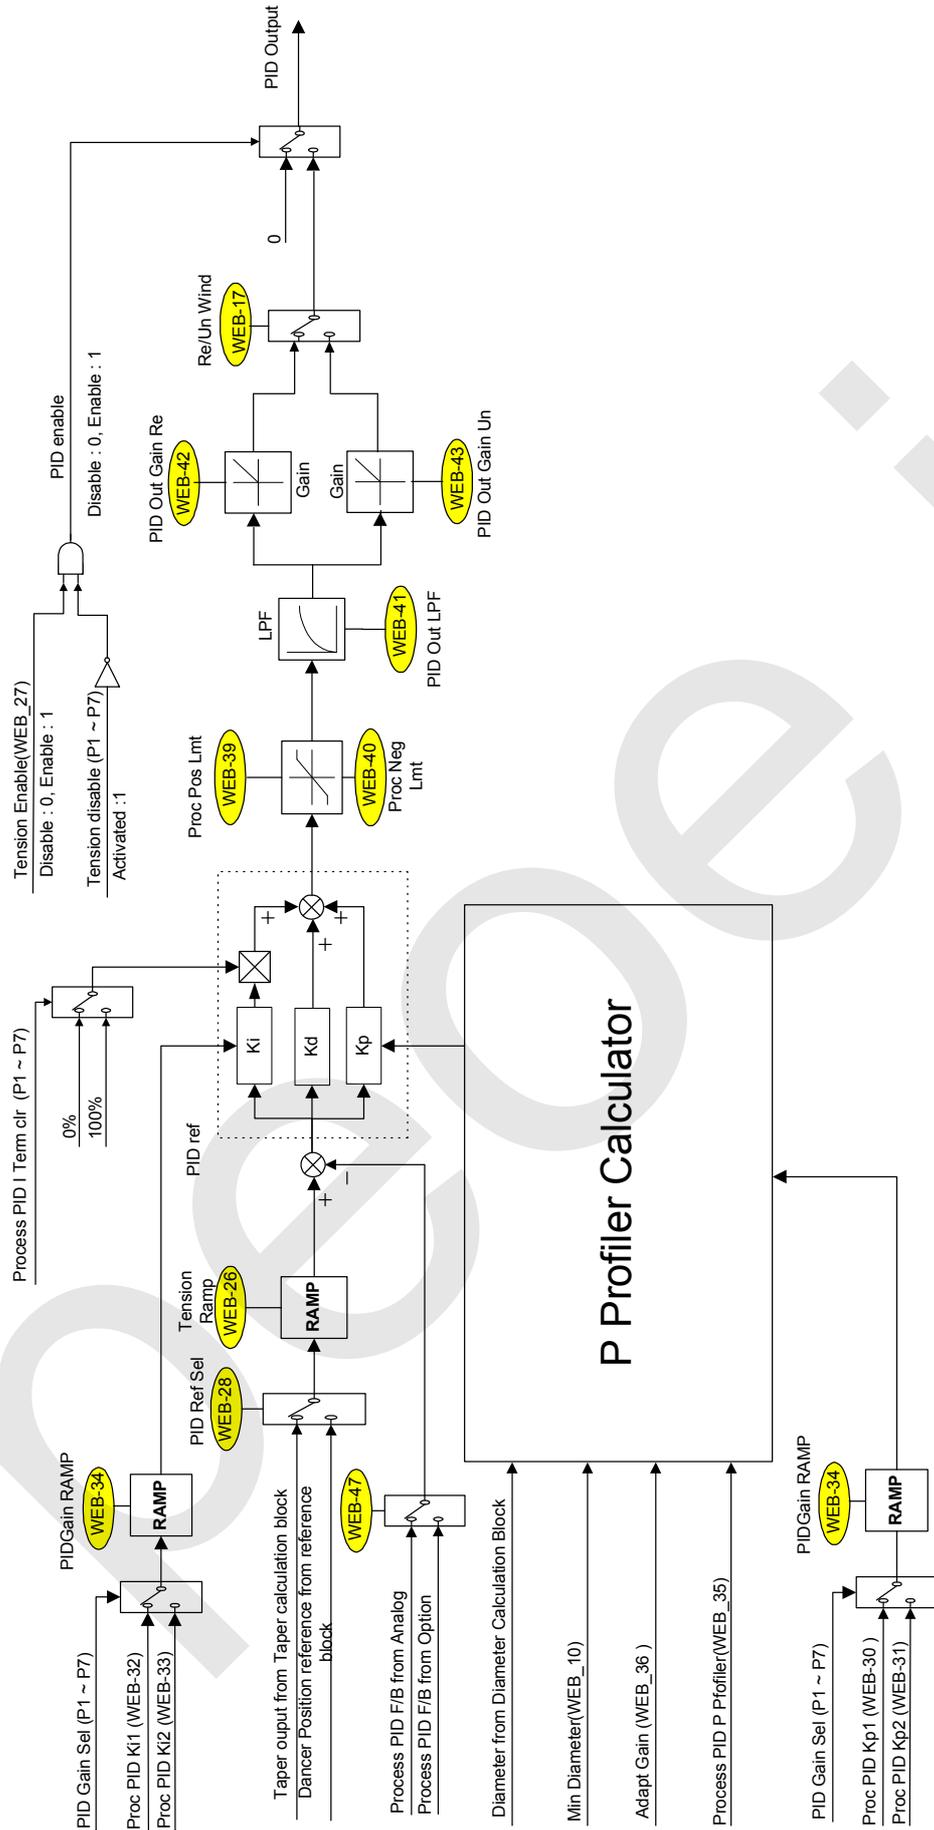


Process PID Block Diagram

### 7.7.9 WEB Break Setting

- 1) **WEB\_48 WB Enable : WEB Break Detection Function Setting**
- 2) **WEB\_49 INV WB Delay : Setting of Delayed Time until WEB Break Detection after Inverter Operation**
- Operation**
- 3) **WEB\_50 WB Delay : Delayed Time in WEB Break Detection**
- 4) **WEB\_51 WB Level : WEB Break Detection Level**

In the web control mode, the web is broken if it has tension it can bear. In this case, if the system continues the web control without such breakage of the web detected, it may cause more serious accident. Accordingly, the inverter is set so as to force the output of PID controller to be "0" when the web breakage is detected, when the diameter computation is not carried out. Furthermore, if one of multi-function output DIO\_41 AX1 Define ~ DIO\_43 OC1 Define of the inverter is set to "WEB Break", it lets out the output contact point showing the state of "breakage". In WEB\_48 WB Enable mode, you can set WEB Break Detection function. If it is set to "Yes", please set the multi-function output and conduct its connection so that the higher-level controller can receive the output. In case of WEB\_49 INV WB Delay, for a certain period of time from the moment the inverter received the operation command, it has lower value of tension feedback, and accordingly it can be misjudged as web break. This is the function, for such situation, not to detect the web break for a certain period of time set in WEB\_49 INV WB Delay since the moment the inverter has started the operation. There exists a number of noises in the actual site, and because of such external factor, the amount of feedback less than the set value can be posted at some moment in WEB\_51 WB Level, which can be judged as WEB Break. Therefore, WEB\_50 WB Delay sets WEB Break Detection Delayed Time. WEB\_51 WB Level is the code to set WEB Break Detection Level where the amount of tension feedback is set in [%] value.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_48	WB Enable	WEB Break Detection Function Setting	No Yes		No
WEB_49	INV WB Delay	Delayed Time until Web Break Detection after Inverter Operation	0.1 ~ 600.0	sec	1.0
WEB_50	WB Delay	Delayed Time in WEB Break Detection	0.1 ~ 600.0	sec	1.0
WEB_51	WB Level	WEB Break Detection Level	0.0 ~ 100.0	%	0.0

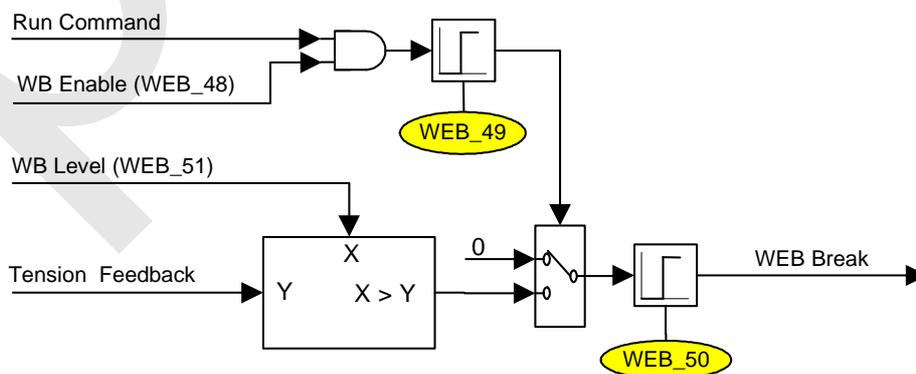

WEB Break Block Diagram


### 7.7.10 Up to Speed Setting

1) **WEB\_52 UTS Enable : Up to Speed Judgment Setting**

2) **WEB\_53 UTS Level : Up to Speed Level Setting**

When Web control is operates in smooth manner, the line speed command is almost similar to the actual line speed. It is because Process PID controller operates reducing such deviation when there occurs the deviation between line speed command and actual line speed. However, too quick line speed command, problem of the motor or mechanical problem can lead to the discrepancy of the line speed command. This may cause serious problem to the system. WEB\_52 UTS Enable and WEB\_53 UTS Level are the functions to judge such situations. If the deviation between line speed command and actual line speed is larger than WEB\_53 UTS Level, and one of multi-function output DIO\_41 AX1 Define ~ DIO\_43 OC1 Define is set to "Up to Spd", it can be acknowledged when you let out the output contact point. WEB\_53 UTS Level is the [%] value against the line speed command. It has 2[%] Band to avoid chattering. **If the set value of WEB\_53 UTS Level is too low, fault operation may happen by the excessive state even near the set level.**

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_52	UTS Enable	Up to Speed Judgment Setting	No Yes		No
WEB_53	UTS Level	Up to Speed Level Setting	0.0 ~ 100.0	%	0.0

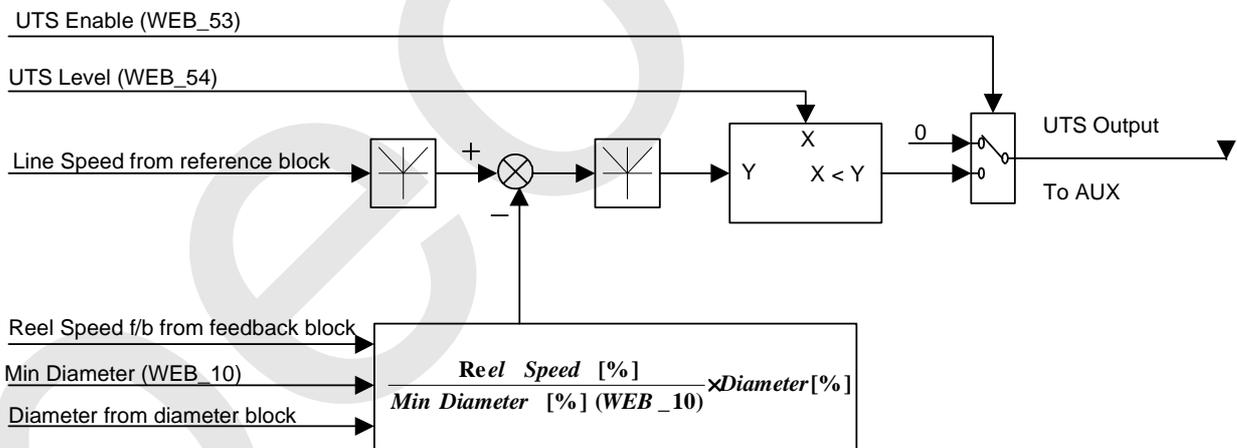

Up to Speed Block Diagram

### 7.7.11 WEB\_54 Quick Stop : Quick Stop Time Setting

It is the function where emergency stop is available when the emergency occurs during sequential operation. If the multi-function input terminal (DIO\_01 ~ DIO\_07) set to "Quick Stop" is On, it conducts emergency stop maintaining the tension of web for the same deceleration time regardless of the current motor rotating speed, that is, the period of time set to WEB\_54 Quick Stop. Even after it completely stopped, the tension of the web is still kept. For example, if the winder roll speed is 170[rpm] and the gear ratio is 10:1, the motor rotating speed is 1700[rpm]. If unwinder

roll speed is 140[rpm] and the gear ratio is 11:1, the motor rotating speed is 1540[rpm]. In this case, if the set value of WEB\_54 Quick Stop of such two inverters is 5[sec], it stops after 5[sec] although the rotating speed of two motors are not same where the multi-function input terminal (DIO\_01 ~ DIO\_07) set to "Quick Stop" is On.

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_54	Quick Stop	Quick Stop Time Setting	0.0 ~ 100.0	sec	1.0

### 7.7.12 WEB Jog Setting

- 1) **WEB\_55 JogSpd Web : Jog Speed Setting**
- 2) **WEB\_56 JogTime Sel : Jog Acceleration/Deceleration Time Setting Select**
- 3) **WEB\_57 JogAcc Time : Jog "Acceleration Time Setting**
- 4) **WEB\_58 JogDec Time : Jog Deceleration Time Setting**

If the multi-function input (DIO\_01 ~ DIO\_07) set to "Jog Web" is On, Process PID controller operates, but doesn't conduct diameter computation. In this case the set value of WEB\_55 JogSpd Web is calculated in % of WEB\_08 MaxMotor SPD, deciding the motor rotating speed. For example, if the set value of WEB\_08 MaxMotor SPD is 300[rpm] and the jog speed set to WEB\_55 JogSpd Web is 20[%] where the multi-function input (DIO\_01 ~ DIO\_07) set to "Jog Web" becomes On, the motor rotating speed is 60[rpm]. In case of jog operation, the jog can set the Acceleration/Deceleration Time instead of the basic Acceleration/Deceleration Time (FUN\_40 Acc Time-1, FUN\_41 Dec Time-1). When WEB\_56 JogTime Sel is set to "No", the basic Acceleration/Deceleration Time is applied during jog operation mode, while when set to "Yes", WEB\_57 JogAcc Time and WEB\_58 JogDec Time are applied during jog operation mode.


Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_55	JogSpd Web	Jog speed Setting	0.0 ~ 100.0	%	10.0
WEB_56	JogTime Sel	Jog Acceleration/Deceleration Time Setting Select	No Yes		Yes
WEB_57	JogAcc Time	Jog Acceleration Time	0.00 ~ 6000.0	sec	5.00
WEB_58	JogDec Time	Jog Deceleration Time	0.00 ~ 6000.0	sec	5.00

### 7.7.13 Splicing Level Setting


In the splicing system, the winder core should be replaced without any change in line speed command. When splicing, the process PID controller doesn't operate in the empty core. Therefore, the multi-function input terminal (DIO\_01 ~ DIO\_07) set to "TensionDisable" should be On. The splicing function doesn't operate during jog operation. In case the web is wound in new core in the winder, sudden load change occurs. Such sudden change in load makes the speed slower, which causes low tension of web, and finally the web becomes drooped. To avoid such phenomenon, you may operate it at higher speed than the line speed command in splicing state. WEB\_59 Splice Level is the [%] value for the line speed command. For example, if the line speed command is 50[m/m], and the set value of WEB\_59 Splice Level

is 10[%], the final line speed command of the empty core at the time of splicing operation becomes 55[m/m].

Function Code	Loader Display	Name of Function	Set Range	Unit	Factory Default
WEB_59	Splice Level	Splicing Level Setting	0.0 ~ 100.0	%	0.0

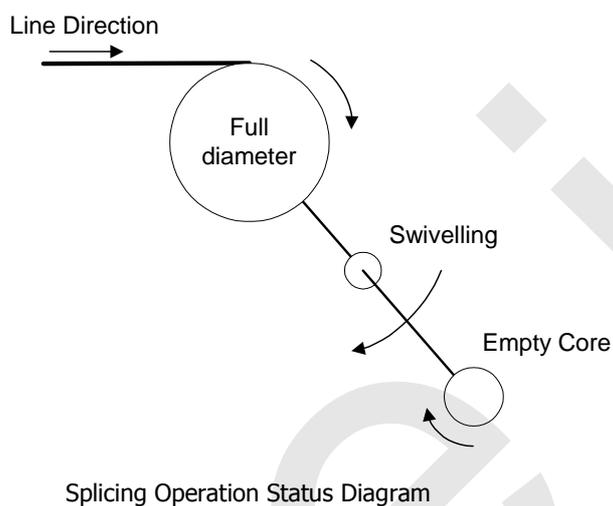

### Speed Calculator

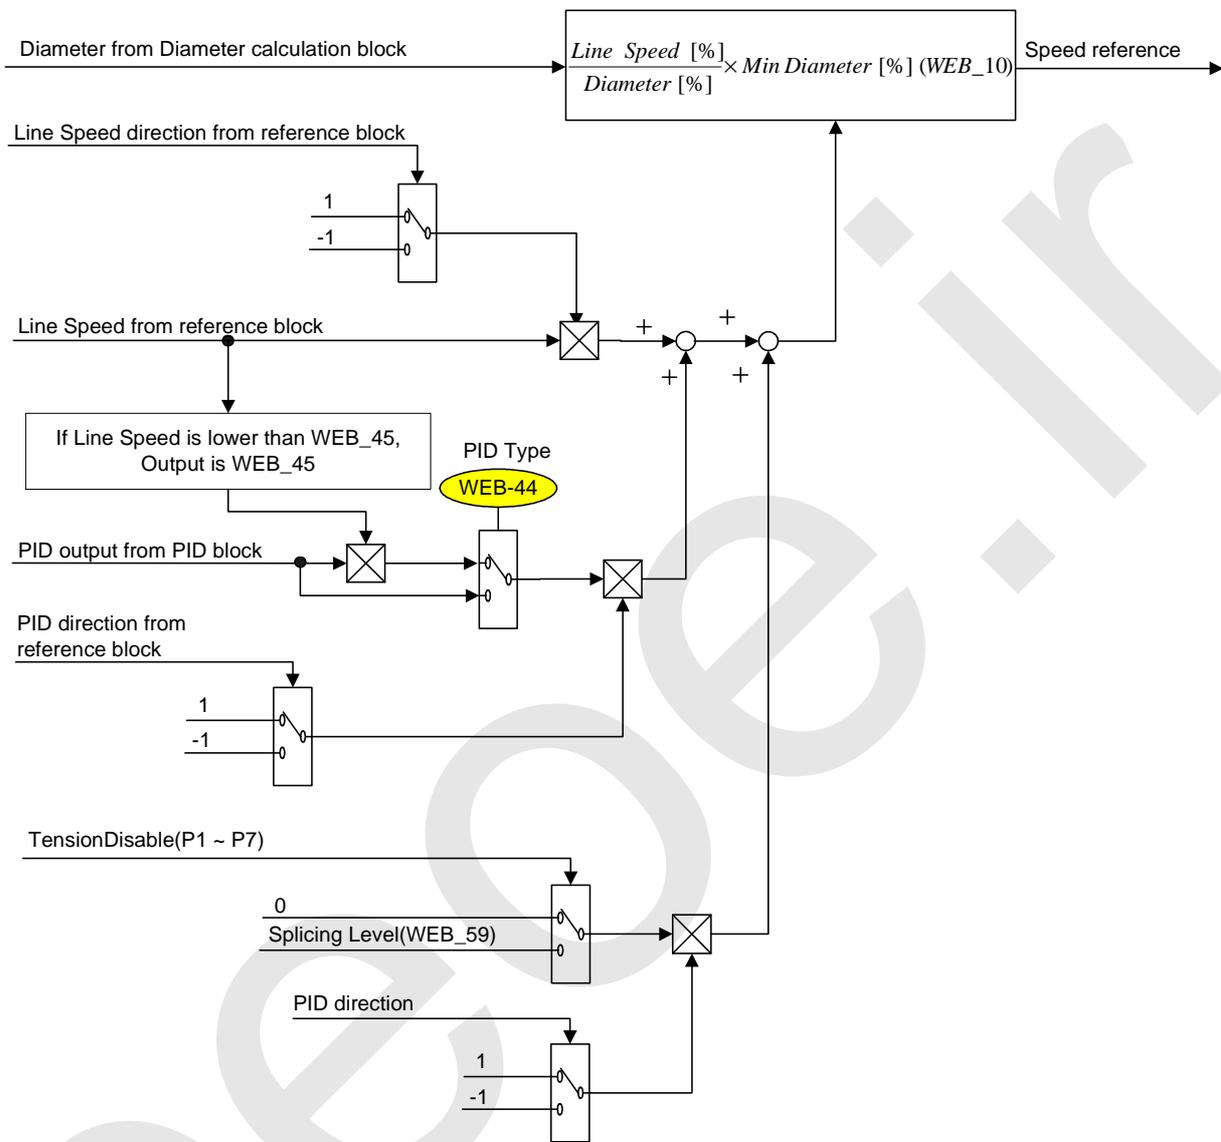

Line Speed Command Block Diagram

# Chapter 8 - Communication Functions

### 8.1 Introduction

This chapter is to explain SV-IV5 inverter serial communication's standard, installation, and program with PC or FA computers. The communication method was designed to drive or monitor SV- IV5 inverter series in long distance through PC or FA computers.

1) Benefits under the communication method

It is easy to apply inverters into automations in factories, because inverters can be driven or monitored according to user's programs.

\* possible to monitor or modify parameters through computers

(example: T\_acc, T\_dec, frequency, and lost command)

\* Interface configuration regarding to RS-485 standard:

1) Possible to execute communications between the inverter and computers by numerous companies

2) Capable of controlling up to 16 inverters at a time with single computer due to the multi-drop link system

3) Interface for noise immunity environment

Inverters can communicate through RS-232/485 converters with computers that are embedded with the RS-232 card. The standard and performance of converters may vary by manufactures, but share basic functions. More details about standard and guideline are advised to follow under the manual provided by specific manufactures.

#### **Caution**


Must understand this manual thoroughly before installation and operation.  
By violating this manual may result in serious injury or damages to other components.

## Chapter 8 Communication Function

### 8.2 Specifications

Category	Specifications
Communication method	RS-485
Transfer form	Bus type, Multi drop Link System
Inverter series	SV-iV5 series
Converter	Embedded with RS-232
Number of connected inverters	Max. 16
Transfer distance	Max. 1,200m (recommend within 700m)
Recommended cable for	0.75mm <sup>2</sup> (18AWG), Shield Type Twisted-Pare Wire
Installation form	Connect to S+,S-, CM of the terminal block
Communication Power	Use the power that are insulated from the inner part of inverter as communication
Communication Speed	Select out of 1,200/2,400/9,600/19,200/38,400 bps
Control procedure	Unsynchronized communication system
Communication system	Half duplex system
Letter system	Modbus-RTU: BINARY LS Bus: ASCII
Stop bit length	1 bit/2 bit
Sum check	2 byte
Parity check	None/Even/Odd

### 8.3 Structure of communication system

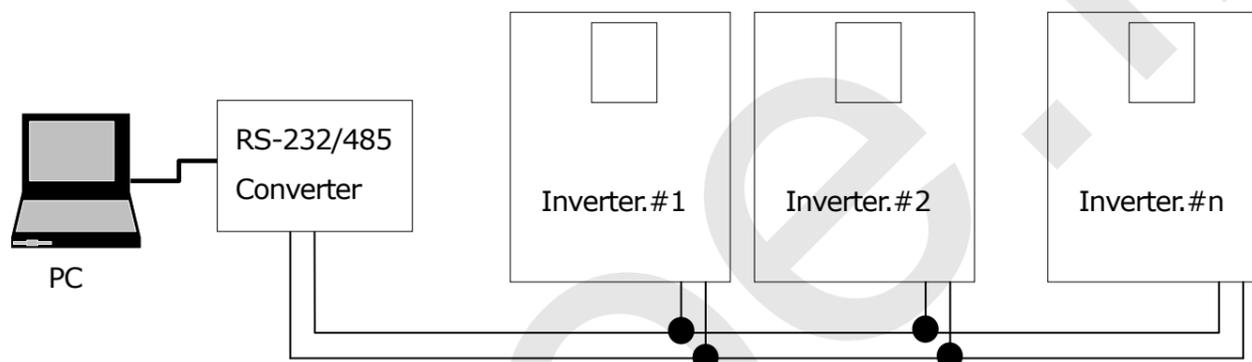

RS-485 terminal connection: connect to S+, S- of the terminal block (see Chapter 4 Wiring)

Number of connectable inverters: up to 16 units

Number of extendable addresses(St ID):1~250

Length of effective communication lines: possibly 1,200m in total. Keep it below 700m for stable communication.

Please use communication Repeater to enhance the communication speed if you have to use communication cable above 1,200m or to connect additional inverter. It is effective to reduce the noise influence from communication by environment.


8.4 Basic setting

Group	No.	Function Display	Name	Setting Range	Unit	Default
EXT	32	Int485 St ID	Station adress setting	1~250	-	1
	33	Int485 Baud	Communication Baudrate	1200 2400 4800 6900 19200 38400	bps	9600
	34	Int485 Mode	Communication frame configuration	D8 / PN / S1 D8 / PN / S2 D8 / PE / S1 D8 / PO / S1	-	D8 / PN / S1
	35	Int485 Delay	Response delay time	2~1000	mSec	5

- **COM-32 Int485 St ID:** sets inverter address No. **COM-33 Int485 BaudR:** sets the communication speed at up to 38400bps.
- **COM-34 Int485 Mode:** selects the communication frame composition and sets the data length, parity confirmation method and number of stop bits.

No.	Display	Description
0	D8 / PN / S1	8 bit data / parity not checked / 1 stop bit
1	D8 / PN / S2	8 bit data / parity not checked / 2 stop bits
2	D8 / PE / S1	8 bit data / even No. parity check / 1 stop bit
3	D8 / PO / S1	8 bit data / odd No. parity check / 1 stop bit

- **COM-35 Resp Delay:** the 485 communication(Modbus-RTU or LS INV 485) built in iV5 acts as a slave. The slave iV5 responds to the Master after the period of time set in this function code. The communication between the master and slave can be kept smooth by setting this function code properly in a system in which the master is not able to deal with the quick response of the slave.

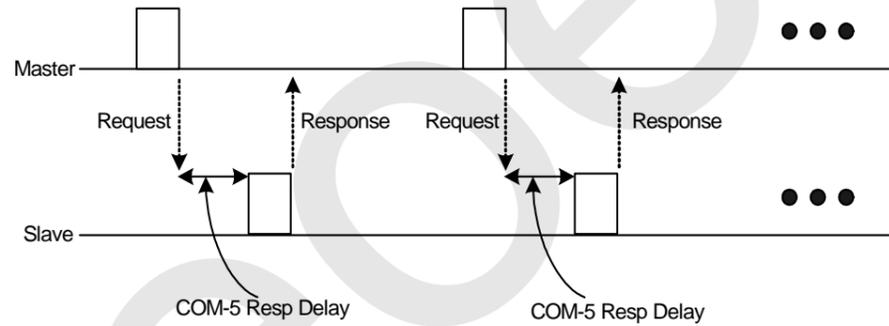

Group	No.	Function Display	Name	Setting Range	Unit	Default
EXT	36	Int485 LostC	Protection action for communication lost	None FreeRun Stop		None
	37	Int485 LostT	Protection action timer for communication lost	1.0~30.0	sec	1.0

## Chapter 8 Communication Function

Judgment standard and Protection in case of a problem with the communication for a certain period of time

If communication is lost for a time set in EXT\_37 when command is set at EXT\_36, inverter will be operated as below.

Setting Item	Function
None	Speed command is directly the operating frequency without protective movements.
Free-Run	The inverter blocks output. The motor continues free run.
Stop	Decelerating stop

**FUN\_01 Run/Stop Src is Int485 prior to run this function. If communication is disconnected for EXT\_37, keypad display is as below. 'rpm' value in lower line is current operation speed.**

0.0rpm	SPD
00	LOI 500 rpm

### 8.5 Special communication area setting

#### Entire iV5 communication memory map

Communication Area	Memory Map	Description
Common iS5 compatible communication area	0h0000 ~ 0h00FF	Area compatible with iS5
Common iS7 communication area	0h0300 ~ 0h037F	Inverter monitoring area
	0h0380 ~ 0h03DF	Inverter control area
	0h03E0 ~ 0h03FF	Inverter memory control area
Common communication area	0h0500 ~ 0h05FF	Common communication area

## Chapter 8 Communication Function

### 8.6 Communication Protocol

#### 8.6.1 LS INV 485 protocol

Computer and other hosts are the master and the inverter is the slave. The slave inverter responds to the master's request for writing/reading.

##### [Basic Form]

##### Request:

ENQ	Address No.	CMD	Data	SUM	EOT
1 byte	2 bytes	1 byte	n bytes	2 bytes	1 byte

##### Normal Response:

ACK	Address No.	CMD	Data	SUM	EOT
1 byte	2 bytes	1 byte	n * 4 bytes	2 bytes	1 byte

##### Error response:

NAK	Address No.	CMD	Error Code	SUM	EOT
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

##### Description:

Requests begin with ENQ and end with EOT.

Normal responses begin with ACK and ends with EOT.

Error responses begin with NAK and ends with EOT.

Address No. refers to the inverter No. and represented by 2 byte ASCII-HEX.

(ASCII-HEX: hex representation consisting of '0' ~ '9', 'A' ~ 'F')

CMD: in capitals (IF Error if in small letters)

Character	ASCII-HEX	Command
'R'	52h	Read
'W'	57h	Write
'X'	58h	Monitor registration request
'Y'	59h	Monitor registration implementation

Data: represented in ASCII-HEX

**E.g.)** If data value is 3,000: 3000 → '0'B'B'8'h → 30h 42h 42h 38h

Error code: two can be displayed ASCII (20h ~ 7Fh)

Transmission/reception buffer magnitude: transmission = 39 byte, reception = 44 byte

Monitor registration buffer: 8 Word

SUM: inspection by making sum to check communication errors

SUM = ASCII-HEX form of the 8 lowest bits of (Address No. + CMD + data)

E.g.) Request for reading of one of 3000 address numbers as follows

ENQ	Address No.	CMD	Address No.	Number of Addresses	SUM	EOT
05h	"01"	"R"	"3000"	"1"	"AC"	04h
1	2	1	4	1	2	1

$$\begin{aligned}
 \text{SUM} &= '0' + '1' + 'R' + '3' + '0' + '0' + '0' + '1' \\
 &= 05h + 30h + 31h + 52h + 33h + 30h + 30h + 31h \\
 &= 1A7h \quad (\text{Control value excluded: ENQ, ACK, NAK, etc.})
 \end{aligned}$$

Hex	Dec	ASCII									
00h	0	NUL	20h	32	SP	40h	64	@	60h	96	`
01h	1	SOH	21h	33	!	41h	65	A	61h	97	a
02h	2	STX	22h	34	"	42h	66	B	62h	98	b
03h	3	ETX	23h	35	#	43h	67	C	63h	99	c
04h	4	EOT	24h	36	\$	44h	68	D	64h	100	d
05h	5	ENQ	25h	37	%	45h	69	E	65h	101	e
06h	6	ACK	26h	38	&	46h	70	F	66h	102	f
07h	7	BEL	27h	39	'	47h	71	G	67h	103	g
08h	8	BS	28h	40	(	48h	72	H	68h	104	h
09h	9	HT	29h	41	)	49h	73	I	69h	105	i
0Ah	10	LF	2Ah	42	*	4Ah	74	J	6Ah	106	j
0Bh	11	VT	2Bh	43	+	4Bh	75	K	6Bh	107	k
0Ch	12	FF	2Ch	44	,	4Ch	76	L	6Ch	108	l
0Dh	13	CR	2Dh	45	-	4Dh	77	M	6Dh	109	m
0Eh	14	SO	2Eh	46	.	4Eh	78	N	6Eh	110	n
0Fh	15	SI	2Fh	47	/	4Fh	79	O	6Fh	111	o
10h	16	DLE	30h	48	0	50h	80	P	70h	112	p
11h	17	DC1	31h	49	1	51h	81	Q	71h	113	q
12h	18	DC2	32h	50	2	52h	82	R	72h	114	r
13h	19	DC3	33h	51	3	53h	83	S	73h	115	s
14h	20	DC4	34h	52	4	54h	84	T	74h	116	t
15h	21	NAK	35h	53	5	55h	85	U	75h	117	u
16h	22	SYN	36h	54	6	56h	86	V	76h	118	v
17h	23	ETB	37h	55	7	57h	87	W	77h	119	w
18h	24	CAN	38h	56	8	58h	88	X	78h	120	x
19h	25	EM	39h	57	9	59h	89	Y	79h	121	y
1Ah	26	SUB	3Ah	58	:	5Ah	90	Z	7Ah	122	z
1Bh	27	ESC	3Bh	59	;	5Bh	91	[	7Bh	123	{
1Ch	28	FS	3Ch	60	<	5Ch	92	\	7Ch	124	
1Dh	29	GS	3Dh	61	=	5Dh	93	]	7Dh	125	}
1Eh	30	RS	3Eh	62	>	5Eh	94	^	7Eh	126	~
1Fh	31	US	3Fh	63	?	5Fh	95	_	7Fh	127	DEL

### BroadCast Function

used to give command to all the inverters bound by the network at a time

Method: give command at Address No. 255

Action: Each inverter receives and replies to it though it's not their own set address No.

### 8.6.2 Detailed reading protocol

**Reading Request:** Request for reading of n number of Word data consecutive from xxxx address No.

ENQ	Address No.	CMD	Address No.	Number of Addresses	SUM	EOT
05h	"01" ~ "1F"	"R"	"XXXX"	"1" ~ "8" = n	"XX"	04h
1	2	1	4	1	2	1

Total byte = 12, quotation marks refers to characters.

#### Normal Reading Response:

ACK	Address No.	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"R"	"XXXX"	"XX"	04h
1	2	1	N * 4	2	1

Total byte =  $7 * n * 4 = 39$  at maximum

#### Error Reading Response:

NAK	Address No.	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"R"	"**"	"XX"	04h
1	2	1	2	2	1

Total byte = 9

## Chapter 8 Communication Function

### 8.6.3 Detailed writing protocol

#### Writing Request:

ENQ	Address No.	CMD	Address No.	Number of Addresses	Data	SUM	EOT
05h	"01" ~ "1F"	"W"	"XXX"	"1" ~ "8" = n	"XXX..."	"XX"	04h
1	2	1	4	1	n * 4	2	1

Total byte = 12 + n \* 4 = 44 at maximum

#### Normal Writing Response:

ACK	Address No.	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"W"	"XXX..."	"XX"	04h
1	2	1	n * 4	2	1

Total byte = 7 + n \* 4 = 39 at maximum

#### Error Writing Response:

NAK	Address No.	CMD	Error Code	SUM	EOT
15h	"01" ~ "1F"	"W"	"**"	"XX"	04h
1	2	1	2	2	1

Total byte = 9

### 8.6.4 Error code

Code	Abbreviation	Description
01:ILLEGAL FUNCTION	IF	When slave cannot implement the received function. That is, when there is no appropriate function.
02:ILLEGAL DATA ADDRESS	IA	When the received address is not valid in the slave. It is parameter address, not the address No.
03: ILLEGAL DATA VALUE	ID	When the received data is not valid in the slave.
21: WRITE MODE ERROR	WM	Read Only or change prohibition during operation.
22: FRAME ERROR	FE	When the frame size or internal num or sum is different.

## Chapter 8 Communication Function

### 8.6.5 Existing iS5/iG5/ iG5A compatible common area parameter

Address	Parameter	Scale	unit	R/W	Allotment for Bits
0000h	Inverter model	-	-	R	B: iV5
0001h	Inverter capacity	-	-	R	2: 2.2kW    3: 3.7kW    4: 5.5kW    5: 7.5kW
					6: 11kW    7: 15kW    8: 18.5kW    9: 22kW
					10: 30kW    11: 37kW    12: 45kW    13: 55kW
					14: 75kW    15: 90kW    16: 110kW    17: 132kW
					18: 160kW    19: 200kW    20: 220kW    21: 280kW
					22: 375kW
0002h	Inverter input voltage	-	-	R	0: 220V class
					1: 400V class
0003h	Version	-	-	R	(example) 0x0100: Version 1.00
					0x0101: Version 1.01
0004h	N/A				Note1)
0005h	N/A				Note1)
0006h	Operating command (option) * see additional description	-	-	R/W	B15   N/A
					B14   P7
					B13   P6
					B12   P5
					B11   P4
					B10   P3
					B9   P2
					B8   P1
					B7   N/A
					B6   N/A
					B5   N/A
					B4   Emergency stop
					B3   Reset
					B2   Reverse operation (R)
B1   Forward operation (F)					
B0   Stop					
0007h	accelerating time	0.1	sec	R/W	-
0008h	decelerating time	0.1	sec	R/W	-
0009h	output current	0.1	A	R	-
000Ah	output frequency	0.01	Hz	R	-
000Bh	output voltage	1	V	R	-

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits	
000Ch	DC Link voltage	1	V	R	-	
000Dh	output power	0.1	kW	R	-	
000Eh	status of Inverter	-	-	R	B15	PID Enable (Available on operation)
					B14	External communication speed reference
					B13	External communication option Run/Stop command
					B12	Reverse direction run command
					B11	Forward direction run command
					B10	Torque Limit state
					B9	Forward operation
					B8	Stop
					B7	Ready to operation
					B6	Speed reached
					B5	Decelerating
					B4	Accelerating
					B3	Trip
					B2	Reverse operating
B1	Forward operating					
B0	Stop					
000Fh	Trip information	-	-	R	B15	Inverter Overload (IOLT)
					B14	Encoder Error
					B13	Option Error
					B12	Over Current 2 (Armshort U, V, W)
					B11	External-B (EXT-B)
					B10	H/W-Dig
					B9	Overload (OLT)
					B8	E-Thermal (ETH)
					B7	Inverter Overheat (IOH)
					B6	Ground Fault (GF)
					B5	Fuse Open (FO)
					B4	Low Voltage (LV)
					B3	BX
					B2	N/A
B1	Over Voltage (OV)					
B0	Over Current (OCT U, V, W)					
0010h	Input terminal information	-	-	R	B15	N/A

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits	
					Bit	Parameter
					B14	P7
					B13	P6
					B12	P5
					B11	P4
					B10	P3
					B9	P2
					B8	P1
					B7	N/A
					B6	N/A
					B5	N/A
					B4	N/A
					B3	RST
					B2	BX
					B1	RX
					B0	FX
0011h	output terminal information	-	-	R	B15	N/A
					B14	N/A
					B13	N/A
					B12	N/A
					B11	N/A
					B10	N/A
					B9	N/A
					B8	N/A
					B7	N/A
					B6	N/A
					B5	N/A
					B4	N/A
					B3	OC1-EG
					B2	2A-2B
					B1	1A-1B
B0	30A-30C					
0012h	Analog input 1	0.01	%	R	-100.0%(0xFC18) ~ 100.0%(0x03E8)	
0013h	Analog input 2	0.01	%	R	-100.0%(0xFC18) ~ 100.0%(0x03E8)	
0014h	Analog input 3	0.01	%	R	-100.0%(0xFC18) ~ 100.0%(0x03E8)	
0015h	Motor rotation speed	1	rpm	R	Current motor rotation speed displayed	

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits
0017h	Speed command	0.1	rpm	R/W	Write is available when FUN_02 is Option/Int485.
0018h ~001Ch	N/A				
001Dh	Speed command 1	1	rpm	R	Target speed command
001Eh	Speed command 2	1	rpm	R	Ramp speed command
001Fh	Input command of speed controller	1	rpm	R	Speed command of speed controller
0020h	Motor speed	1	rpm	R	Real speed of motor
0021h	Torque command	0.1	%	R	Torque reference
0022h	Torque display	0.1	%	R	Calculated torque output
0023h	Excitation current	0.1	%	R	% value of rated excitation current
0024h	PID command	0.1	%	R	PID command
0025h	PID Feedback value	0.1	%	R	PID feedback value
0026h	PID output	0.1	%	R	PID output
0027h	Inverter temperature	1	deg		Inverter temperature
0028h	Line Speed	0.1	%	R	Line speed of material in WEB control <sup>2)</sup>
0029h	Diameter	0.1	%	R	Roll's diameter <sup>2)</sup>
002Ah	Tension	0.1	%	R	Tension input command <sup>2)</sup>
002Bh	Dancer	0.1	%	R	Dancer input command <sup>2)</sup>
002Ch	Taper	0.1	%	R	Taper input command <sup>2)</sup>

Note1) NAK will be transferred when unavailable address is requested.

Note2) Useful value will be transferred when CON\_02 is WEB Control. If not, 0 will be transferred.

## Chapter 8 Communication Function

### 8.6.6 iS7 extended common area parameter

#### 1) Inverter Monitoring Area Parameter (Reading only)

Address	Parameter	Scale	unit	R/W	Allotment for Bits																																		
0300h	Inverter model	-	-	R	IV5: 0005h																																		
0301h	Inverter capacity	-	-	R	2.2kW: 4022h, 3.7kW: 4037h, 5.5kW: 4055h, 7.5kW: 4075h, 11kW: 40B0h, 15kW: 40F0h, 18.5kW: 4125h, 22kW: 4160h, 30kW: 41E0h, 37kW: 4250h, 45kW: 42D0h, 55kW: 4370h, 75kW: 44B0h, 90kW: 45A0h, 110kW: 46E0h, 132kW: 4840h, 160kW: 4A00h, 220kW: 4DC0h 280kW: 5180h, 315kW: 53B0h 375kW: 5770h, 500kW:5F40h																																		
0302h	Inverter input voltage / power supply type (single phase, 3 phase) / cooling method	-	-	R	200V single phase open air cooling: 0220h 200V 3 phase open air cooling: 0230h 200V single phase forced cooling: 0221h 200V 3 phase forced cooling: 0231h 400V single open air cooling: 0420h 400V 3 phase open air cooling: 0430h 400V single phase forced cooling: 0421h 400V 3 phase forced cooling: 0431h																																		
0303h	Inverter S/W version	-	-	R	(example) 0h0100: Version 1.00 0h0101: Version 1.01																																		
0304h	N/A	-	-		1)																																		
0305h	Inverter operating status	-	-	R	<table border="1"> <tr> <td>B15</td> <td rowspan="4">0: normal status 8: Fault status</td> </tr> <tr> <td>B14</td> </tr> <tr> <td>B13</td> </tr> <tr> <td>B12</td> </tr> <tr> <td>B11</td> <td rowspan="4">N/A</td> </tr> <tr> <td>B10</td> </tr> <tr> <td>B9</td> </tr> <tr> <td>B8</td> </tr> <tr> <td>B7</td> <td>1: speed search</td> <td>2: accelerating</td> </tr> <tr> <td>B6</td> <td>3: steady speed</td> <td>4: decelerating</td> </tr> <tr> <td>B5</td> <td>5: decelerating stop</td> <td>6: N/A</td> </tr> <tr> <td>B4</td> <td>7: N/A</td> <td>8: dwell operating</td> </tr> <tr> <td>B3</td> <td>0: stop</td> <td></td> </tr> <tr> <td>B2</td> <td>1: forward operating</td> <td></td> </tr> <tr> <td>B1</td> <td>2: reverse operating</td> <td></td> </tr> <tr> <td>B0</td> <td>3: N/A</td> <td></td> </tr> </table>	B15	0: normal status 8: Fault status	B14	B13	B12	B11	N/A	B10	B9	B8	B7	1: speed search	2: accelerating	B6	3: steady speed	4: decelerating	B5	5: decelerating stop	6: N/A	B4	7: N/A	8: dwell operating	B3	0: stop		B2	1: forward operating		B1	2: reverse operating		B0	3: N/A	
B15	0: normal status 8: Fault status																																						
B14																																							
B13																																							
B12																																							
B11	N/A																																						
B10																																							
B9																																							
B8																																							
B7	1: speed search	2: accelerating																																					
B6	3: steady speed	4: decelerating																																					
B5	5: decelerating stop	6: N/A																																					
B4	7: N/A	8: dwell operating																																					
B3	0: stop																																						
B2	1: forward operating																																						
B1	2: reverse operating																																						
B0	3: N/A																																						
0306h	Inverter run frequency command source	-	-	R	B15 Run command source																																		

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits																																																			
					<table border="1"> <tr> <td>B14</td> <td>0: Keypad</td> <td>1: Communication option</td> </tr> <tr> <td>B13</td> <td>2: N/A</td> <td>3: Built-in 485</td> </tr> <tr> <td>B12</td> <td>4: Terminal Block</td> <td>5~127: N/A</td> </tr> <tr> <td>B11</td> <td></td> <td></td> </tr> <tr> <td>B10</td> <td></td> <td></td> </tr> <tr> <td>B9</td> <td></td> <td></td> </tr> <tr> <td>B8</td> <td></td> <td></td> </tr> <tr> <td>B7</td> <td colspan="2">Frequency command source</td> </tr> <tr> <td>B6</td> <td>0: Keypad speed</td> <td>1: Keypad torque</td> </tr> <tr> <td>B5</td> <td>2: MOP UP</td> <td>3: MOP DOWN</td> </tr> <tr> <td>B4</td> <td>4: MOP UP/DOWN</td> <td>5: Analog</td> </tr> <tr> <td>B3</td> <td>6: N/A</td> <td>7: N/A</td> </tr> <tr> <td>B2</td> <td>8: N/A</td> <td>9: N/A</td> </tr> <tr> <td>B1</td> <td>10: Built-in 485</td> <td>11: Communication Option</td> </tr> <tr> <td>B0</td> <td>12: N/A</td> <td>13: Jog Operation</td> </tr> <tr> <td></td> <td>14: N/A</td> <td>15~25: N/A</td> </tr> <tr> <td></td> <td>26~32: Multi-step speed</td> <td>33~127: N/A</td> </tr> </table>	B14	0: Keypad	1: Communication option	B13	2: N/A	3: Built-in 485	B12	4: Terminal Block	5~127: N/A	B11			B10			B9			B8			B7	Frequency command source		B6	0: Keypad speed	1: Keypad torque	B5	2: MOP UP	3: MOP DOWN	B4	4: MOP UP/DOWN	5: Analog	B3	6: N/A	7: N/A	B2	8: N/A	9: N/A	B1	10: Built-in 485	11: Communication Option	B0	12: N/A	13: Jog Operation		14: N/A	15~25: N/A		26~32: Multi-step speed	33~127: N/A
B14	0: Keypad	1: Communication option																																																						
B13	2: N/A	3: Built-in 485																																																						
B12	4: Terminal Block	5~127: N/A																																																						
B11																																																								
B10																																																								
B9																																																								
B8																																																								
B7	Frequency command source																																																							
B6	0: Keypad speed	1: Keypad torque																																																						
B5	2: MOP UP	3: MOP DOWN																																																						
B4	4: MOP UP/DOWN	5: Analog																																																						
B3	6: N/A	7: N/A																																																						
B2	8: N/A	9: N/A																																																						
B1	10: Built-in 485	11: Communication Option																																																						
B0	12: N/A	13: Jog Operation																																																						
	14: N/A	15~25: N/A																																																						
	26~32: Multi-step speed	33~127: N/A																																																						
0307h	Keypad S/W version	-	-	R	(E.g) 0h0100: Version 1.00 0h0101: Version 1.01																																																			
0308h	Keypad Title version	-	-	R	Same as S/W version of keypad																																																			
0309h ~030Fh	N/A	-	-		-																																																			
0310h	Output current	0.1	A	R	-																																																			
0311h	Output frequency	0.01	Hz	R	-																																																			
0312h	Output RPM	0	RPM	R	-																																																			
0313h	Motor feedback speed	0	RPM	R	-32768rpm ~ 32767rpm (Having a polarity.)																																																			
0314h	Output voltage	1	V	R	-																																																			
0315h	DC Link voltage	1	V	R	-																																																			
0316h	Output power	0.1	kW	R	-																																																			
0317h	Output Torque	0.1	%		Exception) It is not calculated during V/F control.																																																			
0318h	PID reference	0.1	%		-																																																			
0319h	PID feedback	0.1	%		-																																																			
031Ah	Number of No.1 motor display	-	-		Number of No.1 motor display																																																			
031Bh	Number of No.2 motor display	-	-		Number of No.2 motor display																																																			
031Ch	Number of selected motor display	-	-		Number of selected motor display																																																			
031Dh	Selection among Hz/rpm	-	-		0: Hz unit 1: rpm unit																																																			
031Eh ~031Fh	N/A	-	-		-																																																			

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits
0320h	Digital input information	-	-		B15 N/A
					B14 N/A
					B13 N/A
					B12 N/A
					B11 N/A
					B10 P7
					B9 P6
					B8 P5
					B7 P4
					B6 P3
					B5 P2
					B4 P1
					B3 RST
					B2 BX
					B1 RX
					B0 FX
0321h	Digital output information	-	-		B15 N/A
					B14 N/A
					B13 N/A
					B12 N/A
					B11 N/A
					B10 N/A
					B9 N/A
					B8 N/A
					B7 N/A
					B6 N/A
					B5 N/A
					B4 N/A
					B3 Open Collector output (OC1 ~ EG)
					B2 Relay2 (2A ~ 2B)
					B1 Relay 1 (1A ~ 1B)
					B0 Fault output (30A ~ 30B)
0322h	N/A	-	-		
0323h	Selected motor display	-	-	R	0: No.1 motor / 1: No.2 motor
0324h	AI1	0.01	%	R	Analog input1 (Basic I/O)

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits	
0325h	AI2	0.01	%	R	Analog input2 (Basic I/O)	
0326h	AI3	0.01	%	R	Analog input3 (Basic I/O)	
0327h	AI4	0.01	%	R	Analog input4 (Extended I/O)	
0328h	AO1	0.01	%	R	Analog output1 (Basic I/O)	
0329h	AO2	0.01	%	R	Analog output2 (Basic I/O)	
032Ah	AO3	0.01	%	R	Analog output3 (Extended I/O)	
032Bh~ 032Fh	N/A					
0330h	Latch type trip information-1	-	-	R	BI5	Fuse Open Trip
					BI4	Overheat Trip
					BI3	Arm Short
					BI2	External-B
					BI1	Overvoltage Trip
					BI0	Overcurrent Trip
					B9	NTC Trip
					B8	N/A
					B7	Overspeed
					B6	Input open-phase trip
					B5	Output open-phase trip
					B4	Ground Fault Trip
					B3	E-Thermal Trip
					B2	Inverter Overload Trip
					B1	N/A
					B0	Overload Trip
0331h	Latch type trip information-2	-	-	R	BI5	N/A
					BI4	N/A
					BI3	N/A
					BI2	N/A
					BI1	N/A
					BI0	Option card error
					B9	N/A
					B8	N/A
					B7	N/A
					B6	N/A
					B5	N/A
B4	N/A					

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits
					B3 N/A
					B2 N/A
					B1 Encoder error trip
					B0 N/A
0332h	Level type trip information	-	-	R	B15 N/A
					B14 N/A
					B13 N/A
					B12 N/A
					B11 N/A
					B10 N/A
					B9 N/A
					B8 N/A
					B7 N/A
					B6 N/A
					B5 N/A
					B4 N/A
					B3 N/A
					B2 Lost command
					B1 LV
					B0 N/A
0333h	H/W Diagnosis Trip information	-	-	R	B15 N/A
					B14 N/A
					B13 N/A
					B12 N/A
					B11 N/A
					B10 N/A
					B9 N/A
					B8 N/A
					B7 N/A
					B6 N/A
					B5 N/A
					B4 N/A
					B3 N/A
					B2 N/A
					B1 N/A

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits	
					B0 H/W Diag	
0334h	N/A	-	-			
0335h~ 033Fh	N/A	-	-		-	
0340h	On Time date	0	Day	R	Total number date of inverter power On	
0341h	On Time minute	0	Min	R	Total minute except for total date of inverter On Time	
0342h	Run Time date	0	Day	R	Total number day of inverter run	
0343h	Run Time minute	0	Min	R	Total minute except for total day of Run Time	
0344h	Fan Time date	0	Day	R	Total day of cooling fan run	
0345h	Fan Time minute	0	Min	R	Total minute except for total day of Fan time	
0346h	N/A	-	-		-	
0347h	N/A	-	-		-	
0348h	N/A	-	-		-	
0349h	N/A	-	-		-	
034Ah	Option 1	-	-		0: None            1: RS485            2: DeviceNet 3: Profibus,      4: FNet            5: LONWORKS 6: N/A            7: N/A            8: BACNet 9: N/A            10: N/A            11: Synchro option	
034Bh	N/A					
034Ch	N/A					
0380h	Frequency command	0.01	Hz	R/W	Frequency command setting E.g.) It operates 10Hz (300rpm based on 4 polarity) when 03E8h (=1000) is transferred.	
0381h	RPM command	1	rpm	R/W	Command rpm setting (FUN_02 is Option/Int485) E.g.) It operates 1000rpm when 03E8 (=1000) is transferred.	
0382h	Run command				B7	N/A
					B6	N/A
					B5	N/A
					B4	N/A
					B3	BX (0→1: Free-run stop)
					B2	RST (0→1: Trip reset)
					B1	0: Reverse command    1: Forward command
					B0	0: Stop commands    1: Run command
E.g.) Forward command: 0003h, Reverse command: 0001h BX and RST are only available to write. It will be read to 0. It can operate when FUN_01 is Option/Int485.						
0383h	Acceleration time	0.1	sec	R/W	Acceleration time setting	
0384h	Deceleration time	0.1	sec	R/W	Deceleration time setting	

## Chapter 8 Communication Function

Address	Parameter	Scale	unit	R/W	Allotment for Bits	
0385h	N/A					
0386h					B15	N/A
					B14	N/A
					B13	N/A
					B12	N/A
					B11	N/A
					B10	N/A
					B9	N/A
					B8	N/A
					B7	N/A
					B6	N/A
					B5	Relay1 (A – 1B)
					B4	Relay2 (2A – 2B)
					B3	Open collector 1 (OC1 – EG)
					B2	Open collector 2 (OC2 – EG)
					B1	Open collector 3 (OC3 – EG)
					B0	N/A
0387h	N/A					
0388h	PID command	0.1	%	R/W	PID reference command	
0389h	PID feedback	0.1	%	R/W	PID feedback value	
038Ah	Motor rated current	0.1	A	R/W	PAR_22 Rated-Curr	
038Bh	Inverter voltage specification			R	200 : 200V400 : 400V	
038Ch~ 038Fh	N/A					
0390h	Torque Ref	0.1	%		Torque command <sup>1)</sup>	
0391h	Fwd Pos Torque Limit	0.1	%	R/W	Positive torque limit <sup>2)</sup>	
0392h	Fwd Neg Torque Limit	0.1	%	R/W	Positive regeneration torque limit <sup>2)</sup>	
0393h	Rev Pos Torque Limit	0.1	%	R/W	Negative torque limit <sup>2)</sup>	
0394h	Rev Neg Torque Limit	0.1	%	R/W	Negative regeneration torque limit <sup>2)</sup>	
0395h	Torque Bias	0.1	%	R/W	Torque Bias <sup>3)</sup>	
0396h ~039Dh	N/A					

Note 1) It is available to write when CON\_01 (Control Mode) is Torque and CON\_31 (Trq Ref Src) is Option/Int485.

Note 2) It is available to write CON\_33 Trq Lmt Src is 485 485 485. If not, it is available to read. .

Note 3) It will be changed only when CON\_37 Trq Bias Src is Option/Int485.

8.6.7 iV5 Common area parameter

Address	Parameter	Scale	Unit	R/W	Allotment for Bits	
0500h	Input terminal command <sup>1)</sup>	-	-	R/W	BI5	N/A
					BI4	P7
					BI3	P6
					BI2	P5
					BI1	P4
					BI0	P3
					B9	P2
					B8	P1
					B7	N/A
					B6	N/A
					B5	N/A
					B4	BX
					B3	RST
					B2	RX
					B1	FX
					B0	Stop
0501h	Output terminal command <sup>2)</sup>	-	-		BI5	N/A
					BI4	N/A
					BI3	N/A
					BI2	N/A
					BI1	N/A
					BI0	N/A
					B9	N/A
					B8	N/A
					B7	N/A
					B6	N/A
					B5	N/A
					B4	N/A
					B3	N/A
					B2	OC1(OC1 – EG)
					B1	AX2(2A – 2B)
					B0	AX1(1A – 1B)
0502h	Speed reference	0.1	rpm	R/W	It operates when FUN_02 is Option/Int485.	
0503h	Acceleration time	0.01	sec	R/W	Main acceleration time setting	
0504h	Deceleration time	0.01	sec	R/W	Main deceleration time setting	
0505h	Torque reference <sup>3)</sup>	0.1	%	R/W	It operates CON_31 is Option/Int485.	

## Chapter 8 Communication Function

Address	Parameter	Scale	Unit	R/W	Allotment for Bits
0506h	Forward torque limit	0.1	%	R/W	Forward torque limit
0507h	Reverse torque limit	0.1	%	R/W	Reverse torque limit
0508h	Regeneratin torque limit	0.1	%	R/W	Regeneratin torque limit
0509h	Torque bias	0.1	%	R/W	Torque bias
050Ah	No-load current command <sup>4)</sup>	0.1	%	R/W	No-load current command
050Bh	PID input command	0.1	%	R/W	PID input command
050Ch	Draw input command	0.1	%	R/W	Draw input command
050Dh	Line Speed command	0.1	%	R/W	Line Speed command It operates when CON_02 Application is WEB Control.
050Eh	WEB acceleration time	0.01	sec	R/W	Acceleration time of WEB Control
050Fh	WEB deceleration time	0.01	sec	R/W	Deceleration time of WEB Control
0510h	Diameter Preset	0.1	%	R/W	Diameter initializing It operates when WEB_03 DiaPresetSrc is Option.
0511h	Tension input command	0.1	%	R/W	Tension input command
0512h	Dancer input command	0.1	%	R/W	Dancer input command
0513h	Tension Feedback	0.1	%	R/W	Tension Feedback
0514h	Taper input command	0.1	%	R/W	Taper input command
0515h	WEB PID P1 Gain	0.1	%	R/W	WEB PID P1 Gain setting
0516h	WEB PID I1 Gain	0.1	sec	R/W	WEB PID I1 Gain setting
0517h	WEB PID D Gain	0.1	%	R/W	WEB PID D Gain setting
0518h	WEB PID Rewind Output Gain	0.1	%	R/W	WEB PID Rewind Output Gain setting
0519h	WEB PID Unwind Output Gain	0.1	%	R/W	WEB PID Unwind Output Gain setting
051Ah	WEB Jog acceleration time	0.1	sec	R/W	WEB Jog acceleration time setting
051Bh	WEB Jog deceleration time	0.1	sec	R/W	WEB Jog deceleration time setting
051Ch	Speed/Torque mode change <sup>5)</sup>			R/W	0: Speed mode      1: Torque mode
051Dh	Process PID feedback value	0.1	%	R	Process PID feedback value
051Eh	Process PID acc./dec. time	0.01	sec	R/W	Command acc./dec. time of Process PID
051Fh	Process PID P Gain	0.1	%	R/W	Process PID P Gain setting
0520h	Process PID I Gain	0.1	%	R/W	Process PID I Gain setting
0521h	Process PID D Gain	0.1	%	R/W	Process PID D Gain setting
0522h	Process PID output Gain	0.1	%	R/W	Process PID output Gain
0523h	Process PID output Enable			R/W	0:Disable      1:Enable      2:Terminal
0524h	Droop control quantity	0.1	%	R/W	Droop control quantity setting
0525h	Droop control selection			R/W	0: Droop quantity about maximum speed 1: Droop quantity about command speed
0526h	Droop time setting	0.01	sec	R/W	Droop time setting

## Chapter 8 Communication Function

Note1) Run command and multi-function input command can be available by communication. DIO\_01 ~ DIO\_07 must be set to multi-function input to use multi-function input command (P1~P7).

Note2) Multi function output terminal (DIO\_41~DIO\_43) must be set to 'Not Used' to use output terminal command by communication. If not, inverter will be operated in accordance with current setting and can not use multi-function output.

Note3) It can use when CON\_01 is Torque and CON\_26 is Option.

Note4) No-load current command can be available by % value of PAR\_27 via communication. The set value in PAR\_26 means 100% and a value less than 100 is available.

Note5) It operates only when Spd/Trq Sel is selected.

## Chapter 9 –Inspection and Replacement

LS Vector Inverter, STARVERT-iV5, is an industrial electronic product that adopts up-to-date semiconductor device. It may have a failure caused by the ambient environment such as temperature, humidity, vibration, etc. or an excessive use of the component over its duration. It requires a routine checking to prevent such failure in advance.

### 9.1 Precautions



#### CAUTION

- Before starting the maintenance work, the operator must check out the power input of the inverter.
- Large-capacity electrolytic condenser in the power electronic circuit remains charged with power even after the power is off. So be sure to start the maintenance work after you acknowledged the power has been completely discharged using a proper tester.
- Be sure to use a rectifier type volt meter to obtain an accurate voltage when directly measuring the output voltage of inverter. General volt meter or digital volt meter may result in spurious operation or indicate wrong value due to high frequency PWM output voltage of the inverter.

### 9.2 Checking Points

Electronic product is not intended for a permanent use. When it exceeds the duration even under the normal service environment, the product may have trouble in its operation due to change in the nature of the parts. To prevent such circumstance, it requires a routine and regular checking.

Especially if you use it under the following environment, have it checked with a shorter interval than the regular checking.

- When the temperature is relatively high in the installed place
- When the product is operated with a frequent start and stop
- When the input AC power and load vary seriously
- When it has severe vibration or shock
- When there is corrosive gas, combustible gas, oil sludge, dust, salts, metal powder, etc



**CAUTION**

- The failure of the device used in the inverter may not be predicted in advance. The failure of the device may cause the error of input power fuse or the fault trip. If you are suspicious of the failure of device, please contact our sales representative.

**9.3 Routine Checking**

Area	Checking points	Description	How to Check	Judgment Criterion	Instrument
Main circuit	Entire system	1) Megger checking (between the main circuit terminal and ground terminal) 2) Isn't any fixed area missing? 3) Isn't there any trace of overheat on each component?	1) Unfasten the connection of inverter, connect R, S, T, U, V, and W terminals, and then measure the gap between this area and the ground terminal using a megger. 2) Fasten the screws. 3) Check it visually	1) To be 5MΩ or more There must be no unusual result from 2) and 3)	DC 500V Class Megger
	Conductor /Wire	1) Isn't there any corrosion on the conductor?2) Isn't there any damage to the wire sheath?	1) Switch the power Off and then turn it with a hand. 2) Fasten it once again.	1) Rotate it softly 2) There must be no unusual record	.
	Terminal block	Isn't it damaged?	Check by eyes.	There must be no unusual record	.
	Flat condenser	Measure the electrostatic capacity	Measure using the capacity meter.	85% or more of the rated capacity	Capacity meter.
	Relay	1) Isn't there any chattering sound? 2) Isn't there any damage to the contact point?	1) Check by ears. 2) Check by eyes.	There must be no unusual record	.

## 9. Inspection and Replacement

Area	Checking points	Description	How to Check	Judgment Criterion	Instrument
	Resistance	1) Isn't there any damage to the insulation resistance? 2) Check the existence of the clue	1) Check by eyes. 2) Remove the connection at one side, and measure it using a tester.	1) There must be no unusual record 2) It should be within $\pm 10\%$ tolerance range	Digital Multi-Meter/Analog Tester
	Diode, IGBT	Check if they are stained with trash or dust	Check by eyes.	Remove them by blowing a dry air.	,
	Circuit Board	1) Check if they generate unusual smell are discolored, rusted, covered with dust or oil mist 2) Check if the connector is mounted	Check by eyes	1) Clean it using anti-static cloth or cleaner. If not, replace with new circuit board 2) Do not clean the circuit board using the solution. 3) Remove trash or dust by blowing a dry air. 4) Mount the connectors again. 5) If the damaged area cannot be repaired or is the part that cannot be replaced, replace the inverter itself.	,
Control circuit protecting circuit	Operation	1) Check the unbalance of the output voltage during the operation of inverter 2) Display circuit must not have any unusual phenomenon after the sequence protecting operation test is done	1) Measure the voltage among the U, V, and W at the Inverter output terminal. 2) Have the inverter protecting circuit output shorted out or open it by force.	1) Balance of inter-phase voltage 200V (400V) Use: Within 4V(8V) 2) Unusual circuit to be operated in sequence	Digital Multi-Meter/DC type Volt Meter
Cooling System	Cooling fan, Cooling pin	1) Isn't there any looseness on the junction? 2) Isn't cooling pin or cooling fan covered with dust	1) Fasten it once again. 2) Check with eyes and then remove dust	1) There must be no unusual record 2) There must be no dust	,

Area	Checking points	Description	How to Check	Judgment Criterion	Instrument
Indicator	Meter	Is the indicator value normal?	Check the indicator value on the display of the panel surface.	Check the value under the regulation and standard value	Volt Meter/ Current Meter, etc.

**9.4 Regular Checking (1 year interval)**

Area	Checking points	Description	How to Check	Judgment Criterion	Instrument
Main circuit	Entire system	1) Megger checking (between the main circuit terminal and ground terminal) 2) Isn't any fixed area missing? 3) Isn't there any trace of overheat on each component?	1) Unfasten the connection of inverter, connect R, S, T, U, V, and W terminals, and then measure the gap between this area and the ground terminal using a megger. 2) Fasten the screws. 3) Check it visually	1) To be 5MΩ or more There must be no unusual result from 2) and 3)	DC 500V Class Megger
	Conductor /Wire	1) Isn't there any corrosion on the conductor? 2) Isn't there any damage to the wire sheath?	1) Switch the power Off and then turn it with a hand. 2) Fasten it once again.	1) Rotate it softly 2) There must be no unusual record	.
	Terminal block	Isn't it damaged?	Check by eyes.	There must be no unusual record	.
	Flat condenser	Measure the electrostatic capacity	Measure using the capacity meter.	85% or more of the rated capacity	Capacity meter.
	Relay	1) Isn't there any chattering sound? 2) Isn't there any damage to the contact point?	1) Check by ears. 2) Check by eyes.	There must be no unusual record	.

## 9. Inspection and Replacement

Area	Checking points	Description	How to Check	Judgment Criterion	Instrument
	Resistance	1) Isn't there any damage to the insulation resistance? 2) Check the existence of the clue	1) Check by eyes. 2) Remove the connection at one side, and measure it using a tester.	1) There must be no unusual record 2) It should be within $\pm 10\%$ tolerance range	Digital Multi-Meter/Analog Tester
	Diode, IGBT	Check if they are stained with trash or dust	Check by eyes.	Remove them by blowing a dry air.	.
	Circuit Board	1) Check if they generate unusual smell are discolored, rusted, covered with dust or oil mist 2) Check if the connector is mounted	Check by eyes	1) Clean it using anti-static cloth or cleaner. If not, replace with new circuit board 2) Do not clean the circuit board using the solution. 3) Remove trash or dust by blowing a dry air. 4) Mount the connectors again. 5) If the damaged area cannot be repaired or is the part that cannot be replaced, replace the inverter itself.	.
Control circuit protecting circuit	Operation	1) Check the unbalance of the output voltage during the operation of inverter 2) Display circuit must not have any unusual phenomenon after the sequence protecting operation test is done	1) Measure the voltage among the U, V, and W at the Inverter output terminal. 2) Have the inverter protecting circuit output shorted out or open it by force.	1) Balance of inter-phase voltage 200V (400V) Use: Within 4V(8V) 2) Unusual circuit to be operated in sequence	Digital Multi-Meter/DC type Volt Meter
Cooling System	Cooling fan, Cooling pin	1) Isn't there any looseness on the junction? 2) Isn't cooling pin or cooling fan covered with dust	1) Fasten it once again. 2) Check with eyes and then remove dust	1) There must be no unusual record 2) There must be no dust	.
Indicator	Meter	Is the indicator value normal?	Check the indicator value on the display of the panel surface.	Check the value under the regulation and standard value	Volt Meter/Current Meter, etc.

**9.5 Regular Checking (2 year interval)**

Area	Checking points	Description	How to Check	Judgment Criterion	Instrument
Main circuit	Entire system	Megger Checking (between the main circuit terminal and the ground terminal)	Unfasten the connection of the inverter, and then measure the gap among R, S, T, U, V, and W terminals and this area after having them shorted out.	5MΩ or more	DC 500V Class Megger
Motor	Resistance Insulation	Megger checking (between the output terminal and the ground terminal)	Unfasten the connection among U, V, and W, and then bind the motor wiring.	5MΩ or more	500V Class Megger

**9.6 Meggar Test**

- ① For Exterior main circuit, remove all cables from inverter terminals to ensure that test voltage is not applied to the inverter.
- ② Use DC 500V meggar and isolate the main power before starting measurement. If the test voltage is connected to the control circuit, remove all connection cables to the control circuit.
- ③ Perform the Meggar test only between the common cables connected to the main circuit and ground.


### 9.7 Replacement Interval and Maintenance of the Key Components

Inverter constitutes a number of electronic parts including semiconductor device. The parts used in the inverter are subject to change as time elapses for its construction or nature. Therefore without any replacement of parts, it may cause failure or deterioration in the performance the inverter. For this reason, it requires regular replacement of the parts.

Name of parts	Standard interval for replacement	Symptoms	How to Replace and Countermeasure
Cooling Fan	2 ~ 3 years	Poor Rotation	Replacement into new part
DC Link condenser	5 years	Reduction in Capacity	Replacement into new part
Control Panel Flat Condenser	5 years	Reduction in Capacity	Replacement into new part
Control Board Relay	-	Poor Operation	Replacement into new part
Braking Resistance	-	Reduction in Capacity	Replacement into new part

- Duration of the key components is based on the continuous operation at a rated load. Therefore the duration is subject to change depending on the service condition and ambient environment.

## 9.8 How to Check at Diode Module &amp; IGBT Inspection

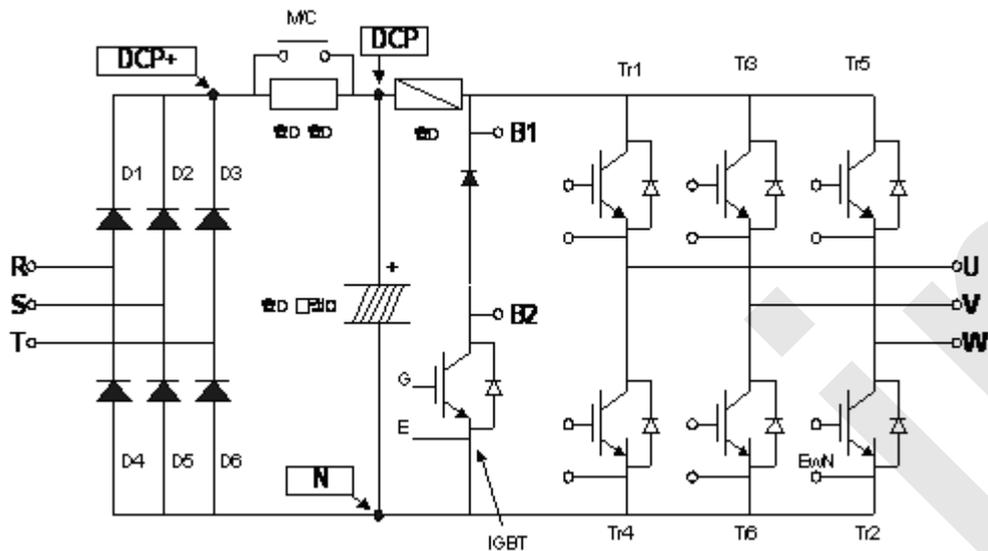

1. Remove the power source wire (R, S, T) and the motor output wire (U, V, W) connected from the outside
2. Check and determine whether R, S, T, U, V, W, B1 (or P/L1), N of the inverter terminal block are turned on or not by changing the polarity of the tester between each other.
3. Perform the test after making sure that the electrolytic capacitor is discharged.
4. When they are not turned on, they will indicate several mega resistance values. It may indicate several mega resistance values when it is turned on for a moment owing to the influence of electrolytic capacitor. When they are turned on, it indicates several  $\Omega$  ~ dozens of  $\Omega$ . The indicator value varies depending on the type of module, the type of tester, etc., but such values are shown in a similar range when it is sound product.

## Chapter 10 – Troubleshooting and Maintenance

### 10.1 Fault Display



#### CAUTION

When a fault occurs, the inverter turns off its output and displays the fault status described below. In this case, the cause must be corrected before the fault can be cleared. If protective function keeps active, it could lead to reduction in product life and damage to the equipment.

Protective function	Keypad display	Type	Description
Over Current	Over Current	Latch	The inverter turns off its output when the output current of the inverter flows more than 200% of the inverter rated current.
Ground Fault Protection	Ground Fault	Latch	The inverter turns off its output when a ground fault occurs and the ground fault current is more than the internal setting value of the inverter. Over current trip function may protect the inverter when a ground fault occurs due to a low ground fault resistance
Over voltage protection	Over Voltage	Latch	The inverter turns off its output if the DC voltage of the main circuit increases higher than the rated value (200V class: 400V DC, 400V class: 820 V DC) when the motor decelerates or when regenerative energy flows back to the inverter due to a regenerative load. This fault can also occur due to a surge voltage generated at the power supply system.
Low Voltage Protection	Low Voltage	Level	The inverter turns off its output if the DC voltage is below the detection level (200V class: 180Vdc, 400V class: 360Vdc) because insufficient torque or over heating of the motor can occurs when the input voltage of the inverter drops.
Overload Protection	Over Load	Latch	The inverter turns off its output if the output current of the inverter flows at 180% of the inverter rated current for more than the current limit time (S/W).
Inverter Overload	Inv OLT	Latch	The inverter turns off its output when the rated current of the inverter flows more than regulation level(150% for 1 minute-Inversely proportional to time).
Heat Sink Over Heat	InvOver Heat	Latch	The inverter turns off its output if the heat sink over heats due to a damaged cooling fan or an alien substance in the cooling fan by detecting the temperature of the heat sink.
	OHD Open <sup>*1)</sup>	Latch	The inverter turns off its output when OHD is opened and the heat sink is overheated.
Inverter NTC Thermistor Open	InvThem OP	Latch	When inverter NTC Thermistor is open, inverter stops its output.
Motor overheat	MotOver Heat	Latch	When motor temp exceeds 150℃ , inverter stops its output to protect motor from overheated.
Motor Thermistor Error	MotThem Err	Latch	When there is an error in Thermistor that measures the temperature of motor, inverter stops its output. (Error—NTC: open)
Electronic Thermal	E-Thermal	Latch	The internal electronic thermal of the inverter determines the over heating of the motor. If the motor is overloaded the inverter turns off the output. The inverter cannot protect the motor when driving a multi-pole motor or when driving multiple motors, so consider thermal relays or other thermal protective devices for each motor. Overload capacity: 150% for 1 min.
External fault B	External-B	Latch	Use this function if the user needs to turn off the output by an external fault signal.

**\*1) It only comes under SV2800 ~ 3750iV5.**

## 10. Troubleshooting and Maintenance

Protective function	Keypad display	Type	Description
IGBT Short	Arm Short Arm Short-DB	Latch	Inverter output is stopped when IGBT Arm short or output short occurs. (Arm Short-DB is only come under SV110~220iV5)
Fuse Open	Fuse Open	Latch	The inverter turns off its output by opening the fuse when something is wrong with the main circuit IGBT to protect the wiring from being damaged from short currents
Encoder Error	Encoder Err	Latch	1) Displayed when Encoder signal fault occurs.(H/W) 2) Displayed when there is a discord of detection time standard of motor error of PAR-14.(S/W)
BX protection (Instant Cut Off)	BX	Latch	Used for the emergency stop of the inverter. The inverter instantly turns off the output when the BX terminal is turned ON, and returns to regular operation when the BX terminal is turned OFF. Take caution when using this function.
Motor overspeed	Over Speed	Latch	Displayed when motor rotates over 120% its rated speed.
Communication Error	COM Error CPU Error	Latch	This fault is displayed when the inverter cannot communicate with the keypad.
H/W Error	HW- Diag	Latch	Displayed when CPU has a problem, and then the inverter blocks the IGBT gating signals.
FAN Lock* <sup>1)</sup>	FAN Lock	Latch	The inverter turns off its output when there is an Fan Lock.
Encoder PowerError* <sup>1)</sup>	Enc Power	Latch	When there is an error in Encoder power source, the inverter turns off its output.
Input Phase-open	Input PO	Latch	It turns off the inverter output when the power from a phase among 3 phase's input is discontinued at the state of normal load.
Output Phase-open	Output PO	Latch	It turns off the inverter output from a detecting no-output current.
AC FAN and M/C Poower Error	FAN/ MC PWR	Latch	The inverter turns off its output to prevent from damage when AC220V is not supplied to AC FAN and M/C. (30 ~ 160 kW)
AC FAN Power Error	FAN PWR	Latch	The inverter turns off its output to prevent from damage when AC220V is not supplied to AC FAN and M/C.

\*1) It only comes under SV2800~3750iV5.

### 10.2 Monitoring Fault Condition

#### 10.2.1 Monitoring fault display

Code	LCD display	Description
DIS_05	OC-U	Current fault displayed. (U-phase overcurrent)

- Check the current fault display before pressing reset key. pressing [PROG] key and [▲(Up)],[▼(Down)] shows operating status at the time of the fault such as output frequency, current, voltage, F/B value, torque current reference/actual value, dc link voltage, input/output terminal status, operating status and run time) and the fault contents. Press [ENT] key to exit. Pressing [RESET] key will store the value in DIS\_05 [Last Fault1].

### 10.2.2 Monitoring previous faults

- Previous 2 faults are saved in DIS\_05 "Last fault 1/2". Last fault 1 is more recent fault than Last fault 2. Refer to "8.2.1 monitoring fault display" to check the fault contents.

Code	LCD display	Description
DIS_05	Last Fault1	Previous fault 1
DIS_05	Last Fault2	Previous fault 2

- DIS\_05 " Fault Clear" removes Last Fault1, Last Fault2 data. It becomes the value of factory default.

### 10.3 Fault Reset

There are 3 ways to reset the inverter. After performing this, the number of automatic restart is initialized.

- 1) Use [RESET] key on the keypad.
- 2) Short the RST-CM terminal to reset.
- 3) Cycle the power (turn the power OFF and turn it ON).

### 10.4 Fault Remedy

#### 10.4.1 Check the below diagnosis before troubleshooting.

- 1) Is the wiring of a motor and an inverter conducted correctly?

☞ Refer to Main Circuit Terminal

- 2) Is the Encoder-type jumper on I/O PCB set correctly?

☞ Refer to Encoder wiring

If encoder type is either Complementary or Open collector, slide JP4 switch to "OC" and slide JP2 switch to "P15". If encoder type is Line Drive, slide the JP4 switch to "LD" and slide JP2 switch to "P5".

Factory default: Line Drive Type

- 3) Is motor rotating direction set correctly?

☞ Refer to Monitoring Encoder operation. (Refer to 4-10p.)

**STARVERT-iV5 defines Forward rotation when motor rotates in clockwise from the view of Rear Bracket (Motor FAN).**

- 4) Is inverter operating correctly in no load condition?

☞ Refer to Operation via Keypad and Control Terminal

### 10.4.2 Check list before installation

Check (1) ~ (9) before installation. Check (10) ~ (16) when problem has occurred during use.

#### 1) The Motor Does Not Rotate

① Is red lamp blinking ?

☞ Check whether other trips occur in DIS\_05.

If fault occurs, press [RESET] key to clear trip status and try operation.

☞ Check whether BX (Emergency stop) signal is applied on keypad and input terminal defined as BX is ON in DIS\_03. If so, release BX and try operation.

DIS	▶	Terminal In
03		0010000000

② RUN/STOP method is properly set ?

☞ Check FUN\_01 RUN/STOP method setting matches the actual operation mode(RUN/STOP via keypad or terminal). If FUN\_01 is set to terminal but operation is not performed, change it to keypad mode and try operation. If FUN\_02 is set to Keypad but operation is not performed, change it to Terminal and try operation. If either way cannot work, refer to (6).

#### 2) The motor does not rotate when Green lamp on [REV], [FWD] key is ON.

① Is inverter U, V, W output correctly wired to motor U, V, W output?

☞ Refer to Main circuit terminal

② Is the motor shaft jammed by brake or other mechanical devices?

☞ check the directly connected brake's relay on time and brake open time.

③ On DIS\_01 PreRamp Ref, is speed reference displayed not "0"?

☞ set the desired speed reference if it is set to "0". If it is incorrectly set, refer to (7).

④ Is PAR\_07 [motor rating] properly set?

☞ check the motor nameplate and setting matches.

⑤ Is PAR\_17 [motor speed] properly set?

☞ check the motor nameplate and setting matches.

⑥ Is PAR\_22 [motor rated current] properly set?

☞ check the motor nameplate and setting matches.

⑦ Is PAR\_27 [motor flux current] properly set?

☞ If LG-OTIS vector motor is not used, consult LS representative or set the correct value in accordance with application. However, it cannot set to exceed PAR\_22 [motor rated current]. Normally it is 30~40 % of rated motor current.

⑧ Is PAR\_21 [motor rated slip] properly set?

☞ check the motor nameplate and setting matches.

⑨ Is PAR\_28 [Motor secondary time constant (Tr) properly set?

☞ if motor is not LG-OTIS vector motor, perform the Auto-tuning or set this correctly. If it is incorrectly set, inverter performance will be dramatically deteriorated.

⑩ Is PAR\_19 [number of motor poles] properly set?

☞ check the motor nameplate and setting matches.

⑪ CON\_33 [Torque limit setting] is set to " Kpd Kpd Kpd ". Is CON\_34 ~ CON\_36 setting correct?

☞ CON\_34 ~ CON\_36 marks upper limit in inverter output torque. For the application lower torque limit is required, when torque shortage occurs, increase this value a little. STARVERT-iV5 's overload capacity is 150%/1 min. when using torque limit over 150%, time and the number of use should be limited.

⑫ When CON\_33[torque limit setting] Analog or Option, the corresponding input value is properly set?

☞ CON\_33 is set to Analog, one of Ai1/Ai2/Ai3 should be defined as "Torque limit". If set to Option, refer to Option manual for proper setting.

### 3) Motor speed is not increasing while it is running.

① Is PAR\_10 [number of Encoder pulse] set properly?

☞ factory default is 1024. If it is not OTIS vector motor, contact with Encoder maker.

- ② FUN\_01 is set to "Keypad", FUN\_02 to "Keypad1", FUN\_12(Speed 0) to 100.0rpm and press [FWD] key but motor speed is not 100.0rpm. In this case, check for encoder wiring.

☞ If encoder wiring is disconnected or switched, it rotates only uni-direction with low speed (30.0 ~ 60.0rpm) and over 150% its rated current. Check the encoder wiring and whether wiring of defined terminal and motor encoder terminal is shorted.

- ③ If motor speed does not increase and keeps abnormally 30.0 ~ 60.0 rpm, stop the motor and switch the wiring of A and B phase of Encoder. Check whether motor rotating direction is reversed as seen in (4).

☞ In the case of Line Drive type encoder, wire A+, A- phase to B+, B- and B+, B- phase to A+, A-

Complementary / for the case of Open Collector type encoder, reverse the wiring of PA and PB.

Or switch the encoder direction in **PAR 11 (Enc Dir Set) and try RUN.**

#### 4) Motor rotates in reverse direction.

☞ Switch the wiring of output phase V and W. Switch the wiring of encoder phase A and B as indicated in (3).

**Or switch the encoder direction in PAR 11(Enc Dir Set) and try RUN.**

#### 5) Motor rotating direction cannot be changed.

- ① Is RUN/STOP setting proper?

☞ Check FUN\_01 RUN/STOP command setting matches the actual operating mode. If FUN\_01 is set to Terminal (Keypad) but operation cannot be made, change it to Keypad (Terminal). If it does not work, refer to '6) Keypad or terminal malfunctions'.

- ② Is one of the terminal defined as FWD/REV Run Disable ON?

☞ Check one of DIO\_01 ~ DIO\_07 terminals is defined as "Prohibit FWD" or "Prohibit REV". If so, check input terminal status in DIS\_01 ~ DIS\_03. If rotating direction is not changed, check the terminal is ON.

#### 6) Keypad or terminal malfunctions.

- ① When [REV], [FWD], [STOP] key on the keypad is lit Red or Green

☞ Refer to 1) if RUN/STOP is not activated by Keypad or Terminal. If setting change is not available, PAR\_04 may set to prohibit parameter write. To release this setting, enter 12 in PAR\_04. If problem persists, contact

LS representatives.

② When [STOP] key is blinking

☞ This marks trip condition or BX active status. Check any other trips occur in DIS\_05. Reset the trip and try run. Check BX signal is ON on the keypad and input terminal signal in DIS\_01 ~ DIS\_03. Reset BX and try run.

③ When green lamp on [REV], [FWD] key is blinking

☞ It marks accel/decel is in operation. If inverter keeps operation in this condition, it means load capacity calculation is incorrect and exceeds inverter rating. Refer to (16).

### 7) Operating speed does not change during run.

① Is FUN\_02 speed setting proper?

☞ Speed setting methods in STARVERT-IV5 are Analog input, Keypad and Option. Select appropriate one among them.

② Is DIS\_01(PreRamp Ref) setting the correct value?

☞ Current speed ref. Values are displayed in DIS\_01 ~ DIS\_03. Check the displayed value matches the setting value. If speed is not variable, check the encoder. (Refer to (13))

③ Speed setting method is "Keypad" and speed ref displayed DIS\_01 ~ DIS\_03 is not correct.

☞ Check terminal setting in DIO\_01 ~ DIO\_07 defined as Multi-step speed setting.

④ When speed setting method is Analog and DIS\_01 ~ DIS\_03 display is not desired value

☞ Check one of Ai1 ~ Ai3 is defined as "Speed Ref".

### 8) Motor keeps rotating at OV condition when speed setting is via Analog input.

① When AIO\_11 Definition of Ai1 input is set to "Speed Ref"

☞ Adjust the Ai1\_Bias at AIO\_14. (Setting unit: %)

The displayed value is speed command. Set the desired value (ex: 0.0%) and press [ENTER] key.

② Follow the same steps to check Ai2 ~ Ai3.

### 9) Motor detects speed reference but motor rpm is showing decreasing while motor is overheated or hunting.

① Check the motor wiring.

☞ There is a possibility of incorrect motor wiring when motor is 220V / 380V dual rating. Motor does not normally rotate when pole number setting is incorrect. However, motor may get damaged in case of miswiring. If this problem occurs, contact motor sales office. Refer to Power terminal description in this manual.

② Is motor capacity set correctly?

☞ Check PAR\_07 motor rating selection is set the same as motor in use. See the nameplate for motor rating.

③ Is motor parameter set correctly?

☞ Motor parameters vary by manufacturer. STARVERT-iV5 setting is based on OTIS vector motor as default. Motor parameters should be changed when other makers' motor is used.

### 10) Nothing displayed on the LCD?

① Is the connection of inverter and keypad tight?

☞ Check the inverter and Keypad connection.

② Is input power turned on ?

☞ Check inverter power is applied. If nothing is displayed on the LCD in this condition, contact LS representatives.

### 11) Motor speed oscillates and speed is not constant during constant Run.

① Is encoder wired using twisted shield cable?

☞ encoder signal wiring should be conducted with Twisted Shield Cable. Otherwise, speed may oscillate at low speed (or high speed) due to encoder input noise, leading to motor vibration or abnormal motor sound at stop.

② Is the connection of inverter and motor and encoder grounding proper?

☞ Check the grounding of inverter and encoder is connected. This could occur when not connected. Fixed screw for the connection of encoder grounding and the inverter is located on the right bottom side of the control PCB. Loosen the fixed screw and insert the ground wire of the encoder and tighten the screw. (Refer

to encoder wiring diagram). For grounding the motor, use G of the inverter Main terminal.

- ③ Connect inverter panel grounding connected with motor grounding to the building grounding.

☞ If not, incorrect motor speed may be input due to encoder input noise.

- ④ Is too large speed gain assigned to the inverter while motor load is light?

☞ Motor oscillates at stop when PI gain is set much larger than the actual load in CON\_03 and CON\_04.

Therefore, gain should be set accordingly. Responsiveness increases when P gain is set higher and I lower but

system may become unstable. Gain value varies system but generally set **30 ~ 70%** for **P gain** and set

**100 ~ 500ms** for **I gain.**

- ⑤ Increase PAR\_13 Enc LPF setting value.

- ⑥ Is there slip present at the connection of encoder and motor shaft?

☞ Poor encoder and motor connection may generate slip. Check the connection is tight.

### 12) Parameter change is not saved.

☞ Turn the power off and turn it on. If problem persists, contact LS representatives.

### 13) "Fuse Open" trip occurs constantly.

- ① is the input (line) voltage normal?

☞ Check the line voltage input. If phase to phase unbalance exceeds 2%(greater than 6V for 380V input), an AC reactor should be provided. Otherwise, inverter may get damaged and A/S fee will be charged during Warranty period.

- ② is the phase sequence of the output terminal U, V, W correct?

☞ Check the level of the input signal.

- ③ Is the motor insulation damaged?

☞ Various types of malfunction occur when the insulation is damaged. In general, operation stops at a certain speed (and more), overload or "OC-U (V,W)" trip occurs during regenerating. Or motor overheating and rotating speed oscillates. This condition persists for a while and then "Fuse Open" trip occurs. It marks motor insulation is damaged. In this case, replace the motor.

### 14) Motor input current is too large.

- ① Check the motor wiring.
  - ☞ Check the motor wiring for the use of 220V / 380V transition type motor. (Refer to Main circuit terminal)
- ② Are motor and inverter capacity set correctly?
- ③ Is the setting of motor constants appropriate?
  - ☞ Refer to 2) and 9) and check the motor and inverter setting.

### 15) OC-U (V,W) trip occurs frequently during operation. (Motor input current is oscillating.)

- ① check the encoder installation.
  - ☞ If encoder connection is poor, motor vibration affects encoder and incorrect encoder signal is input to the inverter. Vector inverter controls the speed from Encoder F/B value so it follows the input signal whether correct or not, increasing inverter current. If so, contact motor maker or encoder commission company.
- ② Is there no inverter output phase loss?
- ③ Is the motor insulation not damaged?
  - ☞ Refer to 13) and check the inverter and motor.

### 16) Accel/Decel cannot be made properly and green lamp in [REV], [FWD] key is blinking.

**(load and frequency reference signal is oscillating.)**


- ① Check motor wiring.
- ② FUN\_41 ~ FUN\_48 Accel/Decel time and DIS\_00 motor load.
  - ☞ Blinking Green lamp marks motor is accelerating or decelerating. If the rotating speed oscillates and green lamp is blinking, it marks inverter output torque shortage due to mis-calculation of load. In this case, increase the torque limit to enable inverter to accelerate/decelerate within its rating. If load is set too high, it will shorten inverter life or damage to the unit.

## Chapter 11 - Option Devices

### 11.1 Encoder Division Option Board

#### 11.1.1 Encoder division option board installation and WIRING guide.


- Connect the option card's CN2 connector to CN4 on the control board.

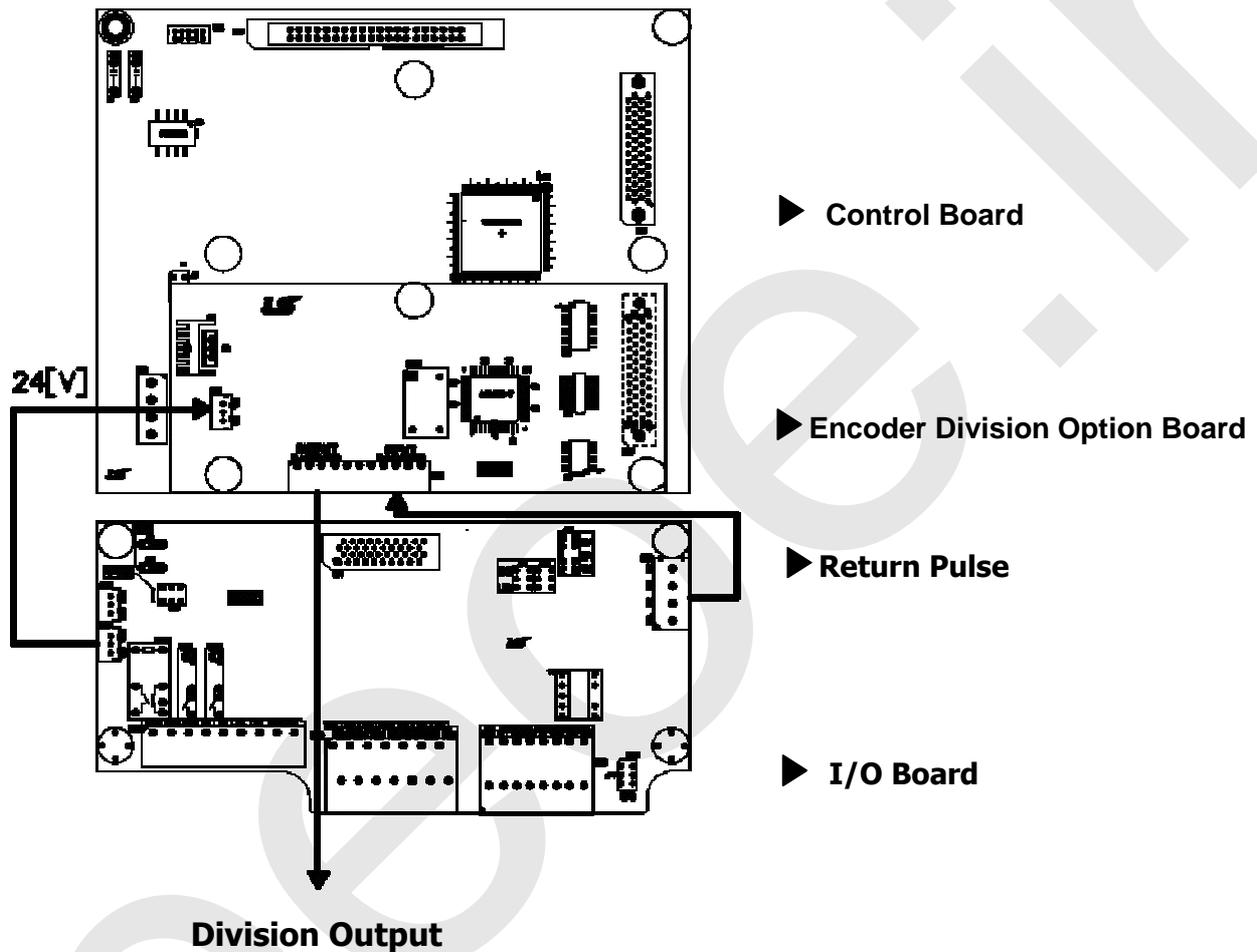

## 11.1.2 Wiring guide for encoder division option board

- Connect Encoder output terminal (Open collector output) on I/O board to input terminal of the option card.

Encoder Division Option Board Terminal name		Encoder Division Option Board Description	Connection board and terminal
Input	PA_IN	Encoder Phase A Division Input	I/O Board: RA (Phase A Output)
	PB_IN	Encoder Phase B Division Input	I/O Board: RB (Phase B Output)
	G24	GND	I/O Board: GE (GND)
Output	RT_A	Encoder Phase A Division Input	External controller: Phase A Input
	RT_B	Encoder Phase B Division Input	External controller: Phase B Input
	G24	GND	External controller: GND

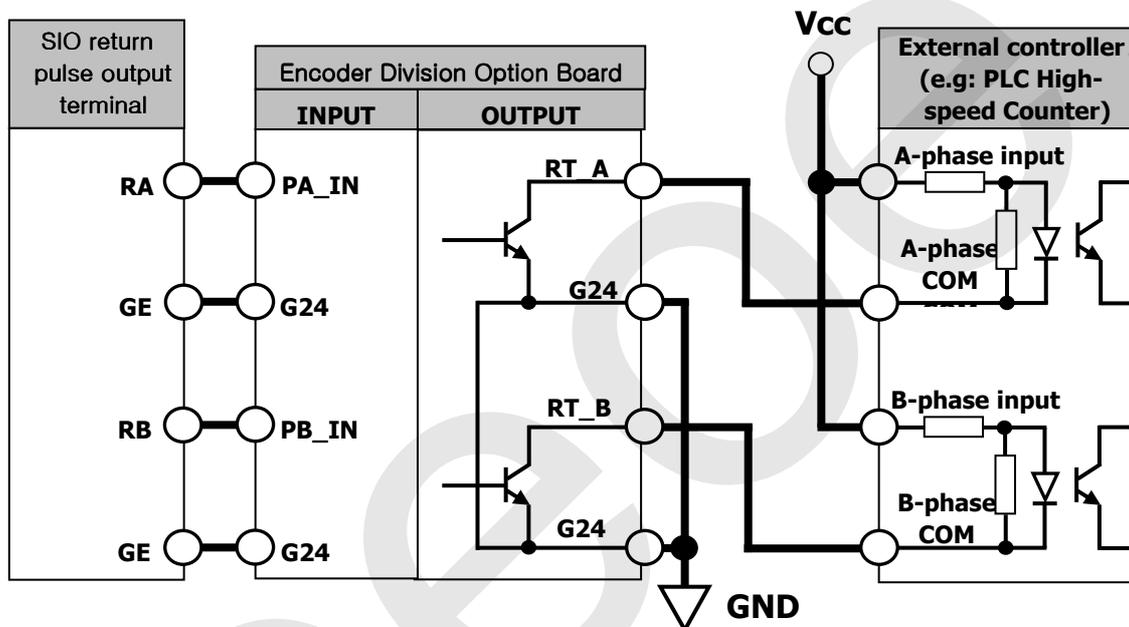

### Warning

Wiring must be considered with input circuit. Because encoder output is open collector type. The figure is shown the wiring when inverter is connected with High-speed counter of LSIS PLC.

**11.1.3 Encoder division output**

Only available when Encoder Division Output Option Card is installed.

Sets the division ratio for monitoring the Encoder pulse signals.

Code	Address	LCD display	Description	Setting range	Unit	Factory setting
PAR_32	7320	EncDiv Ratio	Encoder Pulse Output Division Rate	1 ~ 1128		1
PAR_33	7321	EncDivFilter	Encoder Division Output Filter	0 ~ 15		0

Encoder division output option card outputs one pulse signal when input pulse number matches the value set in PAR\_32.

A/B pulse output follows input pulse phase. The relationship between output of A, B pulse follows the same as input pulse. Division ration can be set within the range of 1 (1 output pulse per 1 input pulse) ~ 1/128(1 output pulse to 128 input pulse).


PAR\_32 setting range: 0001 ~ 1128. Division ratio cannot be set higher than 1 and only 1 or 2 can be set for numerator. The below is Division ratio calculation formula.

N refers to the value from thousand (0000) and M refers to value less than thousand (0000)

PAR\_32 set value = N×1000 + M.

$$\text{Division ratio} = (1+N)/M$$

Setting range: N (0, 1), M (1 ~ 128)

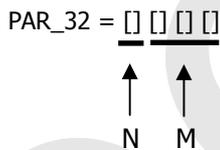

When PAR\_32 setting value is below 1000 (N=0), a numerator value becomes 1 and when above 1000 (N=1), a numerator value becomes 2. For example, if PAR\_32 is set to 15, the division ratio is 1/15 and if 1015, the ratio is 2/15. Division ratio is settable up to 1/128 and greater than 1 is not settable. Using Up key on the keypad PAR\_32 value is increased and increase routine is 1 → 2 → 3 → 4 → ... → 127 → 128(Division ratio: 1/128) → 1002 (Division ratio: 1) → 1003 → ... → 1128 (Division ratio: 1/64) and decrease routine (using Down key on the keypad) is the same as increase routine.

## 11.2 iV5 Option Board List

### 11.2.1 Dedicated option board for iV5

No.	Option board	Use	Product Code
1	ENC DIV(OC)	Encoder division option board	64070003
2	EL I/O	Elevator function option board	64070004
3	SYNC I/O	Synchronization option board	64070006
4	SIN/COS(Encoder)	SIN/COS encoder option board	64070007
5	EXTN I/O	Extension I/O option board	64070008

The information of ENC DIV(OC) is described in chapter 10.1 and EXTN I/O is chapter 3.4.3.  
For more information on other options, please refer to the option board manual.

### 11.3 iV5 External Communication Option Board

No.	Option board	Use	Product Code
1	RS485/Modbus-RTU	RS485/Modbus-RTU communication option board	64000007
2	DEVICENET	DeviceNet communication option board	64050022
3	PROFIBUS-DP	Profibus-DP communication option board	64050023
4	CC-Link	CC-Link communication option board	64050024

For more information on above options, please refer to the option board manual.

## Chapter 12 – Accessories

### 12.1 MCCB(LS), ELB(LS), Magnetic Contactor(LS), input/output

#### Wire specifications

Voltage	Motor (kW)	Inverter models	MCCB, ELB (LS)	Magnetic contactor (LS)
200V	2.2	SV022iV5-2DB	TD125U/30A, EBS33b30A	MC-18a
	3.7	SV037iV5-2DB	TD125U/30A, EBS33b30A	MC-32a
	5.5	SV055iV5-2DB	TD125U/50A, EBS53b50A	MC-40a
	7.5	SV075iV5-2DB	TD125U/60A, EBS63b60A	MC-50a
	11	SV110iV5-2DB	TD125U/100A, EBS103b100A	MC-65a
	15	SV150iV5-2DB	TD125U/125A, EBS203b125A	MC-100a
	18.5	SV185iV5-2DB	TS250U/150A, EBS203b150A	MC-125a
	22	SV220iV5-2DB	TS250U/175A, EBS203b175A	MC-150a
	30	SV300iV5-2	TS250U/225A, EBS203b225A	MC-150a
	37	SV370iV5-2	TS400U/300A, EBS403b300A	MC-220a
400V	2.2	SV022iV5-4DB	TD125U/15A, EBS33b15A	MC-12a
	3.7	SV037iV5-4DB	TD125U/15A, EBS33b15A	MC-18a
	5.5	SV055iV5-4DB	TD125U/30A, EBS33b30A	MC-22a
	7.5	SV075iV5-4DB	TD125U30A, EBS33b30A	MC-32a
	11	SV110iV5-4DB	TD125U/50A, EBS53b50A	MC-40a
	15	SV150iV5-4DB	TD125U/60A, EBS103b60A	MC-50a
	18.5	SV185iV5-4DB	TD125U/80A, EBS103b80A	MC-65a
	22	SV220iV5-4DB	TD125U/100A, EBS103b100A	MC-65a
	30	SV300iV5-4(380V)	TD125U/125A, EBS203b125A	MC-100a
	37	SV370iV5-4(380V)	TS250U/150A, EBS203b150A	MC-125a
	45	SV450iV5-4(380V)	TS250U/175A, EBS203b175A	MC-150a
	55	SV550iV5-4(380V)	TS250U/225A, EBS203b225A	MC-180a
	75	SV750iV5-4(380V)	TS400U/300A, EBS403b300A	MC-220a
	90	SV900iV5-4(380V)	TS400U/400A, EBS403b400A	MC-300a
	110	SV1100iV5-4(380V)	TS800U/500A, EBS603b500A	MC-400a
	132	SV1320iV5-4(380V)	TS800U/600A, EBS603b600A	MC-400a
	160	SV1600iV5-4(380V)	TS800U/600A, EBS603b600A	MC-600a
	220	SV2200iV5-4(380V)	ABS803/800A, EBS803b800A	MC-800a
	280	SV2800iV5-4	ABS1003/1000A, EBS1003b1000A	1000A
	315	SV3150iV5-4	ABS1203/1200A, EBS1203b1200A	1200A
375	SV3750iV5-4	1400A, 1400A	1400A	

※ Please refer to our LSIS MCCB, ELB and MC catalog for the your order. The product indicated with only current will be released in the near future.

### 12.2 AC input fuse, AC reactor, DC reactor

Voltage	Motor kW)	Inverter models	AC input fuse	AC reactor	DC reactor
200V	2.2	SV022iV5-2DB	25 A	0.88 mH, 14 A	—
	3.7	SV037iV5-2DB	40 A	0.56 mH, 20 A	—
	5.5	SV055iV5-2DB	40 A	0.39 mH, 30 A	—
	7.5	SV075iV5-2DB	50 A	0.28 mH, 40 A	—
	11	SV110iV5-2DB	70 A	0.20 mH, 59 A	—
	15	SV150iV5-2DB	100 A	0.15 mH, 75 A	—
	18.5	SV185iV5-2DB	100 A	0.12 mH, 96 A	—
	22	SV220iV5-2DB	125 A	0.10 mH, 112 A	—
	30	SV300iV5-2	150A	0.08 mH, 134 A	0.35 mH, 152 A
	37	SV370iV5-2	200A	0.07 mH, 160 A	0.30 mH, 180 A
400V	2.2	SV022iV5-4DB	10 A	3.23 mH, 7.5 A	—
	3.7	SV037iV5-4DB	20 A	2.34 mH, 10 A	—
	5.5	SV055iV5-4DB	20 A	1.22 mH, 15 A	—
	7.5	SV075iV5-4DB	30 A	1.14 mH, 20 A	—
	11	SV110iV5-4DB	35 A	0.81 mH, 30 A	—
	15	SV150iV5-4DB	45 A	0.61 mH, 38 A	—
	18.5	SV185iV5-4DB	60 A	0.45 mH, 50 A	—
	22	SV220iV5-4DB	70 A	0.39 mH, 58 A	—
	30	SV300iV5-4(380V)	100 A	0.33 mH, 67 A	1.19 mH, 76 A
	37	SV370iV5-4(380V)	100 A	0.27 mH, 82 A	0.98 mH, 93 A
	45	SV450iV5-4(380V)	100 A	0.22 mH, 100 A	0.89 mH, 112 A
	55	SV550iV5-4(380V)	150 A	0.15 mH, 121 A	0.75 mH, 135 A
	75	SV750iV5-4(380V)	200 A	0.13 mH, 167 A	0.44 mH, 187 A
	90	SV900iV5-4(380V)	250 A	0.11 mH, 201 A	0.35 mH, 225 A
	110	SV1100iV5-4(380V)	300 A	0.09 mH, 245 A	0.30 mH, 274 A
	132	SV1320iV5-4(380V)	400 A	0.08 mH, 290 A	0.26 mH, 324 A
	160	SV1600iV5-4(380V)	400 A	0.06 mH, 357 A	0.22 mH, 399 A
	220	SV2200iV5-4(380V)	800A	0.029mH, 799 A	0.1mH, 530 A
	280	SV2800iV5-4	900A	0.029mH, 799 A	0.090mH, 836 A
	315	SV3150iV5-4	1000A	0.024mH, 952 A	0.076mH, 996 A
375	SV3750iV5-4	1200A	0.024mH, 952 A	0.064mH, 1195 A	

※ For 2.2~22kW, DC reactor standard is not provided, for not having DC reactor wiring terminal.

## 12.3 The Selection of Braking Resistor and the Unit

### 12.3.1 The selection of dynamic braking resistor

Resistor values shown in the following table is calculated on the basis of 150% of rated braking torque, 5% ED 1). Power rating of resistor should be doubled for resistor frequency 10% ED use. Additional braking unit should be installed for above SV 300iV5-2 / SV300iV5-4.

Inverter	Rated Capacity (5% ED)	
	[Ω]	[W] <sup>(2)</sup>
SV 022iV5-2 DB	50	400
SV 037iV5-2 DB	33	600
SV 055iV5-2 DB	20	800
SV 075iV5-2 DB	15	1200
SV 110iV5-2 DB	10	2400
SV 150iV5-2 DB	8	2400
SV 185iV5-2 DB	5	3600
SV 220iV5-2 DB	5	3600
SV 022iV5-4 DB	200	400
SV 037iV5-4 DB	130	600
SV 055iV5-4 DB	85	800
SV 075iV5-4 DB	60	1200
SV 110iV5-4 DB	40	2400
SV 150iV5-4 DB	30	2400
SV 185iV5-4 DB	20	3600
SV 220iV5-4 DB	20	3600

**(1): ED is based on 100 seconds.**

**(2): Rated capacity is based on the self-cooling.**

### 12.3.2 Wiring of the temperature sensor on braking resistor

Temperature sensor is attached in the LSIS braking resistors to prevent the fire.

Terminal of Braking Resistor	Power Terminal of Inverter	Action
B1, B2	P, BR	
P7, CM	One of the multi-function input terminals (P1 ~ P7) should be set to 'External Fault Signal b Contact'.	Contact is normally ON at the ambient temperature and is OFF in case of over-temperature.

**12.3.3 Braking unit**

- ① SV037DBH-2: 37kW/200V Class Braking Unit (10% ED)
- ② SV037DBH-4: 37kW/400V Class Braking Unit (10% ED)
- ③ SV075DBH-4: 75kW/400V Class Braking Unit (10% ED)
- ④ SV075DB-4 : 75kW/400V Class Braking Unit (100% ED)
- ⑤ SV220DB-4 : 220kW/400V Class Braking Unit (100% ED)

- The Combination of two braking unit for 400V class is possible for more than SV900iV5-4 capacity.
- When ED is more than 10%, Use the braking unit for 100% ED (Ex: vertical load such as carne, hoist)
- When the inverter capacity is more than 220kW, use the braking unit for SV220DB-4 (100% ED).
- Refer to description manual included in braking unit product for the use of 100% ED braking unit.

**12.3.4 Combination of braking unit**

Inverter Braking unit		SV[ ][ ][ ] iV5-2	SV[ ][ ][ ][ ]iV5-4				
		300/370	300/370	450/550/750	900/1100/1320/1600	2200	2800/3150/3750
200V	37kW	1					
400V	37kW		1				
	75kW			1	2		
	220kW					1	2

Note)

1. Example) Combine two braking units of 75kW-400V Class for SV-900iV5-4(90kW) Class.
2. Refer to the Braking Unit user manual that came with the braking unit.


## 12.3.5 Braking resistor for braking unit

Braking Unit	100% of Braking Torque, 10% ED	
	Resistance [ $\Omega$ ]	Rated Power [kW]
37kW-200V	3	5
37kW-400V	12	5
75kW-400V	6	10
75kW-400V	6	Refer to extra manual in the case of 100% ED braking unit.
220kW-400V	2	

## Chapter 13 – Dimensions

- SV 022, 037, 055, 075, 110, 150, 185, 220iV5-2DB(MD)
- SV 022, 037, 055, 075, 110, 150, 185, 220iV5-4DB(MD)  
type

\*MD: Mold

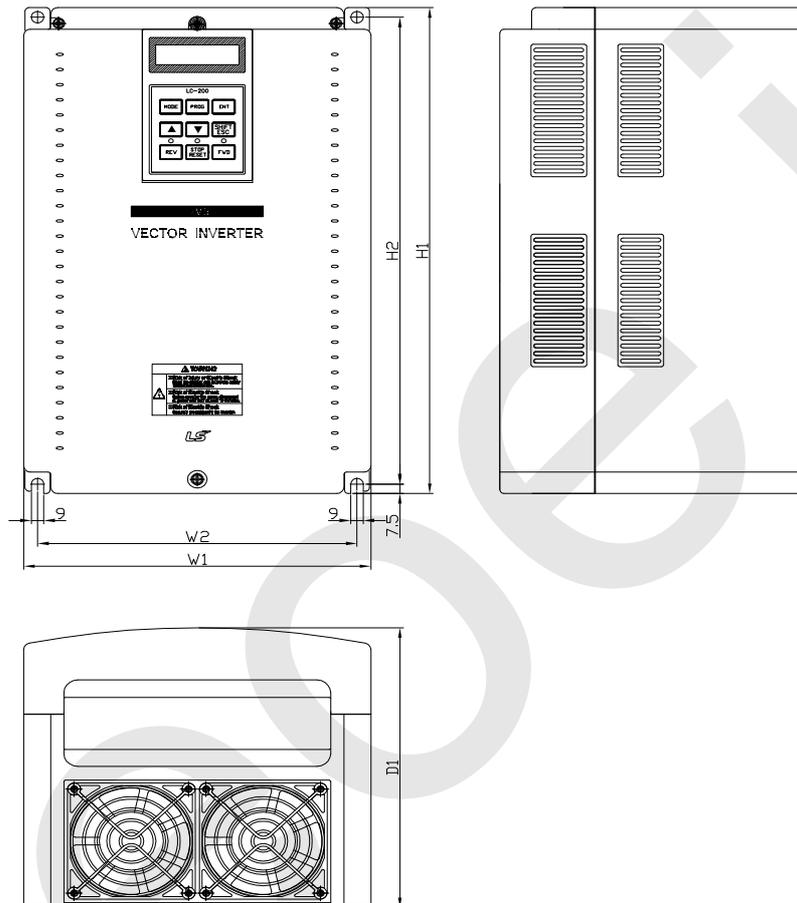


● Dimensions (unit: mm [inches])

Models	W1	W2	H1	H2	D1
SV022iV5-2/4DB(MD)	200 [7.87]	180 [7.09]	284 [11.18]	269 [10.69]	207 [8.15]
SV037iV5-2/4DB(MD)			355 [13.97]	340 [13.38]	202 [7.95]
SV055iV5-2/4DB(MD)	250 [9.84]	230 [9.06]	385 [15.16]	370 [14.57]	221 [8.70]
SV075iV5-2/4DB(MD)			460 [18.11]	445 [17.52]	254 [10.00]
SV110iV5-2/4DB(MD)	304 [11.97]	284 [11.18]	460 [18.11]	445 [17.52]	254 [10.00]
SV150iV5-2/4DB(MD)			460 [18.11]	445 [17.52]	254 [10.00]
SV185iV5-2/4DB(MD)	304 [11.97]	284 [11.18]	460 [18.11]	445 [17.52]	254 [10.00]
SV220iV5-2/4DB(MD)			460 [18.11]	445 [17.52]	254 [10.00]

- SV055, 075, 110, 150, 185, 220iV5-2DB
- SV055, 075, 110, 150, 185, 220iV5-4DB
- SV055, 075, 110, 150, 185, 220iV5-4DC

\*DC : DC power input type

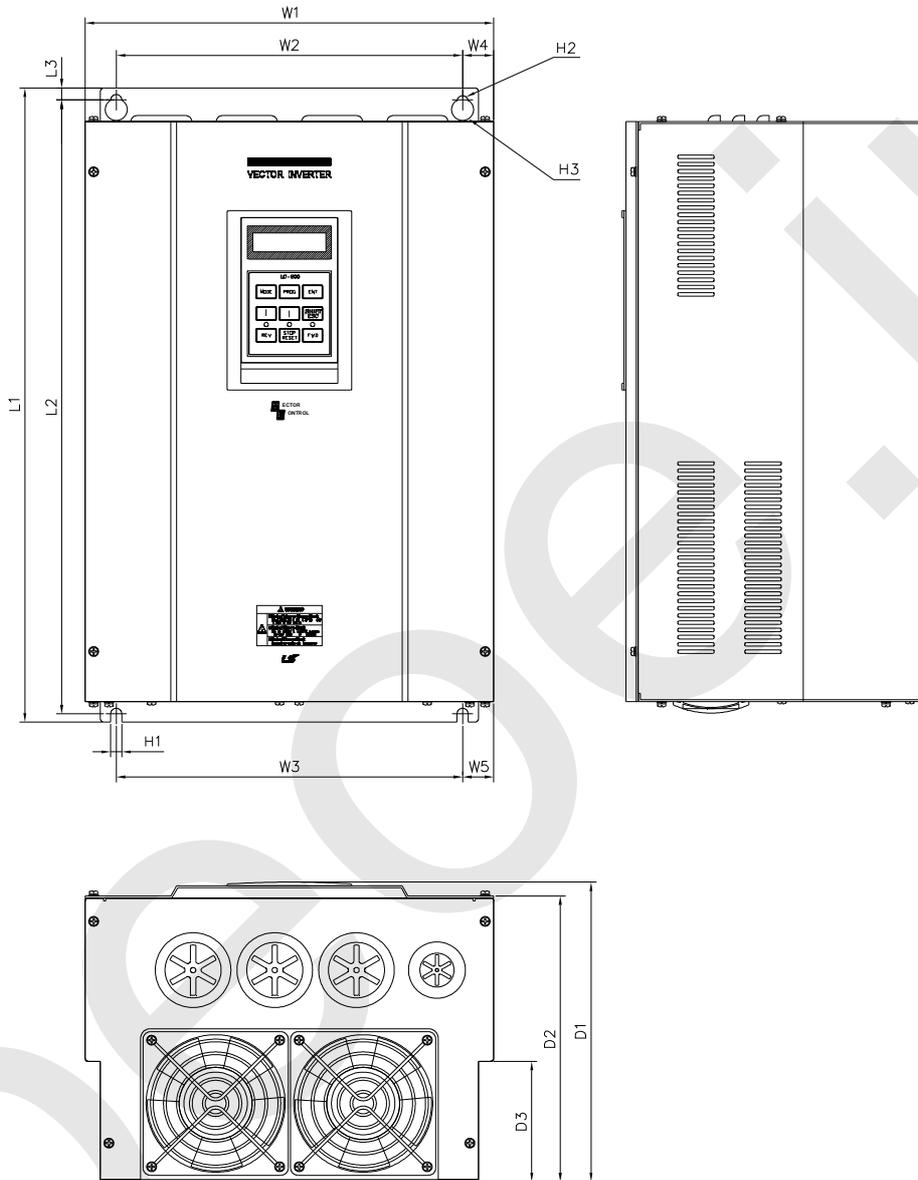



● Dimensions (unit: mm [inches])

\*DC has a same dimension as AC.

Models	W1	W2	W3	W4	W5	L1	L2	L3	D1	D2	D3	H1	H2	H3
SV055iV5-2/4DB	234.4	180	180	27.2	27.2	406.2	391.2	7.5	221.1	209.5	75	6	Φ6	Φ12
SV075iV5-2/4DB	[9.22]	[7.08]	[7.08]	[1.07]	[1.07]	[15.9]	[15.4]	[0.29]	[8.7]	[8.24]	[2.95]	[0.23]		
SV110iV5-2/4DB														
SV150iV5-2/4DB	335	284	284	25.5	25.5	526	509	10	248.6	237	100	7	Φ7	Φ14
SV185iV5-2/4DB	[13.1]	[11.1]	[11.1]	[1.00]	[1.00]	[20.7]	[20.0]	[0.39]	[9.78]	[9.33]	[3.93]	[0.27]		
SV220iV5-2/4DB														

- SV300, 370iV5-2
- SV300, 370, 450, 550, 750iV5-4
- SV300, 370, 450, 550, 750iV5-4DC

\*DC : DC power input type

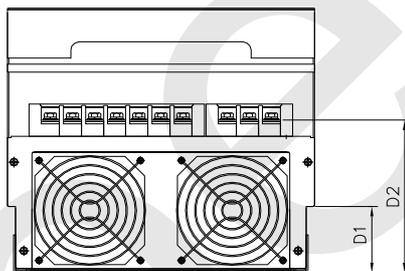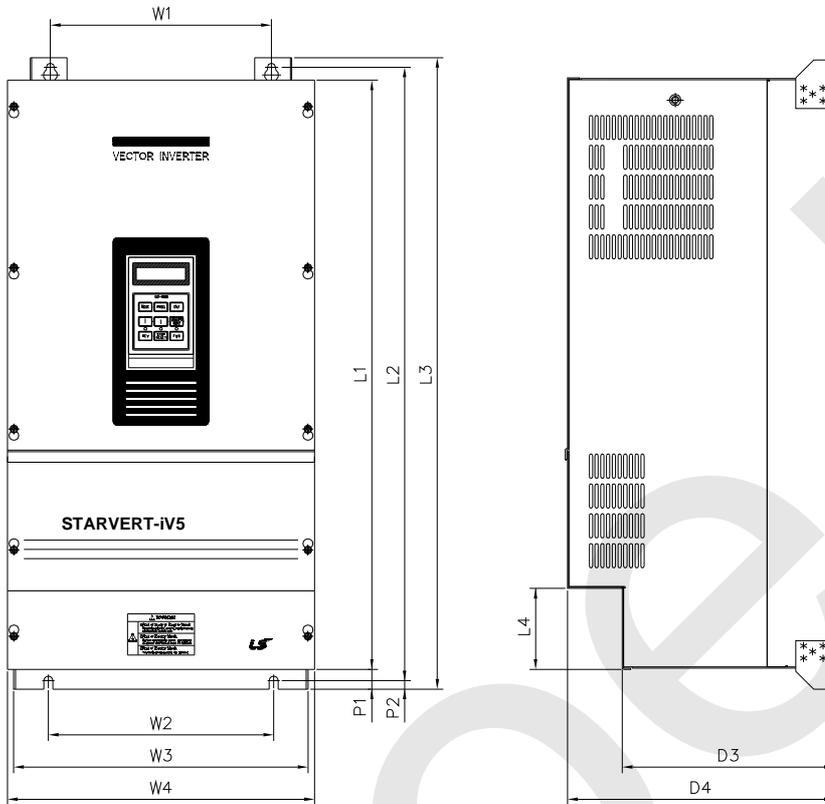


● Dimensions (unit: mm [inches])

\*DC has a same dimension as AC.

Models	W1	W2	W3	W4	L1	L2	L3	D1	D2	D3	D4	P1	P2
SV300iV5-2/4	270	270	319.2	350	635	660	680	120	197	256.6	308.2	16.9	8
SV370iV5-2/4	[10.6]	[10.6]	[12.5]	[13.7]	[25.0]	[26.0]	[26.7]	[4.72]	[7.76]	[10.1]	[12.1]	[0.66]	[0.31]
SV450iV5-4	275	275	359.6	375	730.6	758.5	780	82.3	189.3	259	326	24.5	10.5
SV550iV5-4	[10.8]	[10.8]	[14.1]	[14.7]	[28.7]	[29.8]	[30.7]	[3.24]	[7.45]	[10.2]	[12.8]	[0.90]	[0.41]
SV750iV5-4													

- SV900, 1100, 1320, 1600iV5-4
- SV900, 1100, 1320, 1600iV5-4DC

\*DC : DC power input type

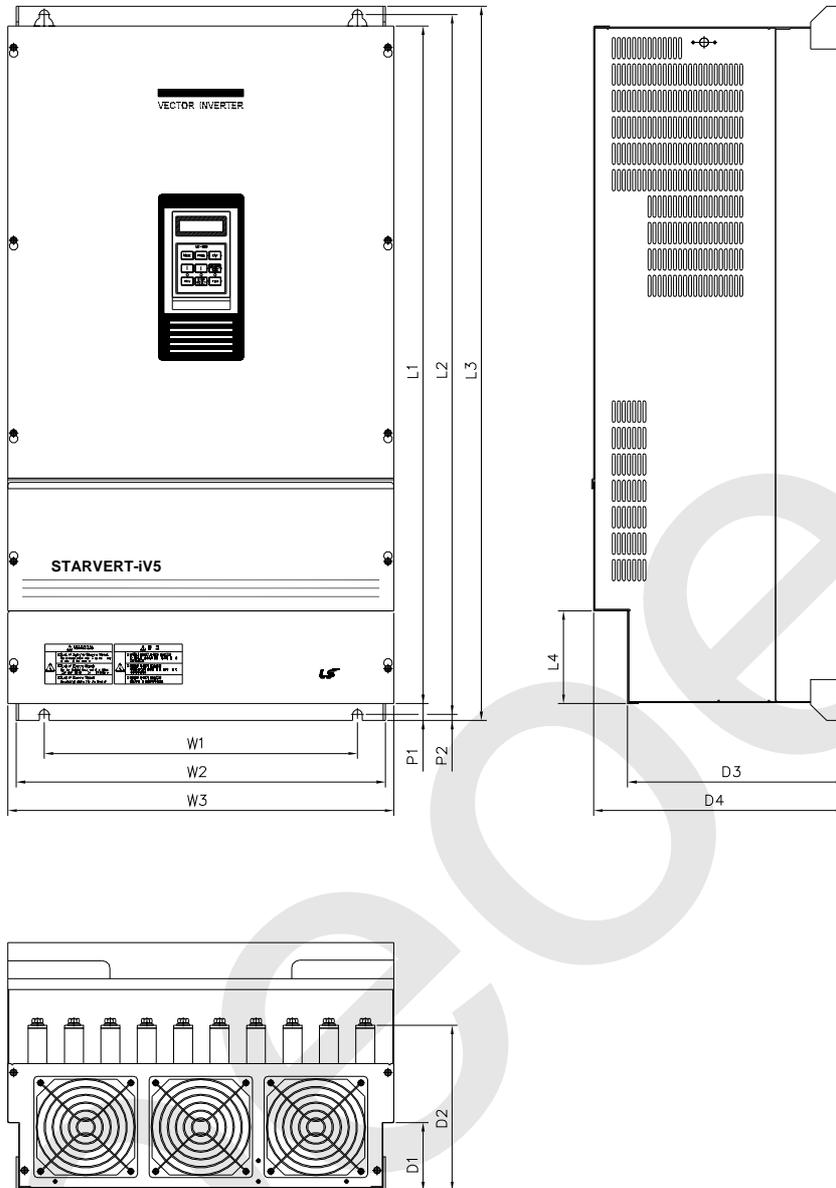



● Dimensions (unit : mm[inches])

\*DC has a same dimension as AC.

Models	W1	W2	W3	L1	L2	L3	D1	D2	D3	D4	P1	P2
SV900iV5-4	430	507	530	729	760	780	83.2	234.6	286.2	335	23.5	8.5
SV1100iV5-4	[16.9]	[19.9]	[20.8]	[28.7]	[29.9]	[30.7]	[3.27]	[9.23]	[11.2]	[13.2]	[0.92]	[0.33]
SV1320iV5-4	430	507	530	949	980	1000	95.2	231.6	298	345	23.5	8.5
SV1600iV5-4	[16.9]	[19.9]	[20.8]	[37.3]	[38.5]	[39.3]	[3.75]	[9.12]	[11.7]	[13.5]	[0.92]	[0.33]

- SV2200iV5-4
- SV2200iV5-4DC

\*DC : DC power input type

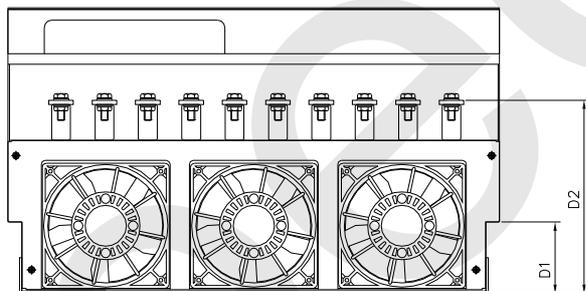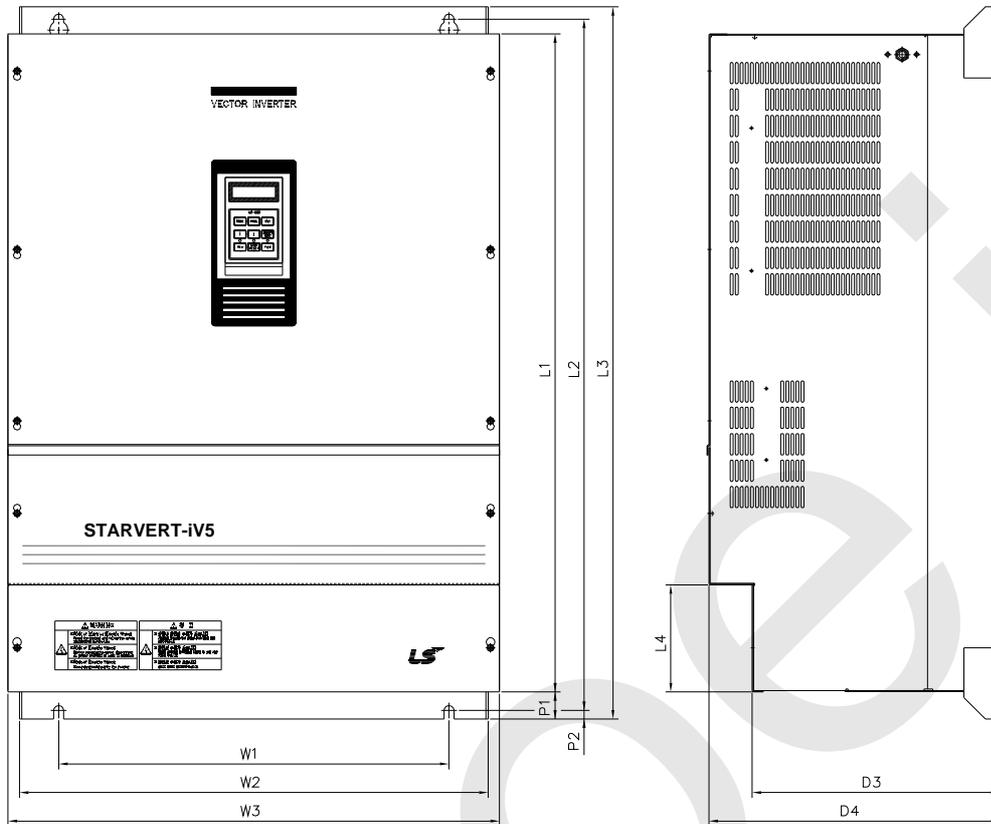


● Dimensions (unit : mm[inches])

\*DC has a same dimension as AC.

Models	W1	W2	W3	L1	L2	L3	L4	D1	D2	D3	D4	P1	P2
SV2200iV5-4	540 [21.26]	649 [25.55]	680 [26.77]	922 [36.3]	968.5 [38.13]	998 [39.29]	150 [5.91]	100.2 [3.94]	271 [10.67]	343 [13.5]	403 [15.87]	38 [1.49]	12 [0.47]

- SV2800, 3150, 3750iV5-4
- SV2800, 3150, 3750iV5-4DC

\*DC : DC power input type

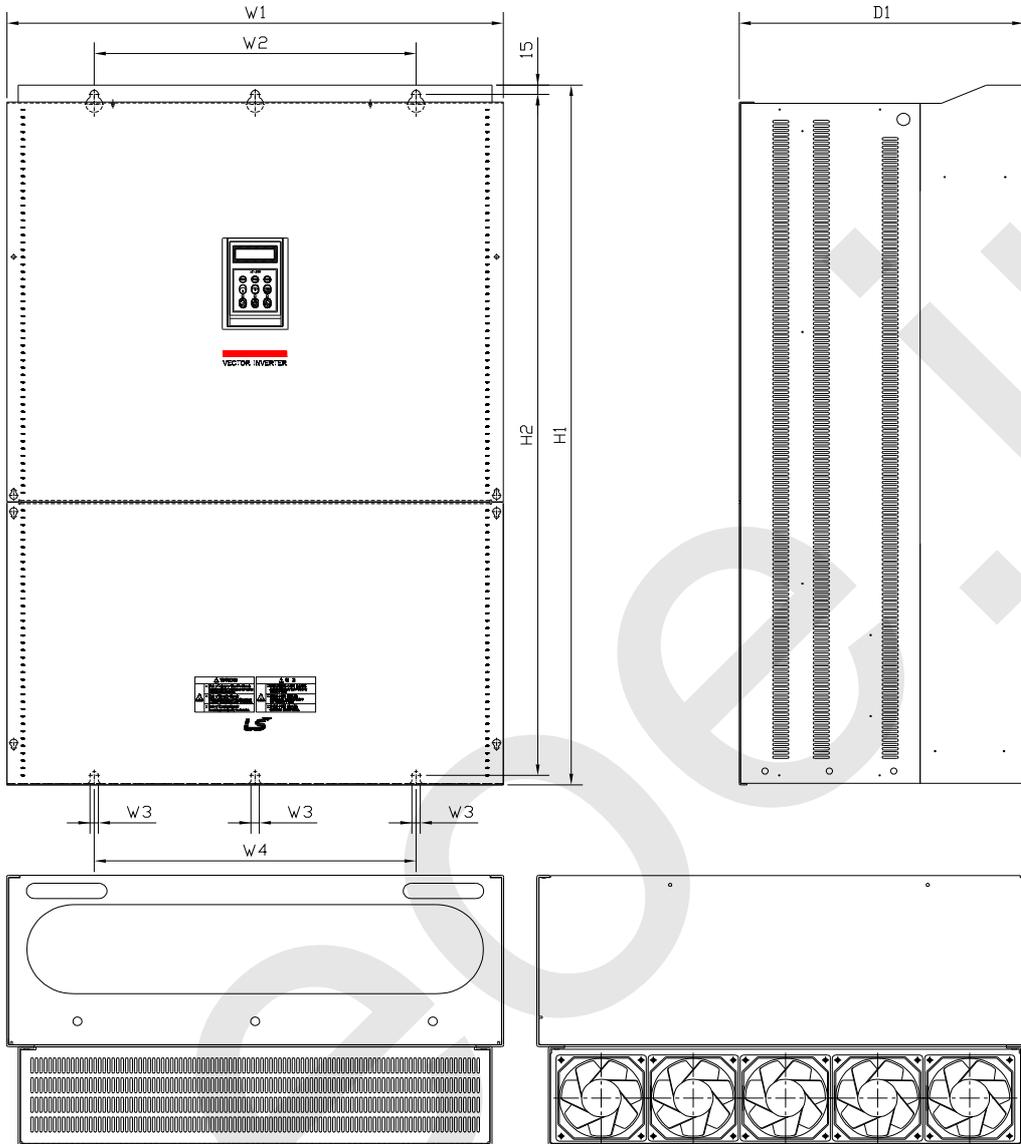


● Dimensions (unit : mm[inches])


\*DC has a same dimension as AC.

Models	W1	W2	W3	W4	H1	H2	D1
SV2800iV5-4	772 [30.39]	500 [19.69]	13 [0.51]	500 [19.69]	1140.5 [44.90]	1110 [43.70]	442 [17.40]
SV3150iV5-4	922	580	14	580	1302.5	1271.5	495
SV3750iV5-4	[6.30]	[22.83]	[0.55]	[22.83]	[51.28]	[50.06]	[19.49]




# Block Diagram

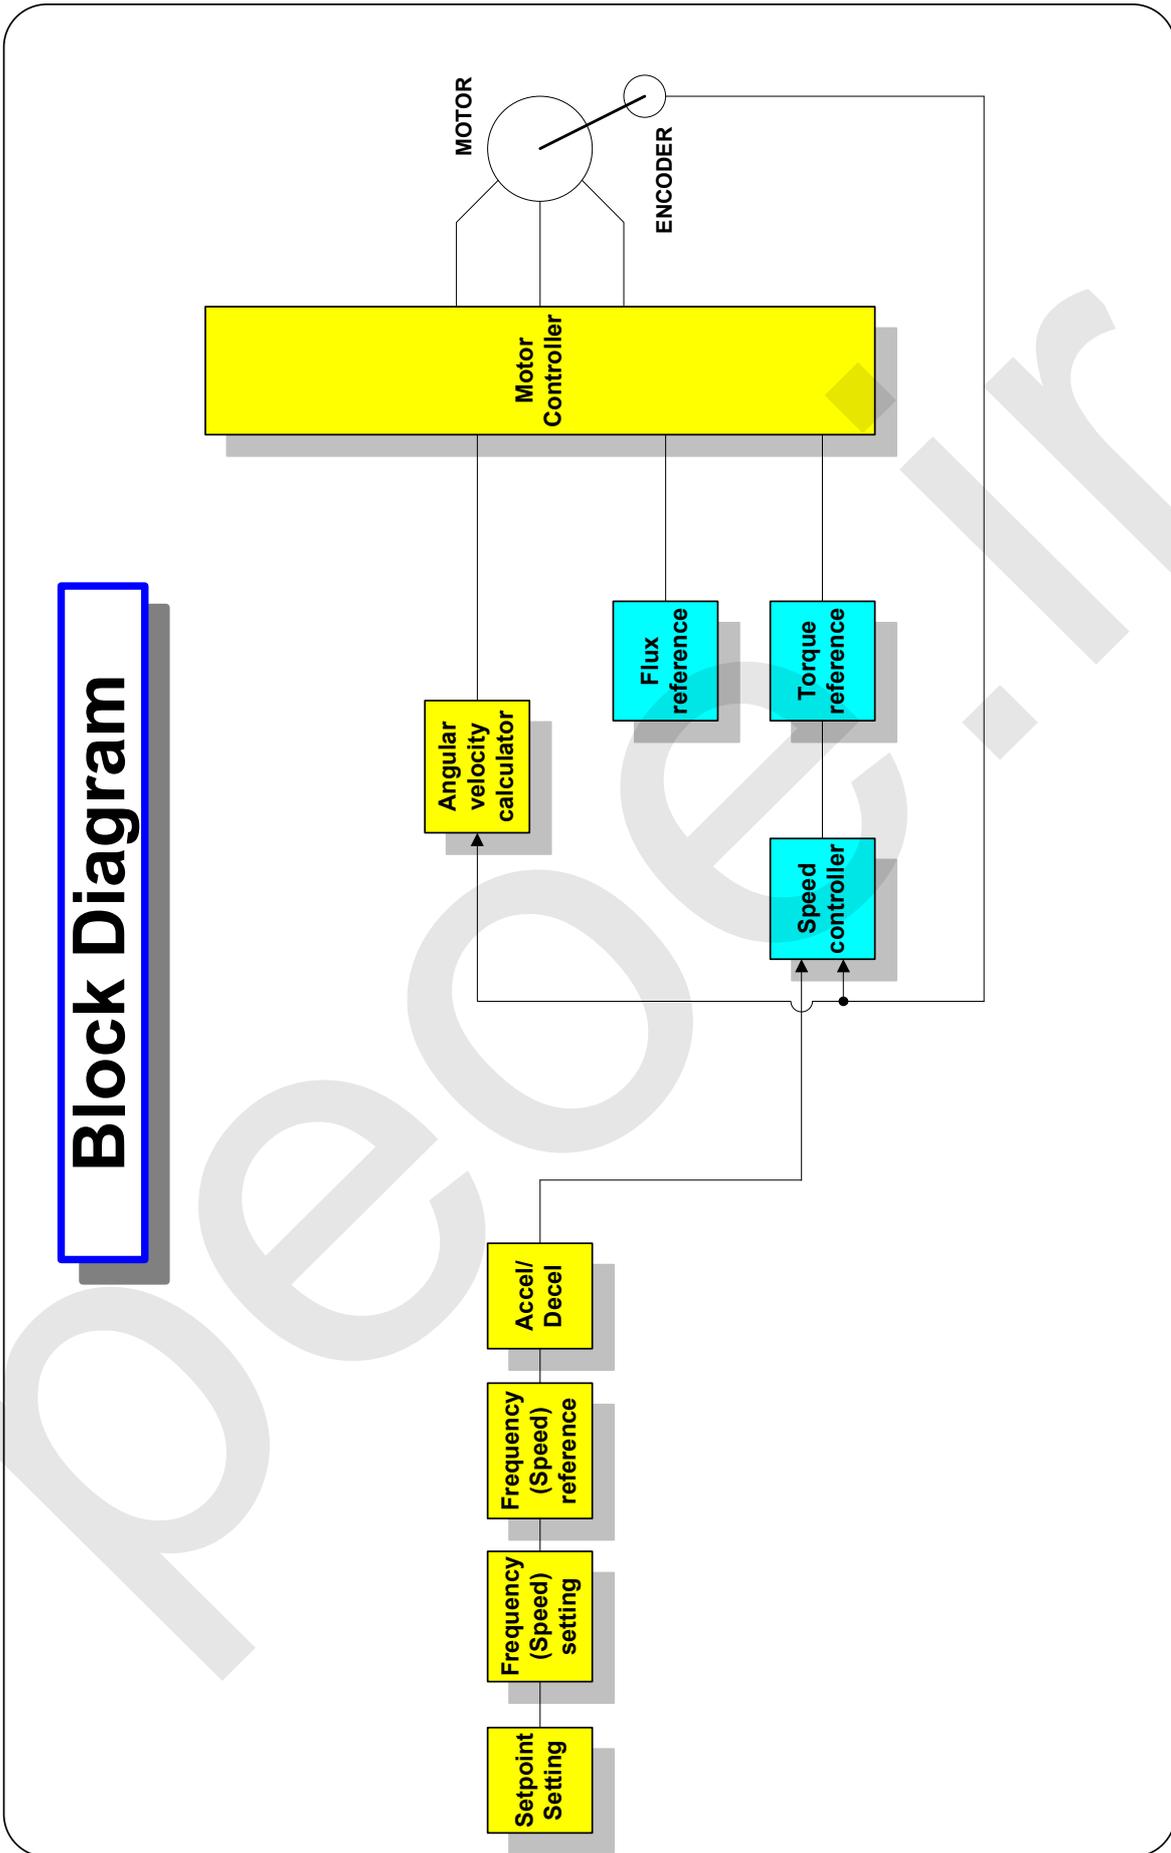


# Setpoint setting(AI0:AI1)

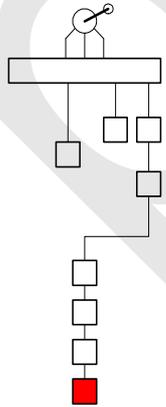


\* AI2 ~ AI3 setting follows this Sequence

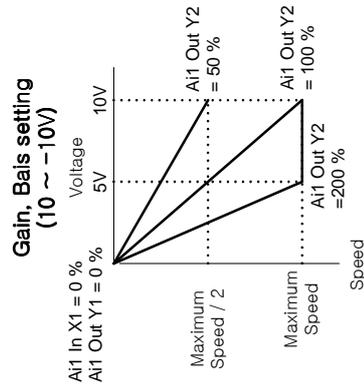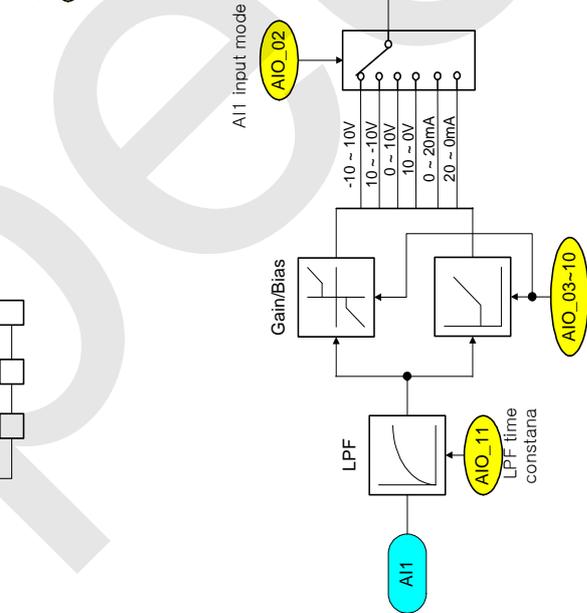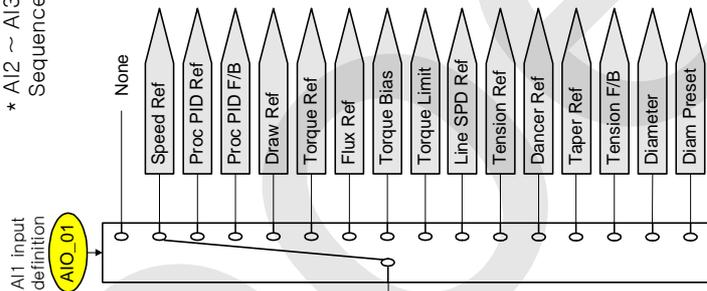


**Gain, Bias setting (-10 ~ 10V, 0 ~ 20mA)**

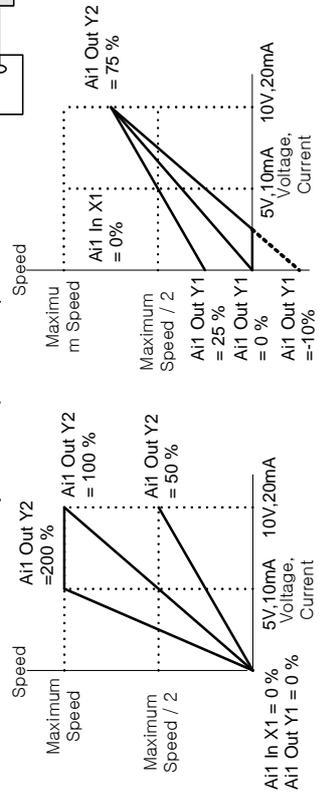



**Gain, Bias setting (10 ~ 0V, 20 ~ 0mA)**

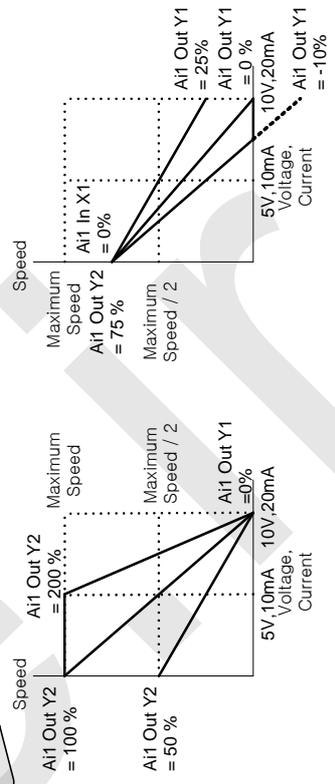


# Freq./Speed setting

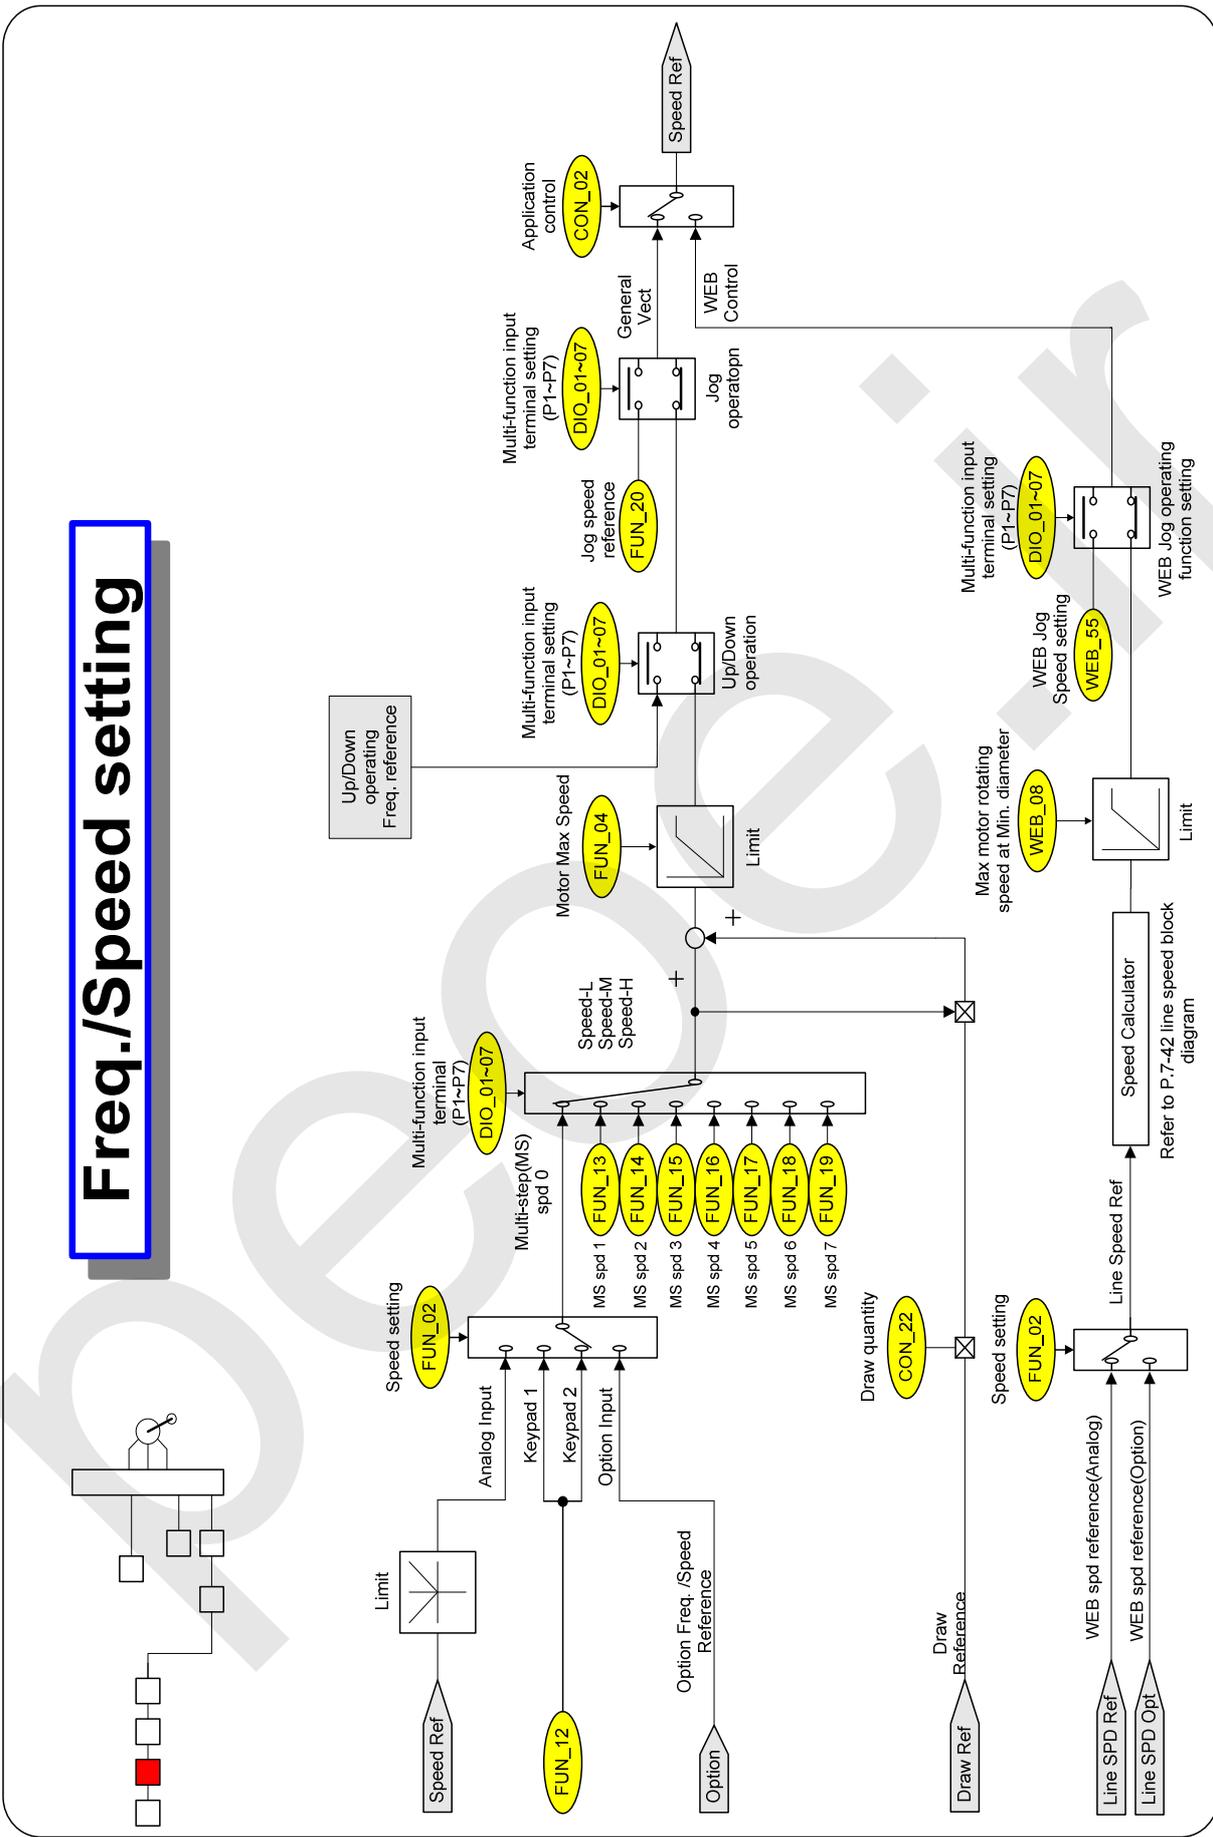


# Freq./Speed Reference

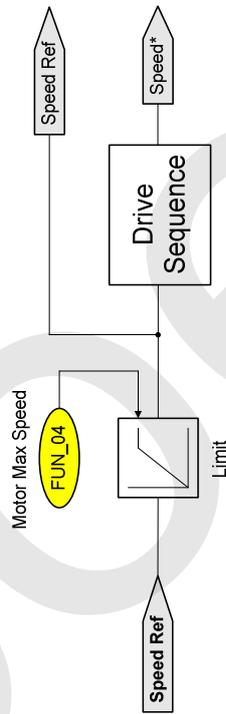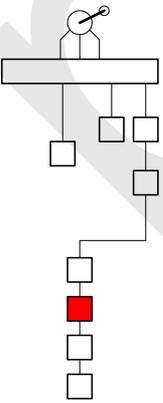



# Drive Sequence Section

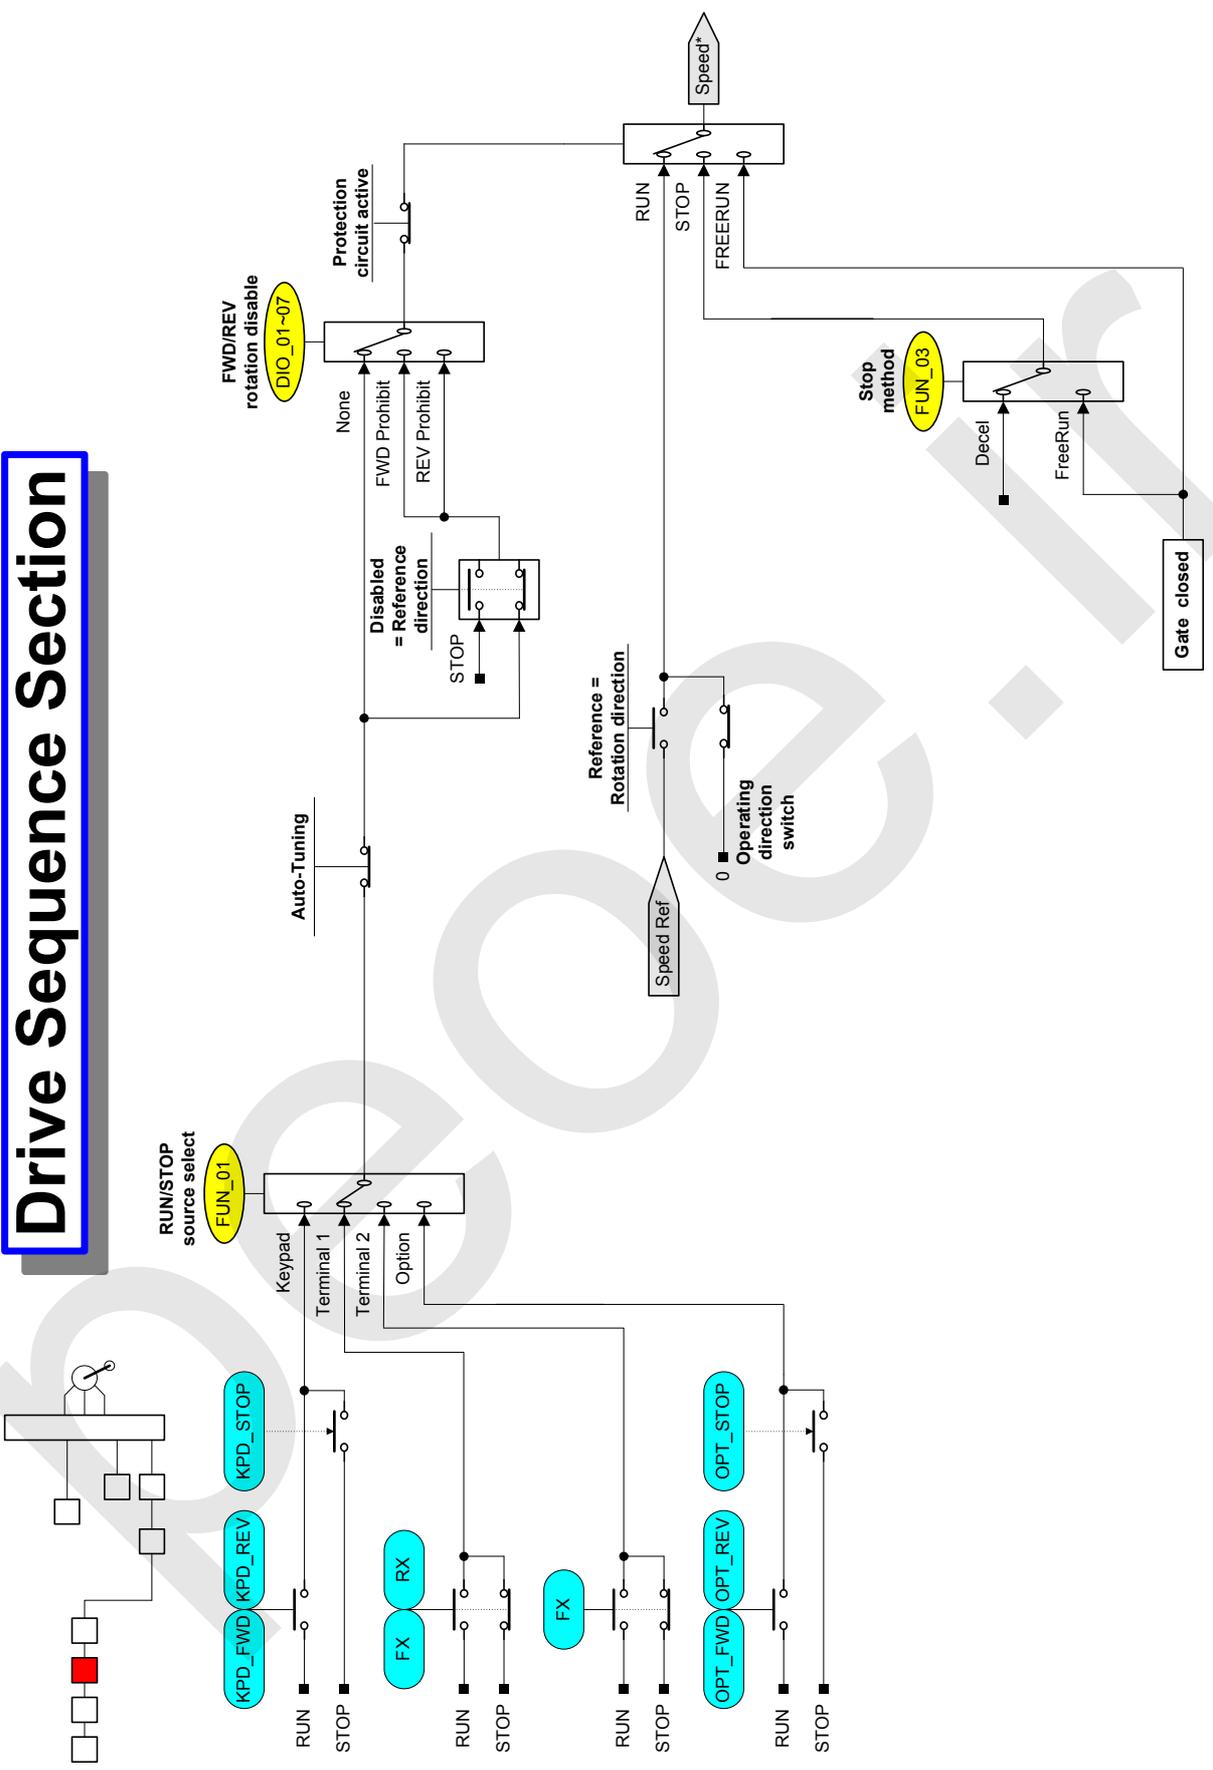

# Accel/Decel Section

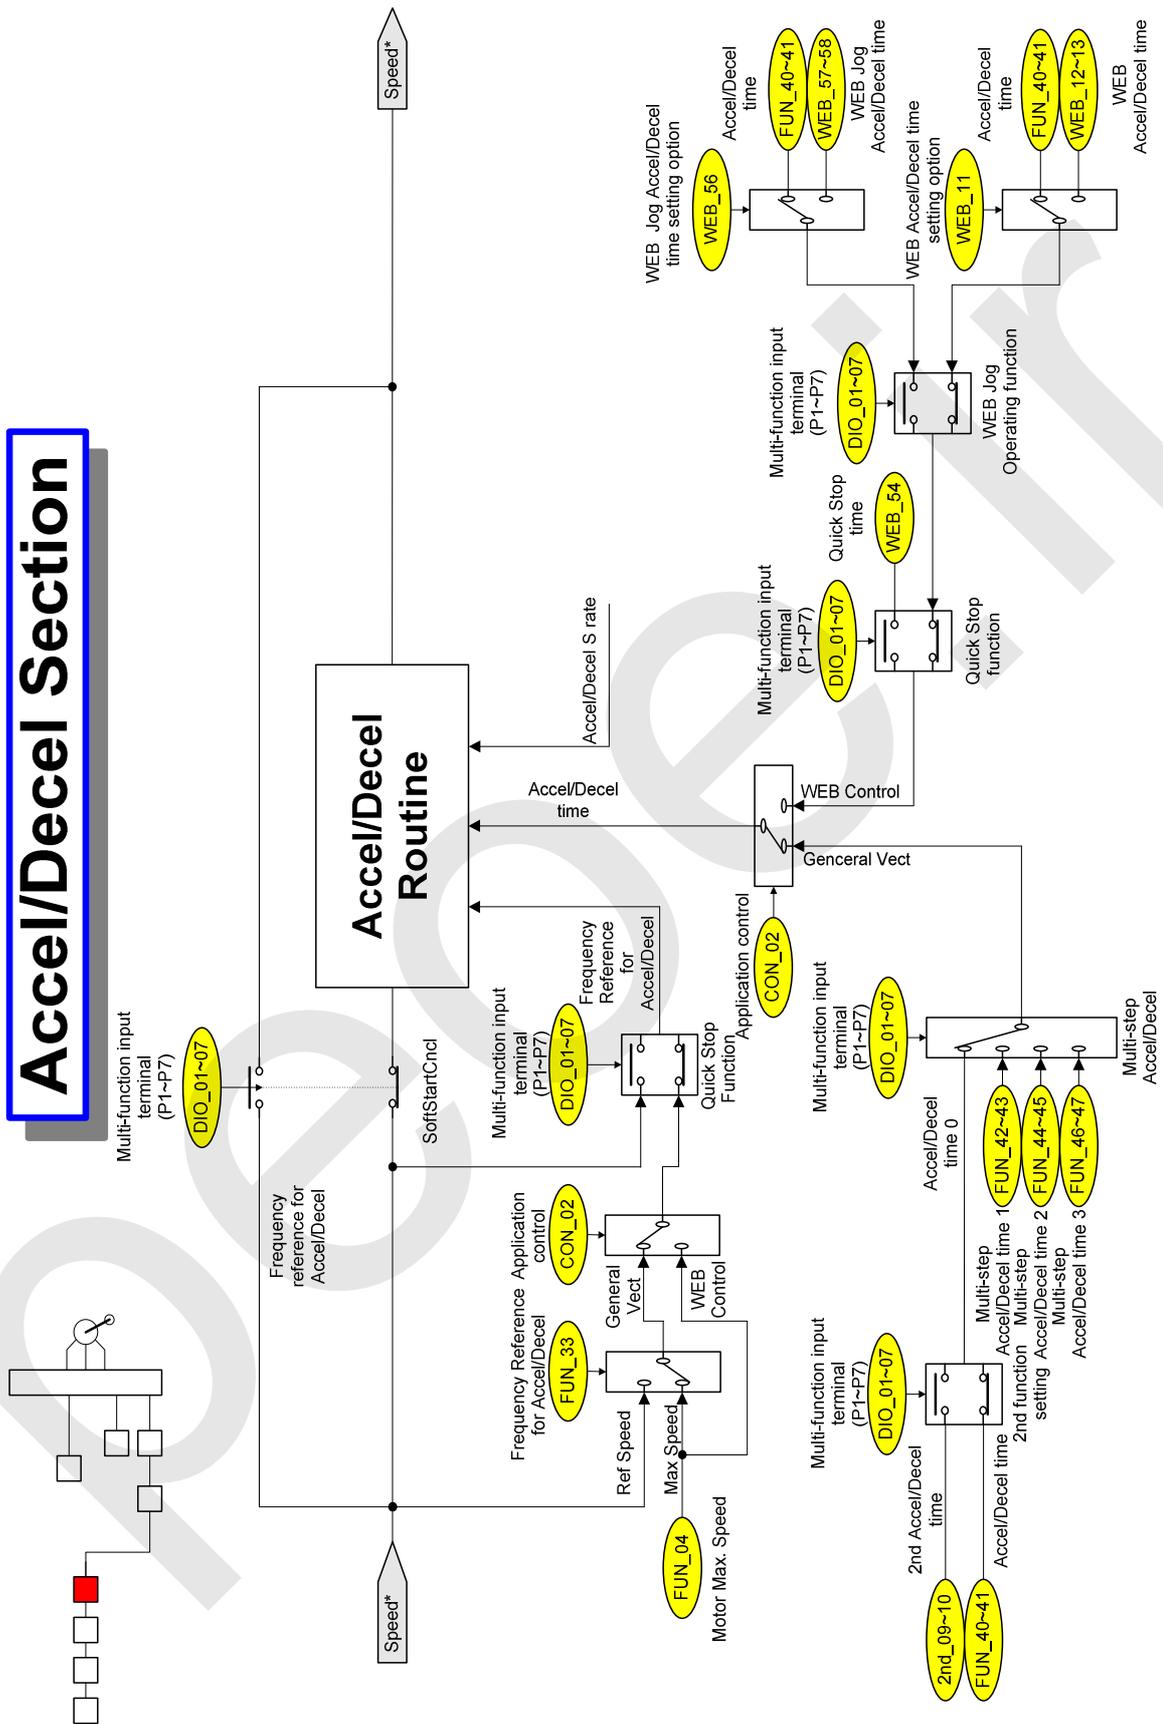


# Freq./Speed Command Control

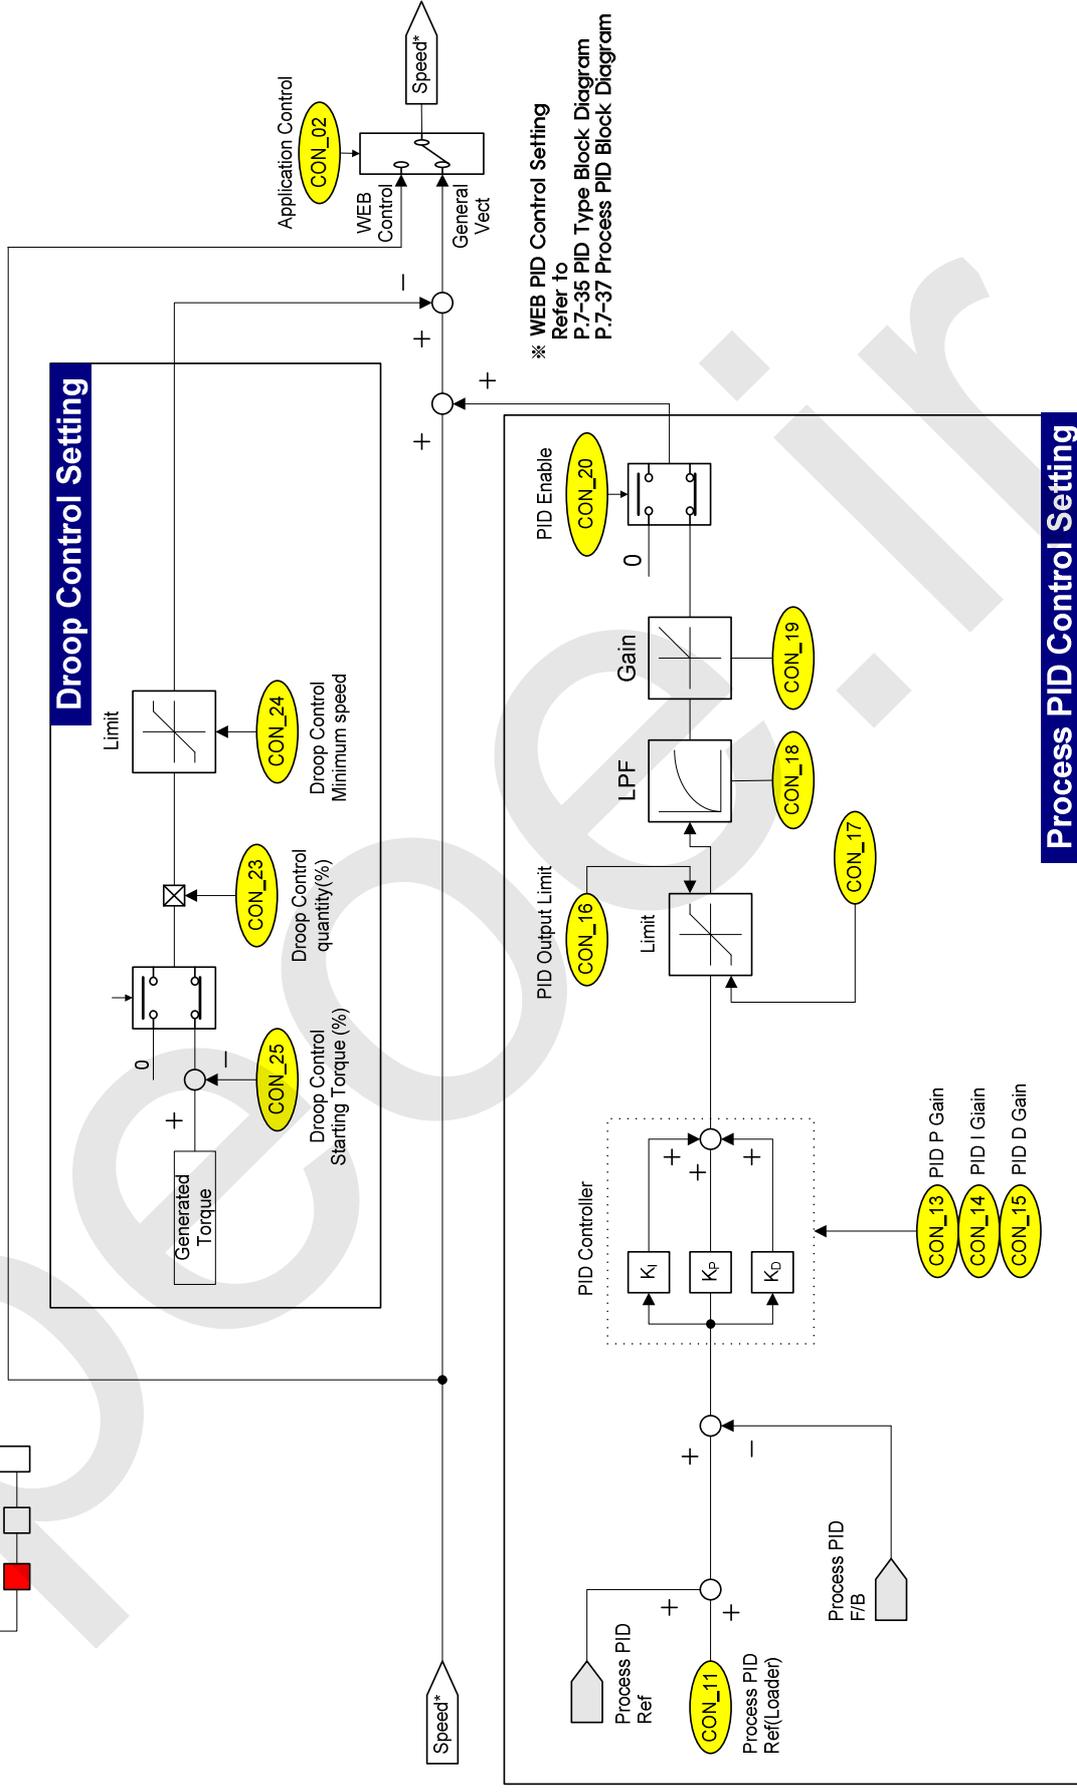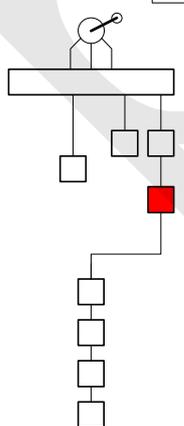


※ WEB PID Control Setting  
 Refer to  
 P.7-35 PID Type Block Diagram  
 P.7-37 Process PID Block Diagram



# Speed Control Section

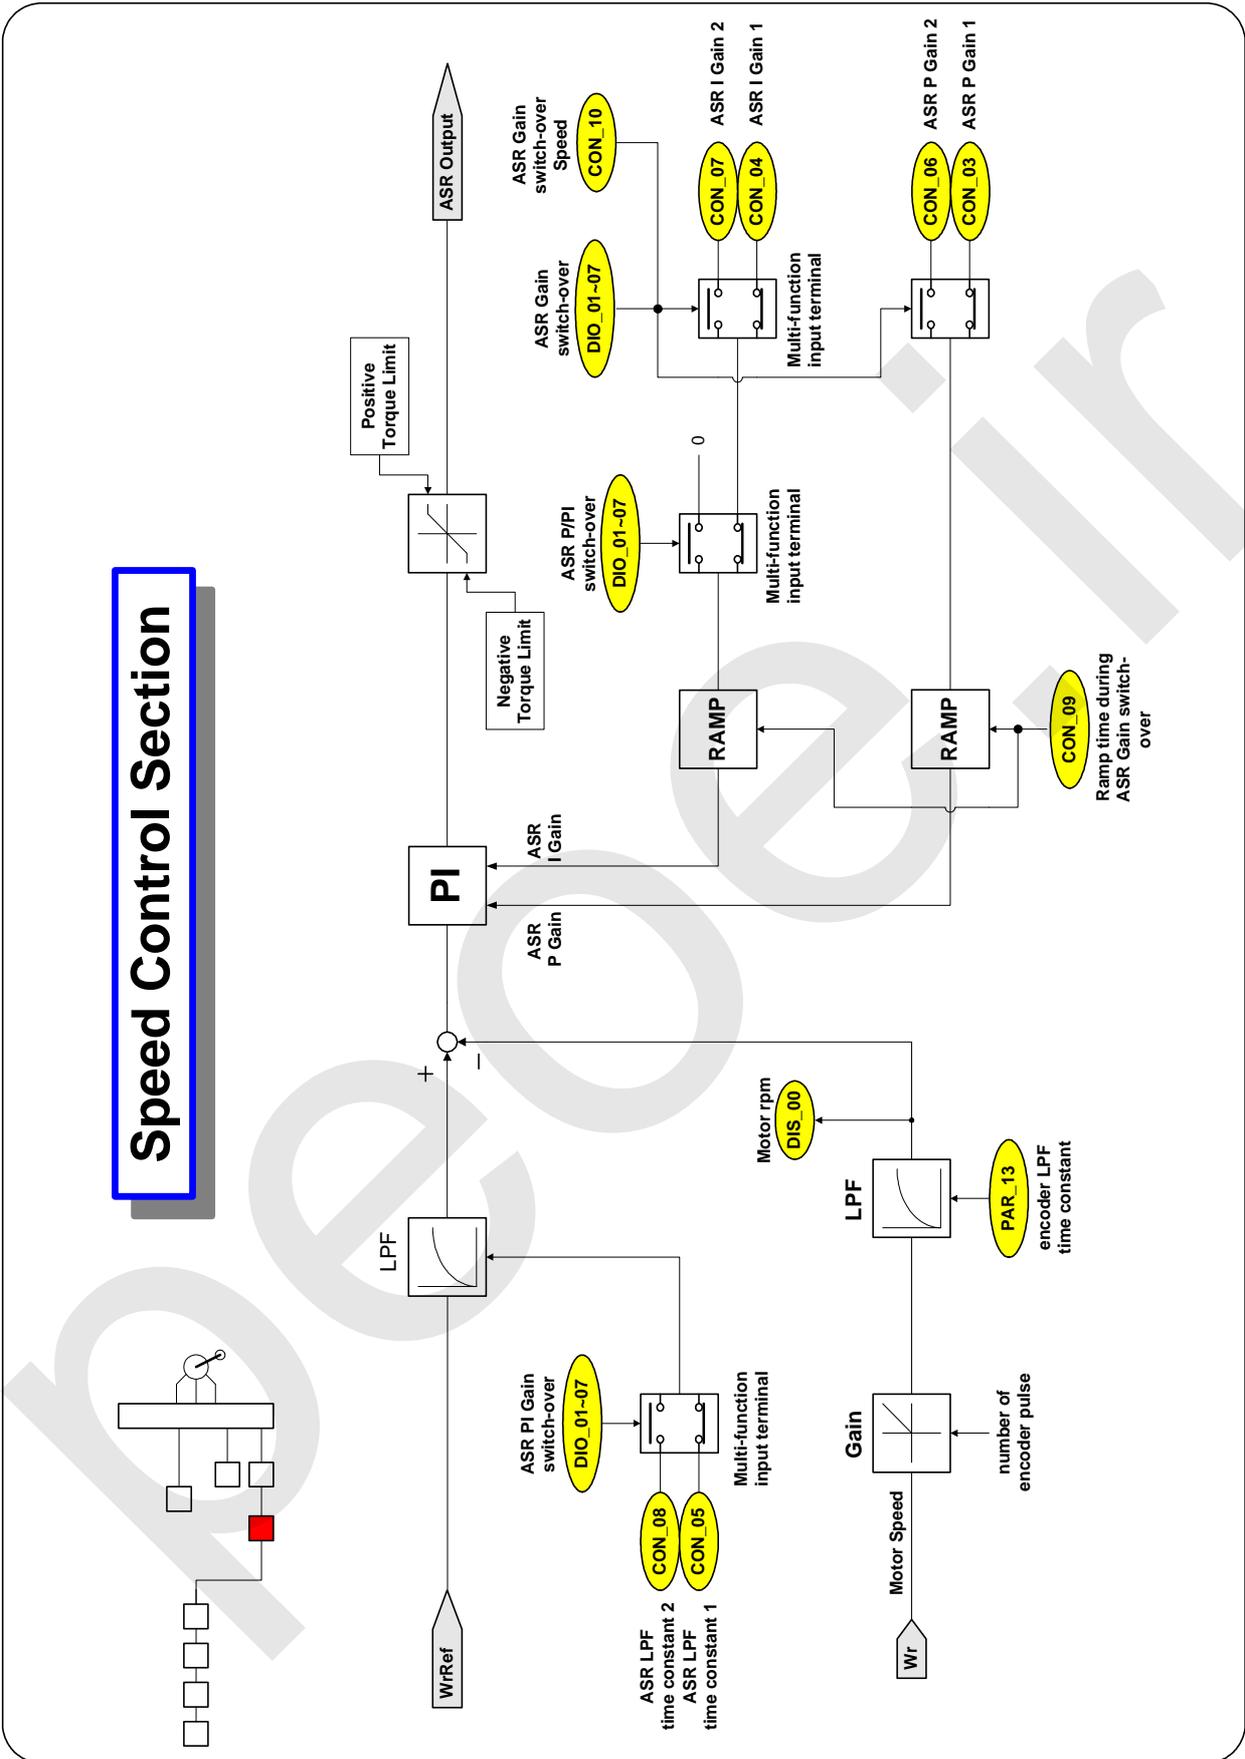


# Torque reference

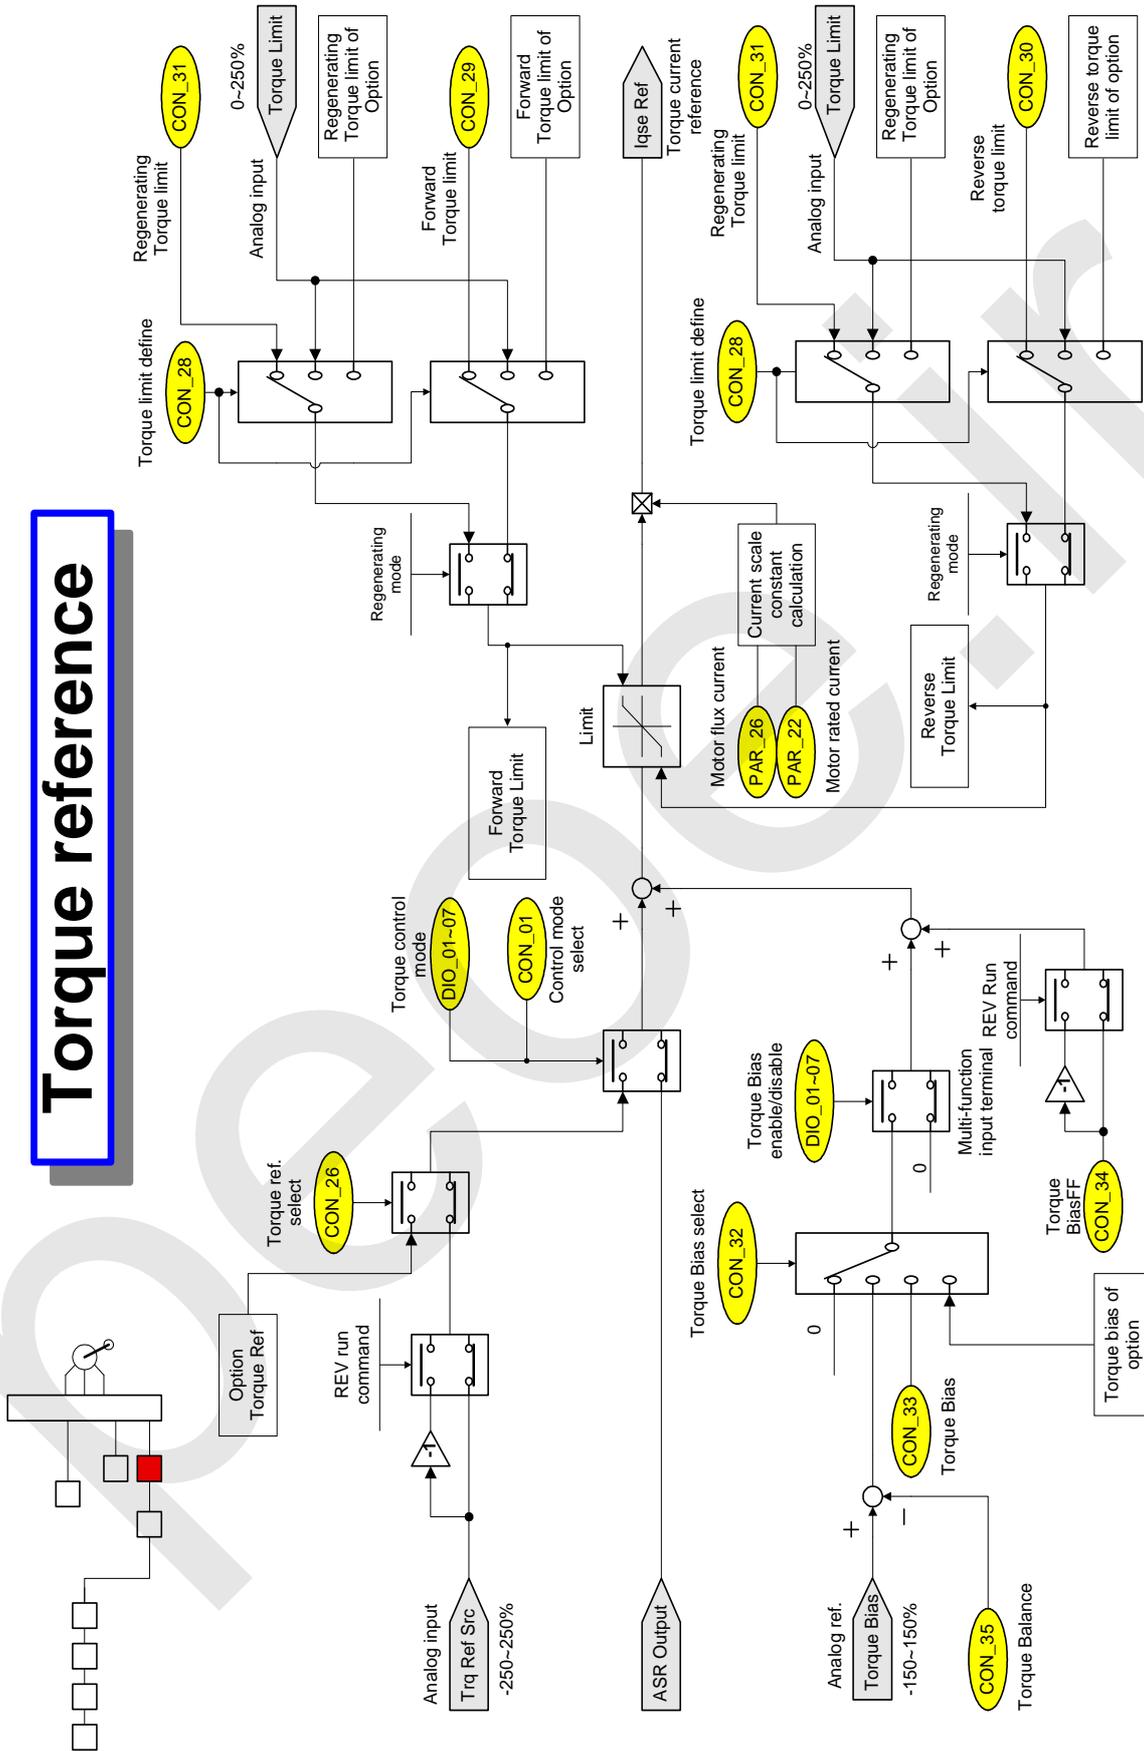



# Flux reference

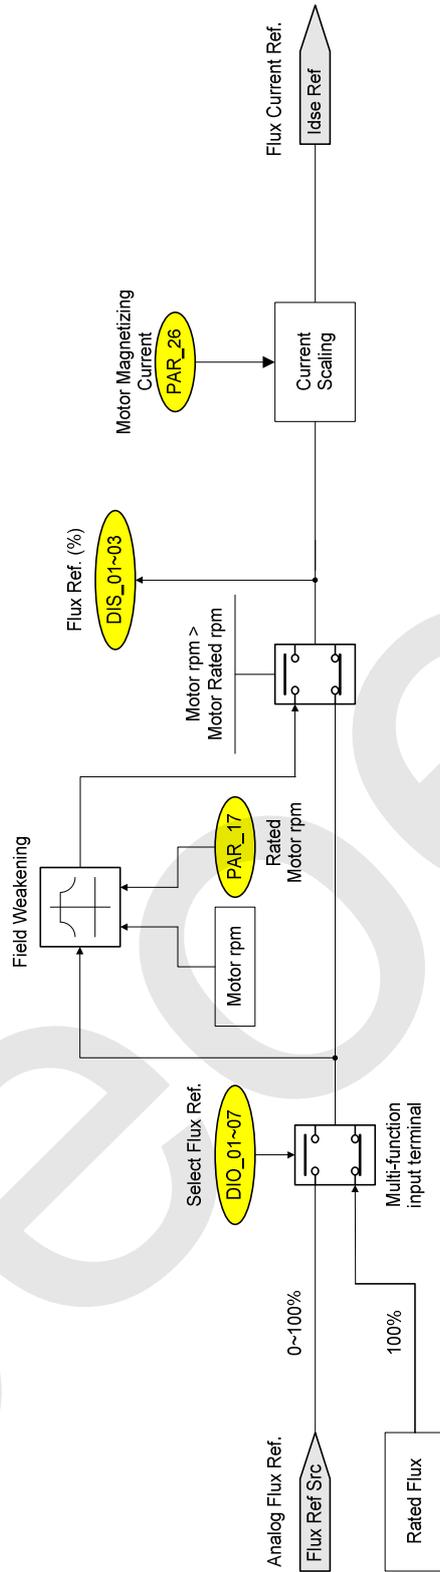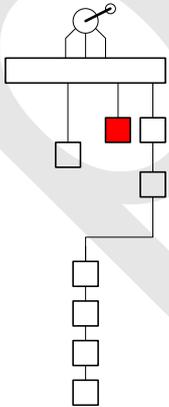


# Angular Velocity Calculation

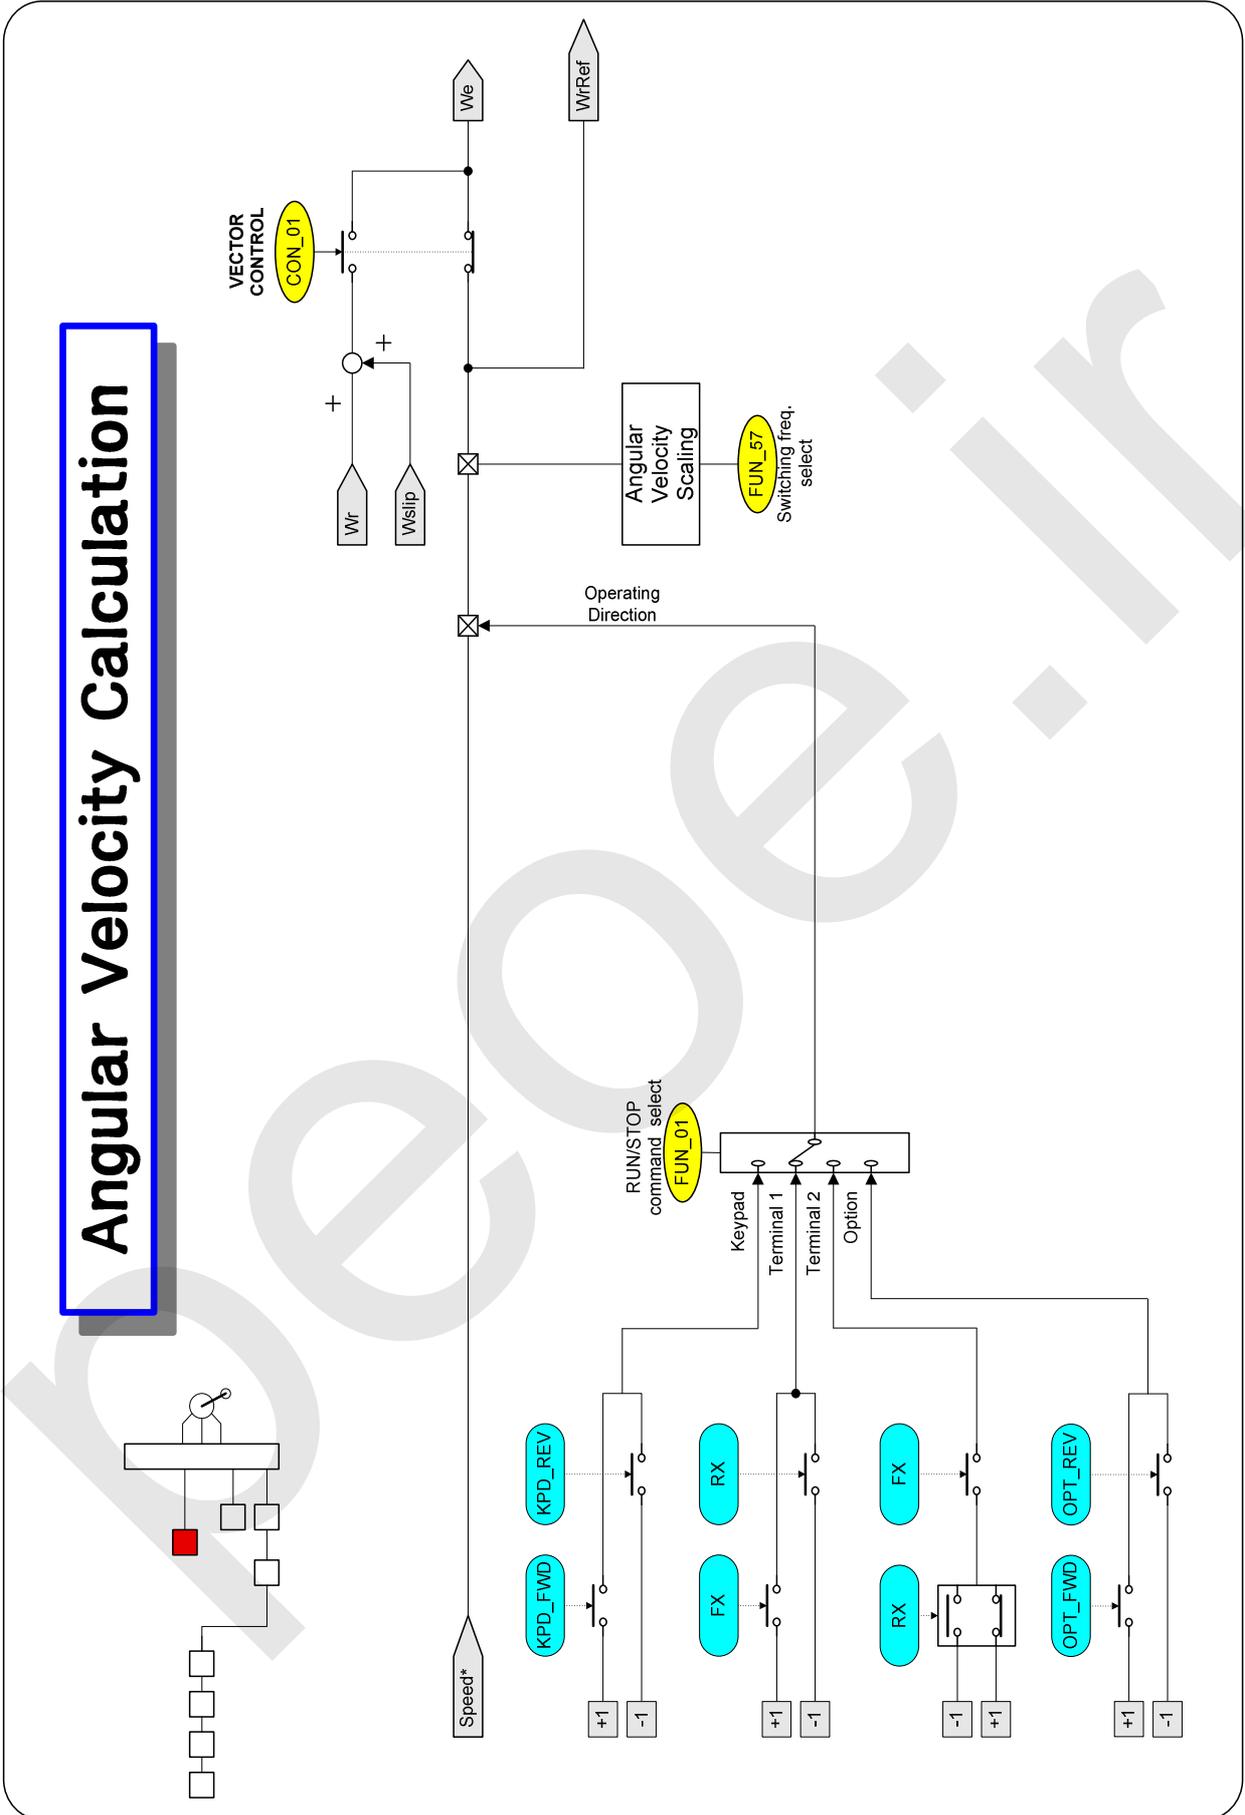

**Motor control section**

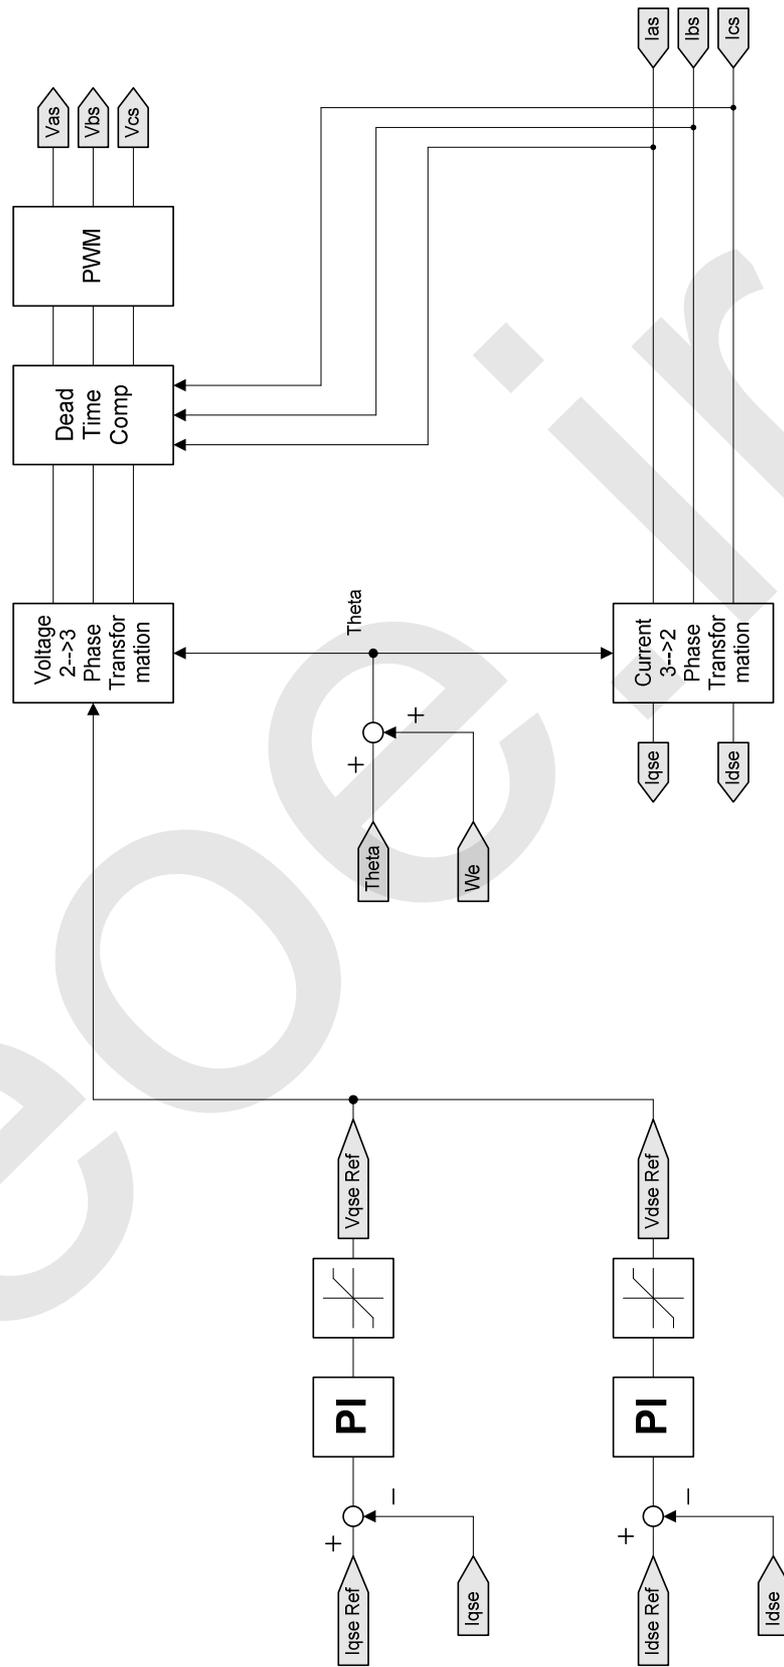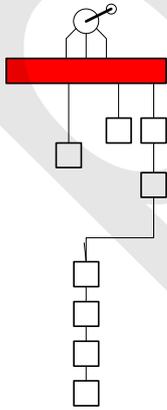

# MFi Output Signal

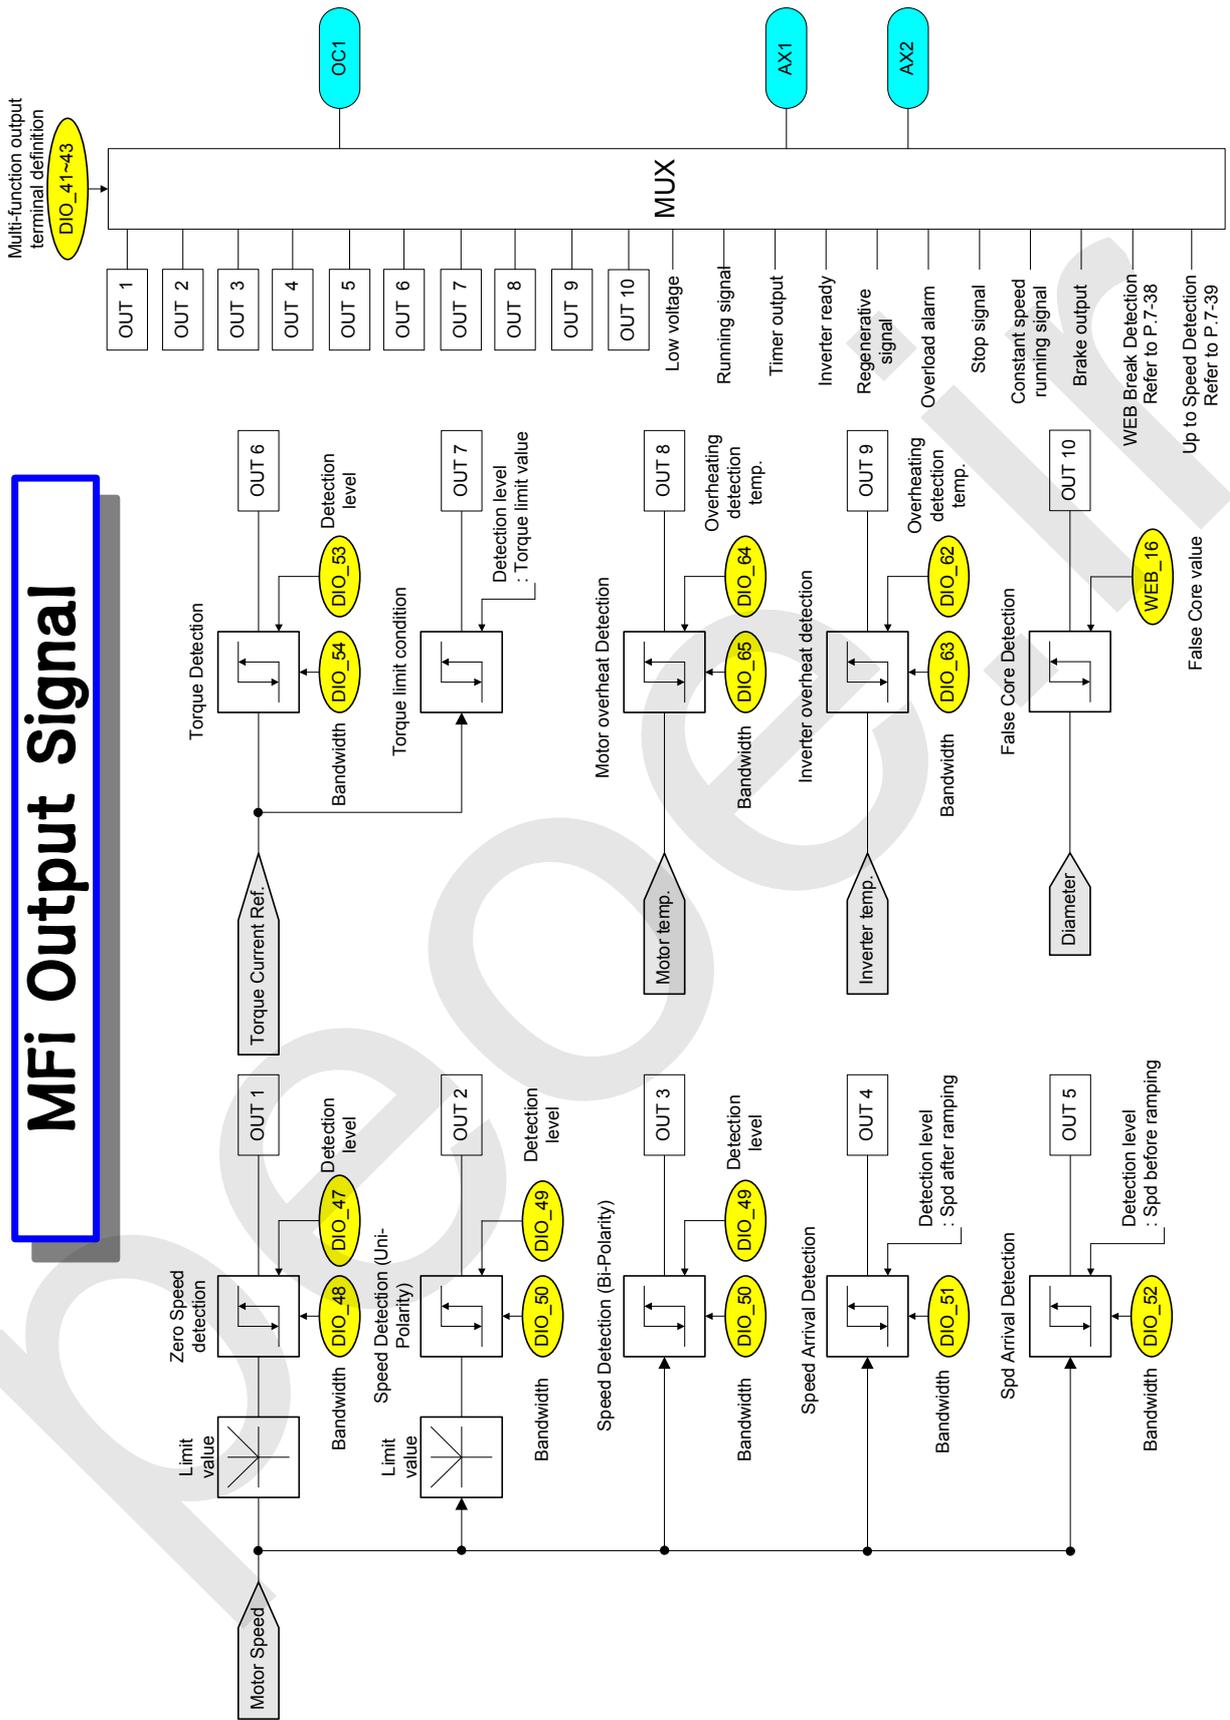

## ADDITIONAL UL MARKING

### 1. Short Circuit Rating

“Suitable For Use On A Circuit Capable Of Delivering Not More Than Table1\* RMS Symmetrical Amperes, 240 for rated 240V drives or 480 for rated 480V drives Volts Maximum,” or equivalent.

Table1\*

Inverter Capacity	Rating
200/400V Class: 5.5kW, 7.5kW, 11kW, 15kW, 18.5 kW, 22kW, 30kW, 37kW	5,000A
400V Class: 45kW, 55kW, 75kW, 90kW, 110kW, 132kW	10,000A
400V Class: 160kW, 220kW	18,000A

### 2. SHORT CIRCUIT FUSE/BREAKER MARKING

Use Class H or K5 UL Listed Input Fuse and UL Listed Breaker Only. See the table below for the Voltage and Current rating of the fuses and the breakers.

Input [V]	Inverter [kW]	External Fuse		Breaker		Internal Fuse			
		Current [A]	Voltage [V]	Current [A]	Voltage [V]	Current [A]	Voltage [Vac/dc]	Manufacturer	Model Number
200 Class	5.5	40	500	50	220	60	250	Hinode Elec	250GH-60
	7.5	50	500	60	220	60	250	Hinode Elec	250GH-60
	11	70	500	100	220	125	250	Hinode Elec	250GH-125
	15	100	500	100	220	150	250	Hinode Elec	250GH-150
	18.5	100	500	225	220	175	250	Hinode Elec	250GH-175
	22	125	500	225	220	225	250	Hinode Elec	250GH-225
	30	150	500	225	220	250	250	Hinode Elec	250GH-250S
400 Class	37	200	500	225	220	250	250	Hinode Elec	250GH-250S
	5.5	20	500	30	460	35	660	Hinode Elec	660GH-35
	7.5	30	500	30	460	35	660	Hinode Elec	660GH-35
	11	35	500	50	460	63	660	Hinode Elec	660GH-63
	15	45	500	60	460	80	660	Hinode Elec	660GH-80
	18.5	60	500	100	460	100	660	Hinode Elec	660GH-100
	22	70	500	100	460	125	660	Hinode Elec	660GH-125
	30	100	500	100	460	125	600	Hinode Elec	600FH-125S
	37	100	500	225	460	150	600	Hinode Elec	600FH-150S
	45	100	500	225	460	200	600	Hinode Elec	600FH-200S
	55	150	500	225	460	200	600	Hinode Elec	600FH-200S
	75	200	500	225	460	125	600	Hinode Elec	600FH-125S
	90	250	500	400	460	200	600	Hinode Elec	600FH-200S
	110	300	500	400	460	200	600	Hinode Elec	600FH-200S
	132	400	500	400	460	300	600	Hinode Elec	600FH-300S
160	400	500	400	460	300	600	Hinode Elec	600FH-300S	
220	—	—	600	460	600	600	Hinode Elec	600SPF-600UL	

### 3. FIELD WIRING TERMINAL

- 1) Use Copper wires only with Copper conductors, 75°C
- 2) Input and motor output terminal blocks are intended only for use with ring type connectors.

### 4. CAUTION-Risk of Electric Shock

“Before opening the cover, disconnect all power and wait at least 10 minutes”

Units suitable only for use in a pollution degree 2 environment. Be sure to mount the inverter in a forced-ventilated operating panel.



**EMI / RFI POWER LINE FILTERS**  
**LS inverters, iV5 series**



**RFI FILTERS**

THE LS RANGE OF POWER LINE FILTERS FF ( Footprint ) - FE ( Standard ) SERIES, HAVE BEEN SPECIFICALLY DESIGNED WITH HIGH FREQUENCY LG INVERTERS. THE USE OF LS FILTERS, WITH THE INSTALLATION ADVICE OVERLEAF HELP TO ENSURE TROUBLE FREE USE ALONG SIDE SENSITIVE DEVICES AND COMPLIANCE TO CONDUCTED EMISSION AND IMMUNITY STANDARDS TO EN 50081.

**CAUTION**

IN CASE OF A LEAKAGE CURRENT PROTECTIVE DEVICES IS USED ON POWER SUPPLY, IT MAY BE FAULT AT POWER-ON OR OFF. IN AVOID THIS CASE, THE SENSE CURRENT OF PROTECTIVE DEVICE SHOULD BE LARGER THAN VALUE OF LAKAGE CURRENT AT WORST CASE IN THE BELOW TABLE.


**RECOMMENDED INSTALLATION INSTRUCTIONS**

To conform to the EMC directive, it is necessary that these instructions be followed as closely as possible. Follow the usual safety procedures when working with electrical equipment. All electrical connections to the filter, inverter and motor must be made by a qualified electrical technician.


- 1- ) Check the filter rating label to ensure that the current, voltage rating and part number are correct.
- 2- ) For best results the filter should be fitted as closely as possible to the incoming mains supply of the wiring enclosure, usually directly after the enclosures circuit breaker or supply switch.
- 3- ) The back panel of the wiring cabinet of board should be prepared for the mounting dimensions of the filter. Care should be taken to remove any paint etc... from the mounting holes and face area of the panel to ensure the best possible earthing of the filter.
- 4- ) Mount the filter securely.
- 5- ) Connect the mains supply to the filter terminals marked LINE, connect any earth cables to the earth stud provided. Connect the filter terminals marked LOAD to the mains input of the inverter using short lengths of appropriate gauge cable.
- 6- ) Connect the motor and fit the ferrite core ( output chokes ) as close to the inverter as possible. Armoured or screened cable should be used with the 3 phase conductors only threaded twice through the center of the ferrite core. The earth conductor should be securely earthed at both inverter and motor ends. The screen should be connected to the enclosure body via and earthed cable gland.
- 7- ) Connect any control cables as instructed in the inverter instructions manual.

IT IS IMPORTANT THAT ALL LEAD LENGTHS ARE KEPT AS SHORT AS POSSIBLE AND THAT INCOMING MAINS AND OUTGOING MOTOR CABLES ARE KEPT WELL SEPARATED.

**FF SERIES ( Footprint )**

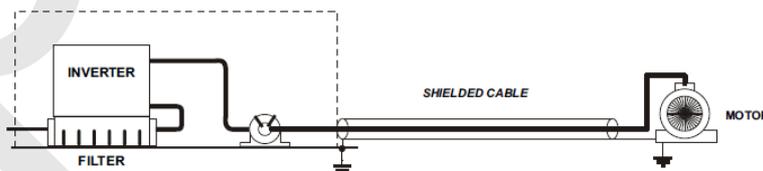

**FE SERIES ( Standard )**

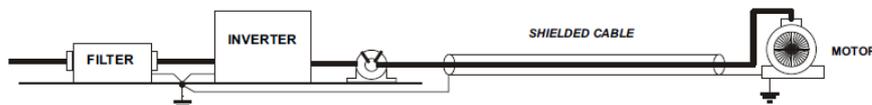

# EC DECLARATION OF CONFORMITY

iV5 series / Footprint Filters												
INVERTER	POWER	CODE	CURRENT	VOLTAGE	LEAKAGE CURRENT	DIMENSIONS L W H	MOUNTING Y X	WEIGHT	MOUNT	FIG.	OUTPUT CHOKES	
					NOM.	MAX.						
<b>THREE PHASE</b>												
SV022iV5-2 (DB)	2.2kW	FFV5-T020-(x)	20A	250VAC	0.5mA	27mA	329x199.5x60	315x160	1.8Kg.	M5	A	FS-2
SV037iV5-2 (DB)	3.7kW											
SV055iV5-2 (DB)	5.5kW	FFV5-T030-(x)	30A	250VAC	0.5mA	27mA	451x234.5x60	437x190	2.1Kg.	M5	A	FS-2
SV075iV5-2 (DB)	7.5kW											
SV110iV5-2 (DB)	11kW	FFV5-T050-(x)	50A	250VAC	0.5mA	27mA	451x234.5x60	437x190	2.6Kg.	M5	A	FS-2
SV150iV5-2 (DB)	15kW											
SV185iV5-2 (DB)	18kW		100A	250VAC	0.5mA	27mA						
SV220iV5-2 (DB)	22kW											
SV300iV5-2 (DB)	30kW		120A	250VAC	0.5mA	27mA						
SV370iV5-2 (DB)	37kW											
SV022iV5-4 (DB)	2.2kW	FFV5-T011-(x)	11A	380VAC	0.5mA	27mA	329x199.5x60	315x160	1.5Kg.	M5	A	FS-2
SV037iV5-4 (DB)	3.7kW											
SV055iV5-4 (DB)	5.5kW	FFV5-T030-(x)	30A	380VAC	0.5mA	27mA	451x234.5x60	437x190	2Kg.	M5	A	FS-2
SV075iV5-4 (DB)	7.5kW											
SV110iV5-4 (DB)	11kW	FFV5-T051-(x)	51A	380VAC	0.5mA	27mA	605x335x65	579.5x265	2.5Kg.	M8	A	FS-2
SV150iV5-4 (DB)	15kW											
SV185iV5-4 (DB)	18kW	FFV5-T060-(x)	60A	380VAC	0.5mA	27mA	605x335x65	579.5x265	2.8Kg.	M8	A	FS-2
SV220iV5-4 (DB)	22kW											
SV220iV5-4 (DB)	22kW	FFV5-T070-(x)	70A	380VAC	0.5mA	27mA	605x335x65	579.5x265	2.8Kg.	M8	A	FS-3
SV300iV5-4 (DB)	30kW											
SV370iV5-4 (DB)	37kW	FFV5-T071-(x)	71A	380VAC	0.5mA	27mA	756x350x65	730.5x281	3Kg.	M8	A	FS-3
SV450iV5-4 (DB)	45kW											
SV550iV5-4 (DB)	55kW		120A	380VAC	0.5mA	27mA						
SV750iV5-4 (DB)	75kW											
SV900iV5-4 (DB)	90kW		170A	380VAC	0.5mA	27mA						
SV1100iV5-4 (DB)	110kW											
SV1320iV5-4 (DB)	132kW		230A	380VAC	0.5mA	27mA						
SV1600iV5-4 (DB)	160kW											
SV2200iV5-4 (DB)	220kW		400A	380VAC	0.5mA	27mA						
SV2800iV5-4 (DB)	280kW											
SV3150iV5-4 (DB)	315kW		600A	380VAC	0.5mA	27mA						
SV3750iV5-4 (DB)	375kW											
SV055iV5-2DB (MD)	5.5kW	FFV5-T031-(x)	31A	250VAC	0.5mA	27mA	400x199.5x60	386x160	2Kg.	M5	A	FS-2
SV075iV5-2DB (MD)	7.5kW											
SV110iV5-2DB (MD)	11kW	FFV5-T052-(x)	52A	250VAC	0.5mA	27mA	400x199.5x60	386x160	2.5Kg.	M5	A	FS-2
SV150iV5-2DB (MD)	15kW											
SV185iV5-2DB (MD)	18kW		100A	250VAC	0.5mA	27mA					A	FS-2
SV220iV5-2DB (MD)	22kW											
SV055iV5-4DB (MD)	5.5kW	FFV5-T031-(x)	31A	380VAC	0.5mA	27mA	400x199.5x60	386x160	2Kg.	M5	A	FS-2
SV075iV5-4DB (MD)	7.5kW											
SV110iV5-4DB (MD)	11kW	FFV5-T053-(x)	53A	380VAC	0.5mA	27mA	466x258x65	440.5x181	2.5Kg.	M5	A	FS-2
SV150iV5-4DB (MD)	15kW											
SV185iV5-4DB (MD)	18kW	FFV5-T061-(x)	61A	380VAC	0.5mA	27mA	541x312x65	515.5x235	2.6Kg.	M8	A	FS-2
SV220iV5-4DB (MD)	22kW											
SV220iV5-4DB (MD)	22kW	FFV5-T072-(x)	72A	380VAC	0.5mA	27mA	541x312x65	515.5x235	2.8Kg.	M8	A	FS-3
SV220iV5-4DB (MD)	22kW											


X (1) Industrial environment EN 50081-2 (A class) → EN61000-6-4:02

(2) Domestic and industrial environment EN50081-1 (B class) -> EN61000-6-3:02

# EC DECLARATION OF CONFORMITY

iV5 series / Standard Filters															
INVERTER	POWER	CODE	CURRENT	VOLTAGE	LEAKAGE CURRENT		DIMENSIONS			MOUNTING		WEIGHT	MOUNT	FIG.	OUTPUT CHOKES
					NOM.	MAX.	L	W	H	Y	X				
<b>THREE PHASE</b>															
SV022iV5-2 (DB)	2.2kW	FE-T020-(x)	20A	250VAC	0.5mA	27mA	270x140x60	258x106	2.2Kg.	---	B	FS-2			
SV037iV5-2 (DB)	3.7kW														
SV055iV5-2 (DB)	5.5kW														
SV075iV5-2 (DB)	7.5kW	FE-T030-(x)	30A	250VAC	0.5mA	27mA	270x140x60	258x106	2.4Kg.	---	B	FS-2			
SV110iV5-2 (DB)	11kW	FE-T050-(x)	50A	250VAC	0.5mA	27mA	270x140x90	258x106	3.2Kg.	---	B	FS-2			
SV150iV5-2 (DB)	15kW	FE-T100-(x)	100A	250VAC	0.5mA	27mA	425x200x130	408x166	13.8Kg.	---	B	FS-3			
SV185iV5-2 (DB)	18kW														
SV220iV5-2 (DB)	22kW														
SV300iV5-2 (DB)	30kW	FE-T120-(x)	120A	250VAC	0.5mA	27mA	425x200x130	408x166	13.8Kg.	---	B	FS-3			
SV370iV5-2 (DB)	37kW	FE-T150-(x)	150A	250VAC	0.5mA	27mA	480x200x160	468x166	15Kg.	---	B	FS-3			
SV370iV5-2 (DB)	37kW	FE-T170-(x)	170A	250VAC	0.5mA	27mA	480x200x160	468x166	16Kg.	---	B	FS-3			
SV022iV5-4 (DB)	2.2kW	FE-T012-(x)	12A	380VAC	0.5mA	27mA	250x110x60	238x76	1.6Kg.	---	B	FS-2			
SV037iV5-4 (DB)	3.7kW														
SV055iV5-4 (DB)	5.5kW														
SV075iV5-4 (DB)	7.5kW	FE-T030-(x)	30A	380VAC	0.5mA	27mA	270x140x60	258x106	2.4Kg.	---	B	FS-2			
SV110iV5-4 (DB)	11kW	FE-T050-(x)	50A	380VAC	0.5mA	27mA	270x140x90	258x106	3.2Kg.	---	B	FS-2			
SV150iV5-4 (DB)	15kW	FE-T060-(x)	60A	380VAC	0.5mA	27mA	270x140x90	258x106	3.5Kg.	---	B	FS-2			
SV185iV5-4 (DB)	18kW														
SV220iV5-4 (DB)	22kW														
SV300iV5-4 (DB)	30kW	FE-T070-(x)	70A	380VAC	0.5mA	27mA	350x180x90	338x146	7.5Kg.	---	B	FS-3			
SV370iV5-4 (DB)	37kW	FE-T100-(x)	100A	380VAC	1.3mA	150mA	425x200x130	408x166	13.8Kg.	---	B	FS-3			
SV450iV5-4 (DB)	45kW	FE-T120-(x)	120A	380VAC	1.3mA	150mA	425x200x130	408x166	13.8Kg.	---	B	FS-3			
SV550iV5-4 (DB)	55kW														
SV750iV5-4 (DB)	75kW														
SV900iV5-4 (DB)	90kW	FE-T170-(x)	170A	380VAC	1.3mA	150mA	480x200x160	468x166	16Kg.	---	B	FS-3			
SV900iV5-4 (DB)	90kW	FE-T230-(x)	230A	380VAC	1.3mA	150mA	580x250x205	560x170	22.6Kg.	---	B	FS-4			
SV1100iV5-4 (DB)	110kW	FE-T400-(x)	400A	380VAC	1.3mA	150mA	392x260x116	240x235	10.3Kg.	---	C	FS-4			
SV1320iV5-4 (DB)	132kW														
SV1600iV5-4 (DB)	160kW														
SV2200iV5-4 (DB)	220kW	FE-T600-(x)	600A	380VAC	1.3mA	150mA	392x260x116	240x235	10.3Kg.	---	C	FS-4			
SV2800iV5-4 (DB)	280kW														
SV3150iV5-4 (DB)	315kW														
SV3750iV5-4 (DB)	375kW	FE-T1000-(x)	1000A	380VAC	1.3mA	150mA	460x280x166	290x255	18Kg.	---	C	FS-4			
SV055iV5-2DB (MD)	5.5kW	FE-T030-(x)	30A	250VAC	0.5mA	27mA	270x140x60	258x106	2.4Kg.	---	B	FS-2			
SV075iV5-2DB (MD)	7.5kW	FE-T050-(x)	50A	250VAC	0.5mA	27mA	270x140x90	258x106	3.2Kg.	---	B	FS-2			
SV110iV5-2DB (MD)	11kW	FE-T100-(x)	100A	250VAC	0.5mA	27mA	425x200x130	408x166	13.8Kg.	---	B	FS-3			
SV150iV5-2DB (MD)	15kW														
SV185iV5-2DB (MD)	18kW														
SV220iV5-2DB (MD)	22kW	FE-T120-(x)	120A	250VAC	0.5mA	27mA	425x200x130	408x166	13.8Kg.	---	B	FS-3			
SV055iV5-4DB (MD)	5.5kW	FE-T030-(x)	30A	380VAC	0.5mA	27mA	270x140x60	258x106	2.4Kg.	---	B	FS-2			
SV075iV5-4DB (MD)	7.5kW														
SV110iV5-4DB (MD)	11kW														
SV150iV5-4DB (MD)	15kW	FE-T050-(x)	50A	380VAC	0.5mA	27mA	270x140x90	258x106	3.2Kg.	---	B	FS-2			
SV185iV5-4DB (MD)	18kW	FE-T060-(x)	60A	380VAC	0.5mA	27mA	270x140x90	258x106	3.5Kg.	---	B	FS-2			
SV220iV5-4DB (MD)	22kW	FE-T070-(x)	70A	380VAC	0.5mA	27mA	350x180x90	338x146	7.5Kg.	---	B	FS-3			


- X (1) Industrial environment EN 50081-2 (A class) → EN61000-6-4:02  
 (2) Domestic and industrial environment EN50081-1 (B class) -> EN61000-6-3:02

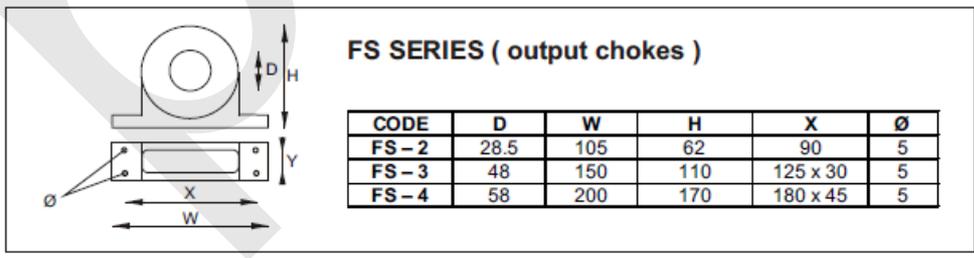

DIMENSIONS

FF SERIES ( Footprint )

FIG. A

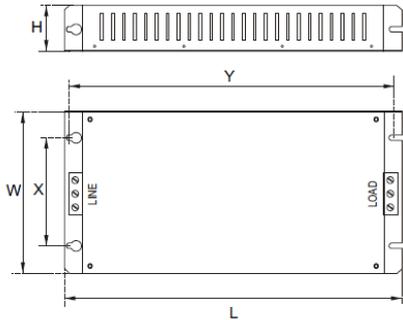

FE SERIES ( Standard )

FIG. B


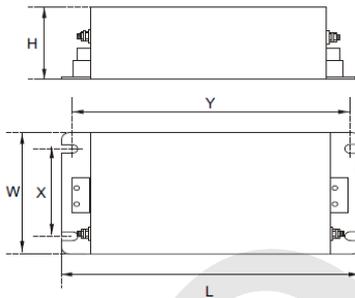


FIG.C

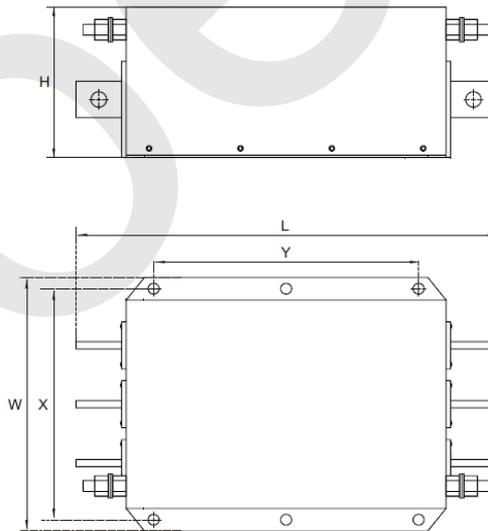

VECTOR MOTOR CONTROL IBÉRICA S.L.  
 C/ Mar del Carib, 10 - Polígono Industrial La Torre del Rector  
 08130 Santa Perpètua de Mogoda - BARCELONA (ESPAÑA)  
 Tel. (+34) 935 748 206 - Fax (+34) 935 748 248 - info@vmc.es

[www.vmc.es](http://www.vmc.es)

## Warranty

<b>Maker</b>	LSIS Co., Ltd.		<b>Installation (Start-up) Date</b>	
<b>Model No.</b>	SV-iv5		<b>Warranty Period</b>	
<b>Customer Information</b>	Name			
	Address			
	Tel.			
<b>Sales Office (Distributor)</b>	Name			
	Address			
	Tel.			

This product has been manufactured through a strict quality management and inspection process by LS Technical Team. The warranty period is 18 months from the date manufactured, provided that, the warranty period is subject change depending on the terms and condition of the agreement under separate cover.

### FOC Service

If there is any failure in the product during the afore-mentioned warranty period you can have it repaired FOC by requesting our distributor or designated service center subject that you are found to have used it under our recommended environment. For further details, please refer to our company's regulation.

### Charged Service

- In the event of any of the following cases, the service will be charged.
  - The failure occurred from the consumer's improper storage, handling, and careless handling
  - The failure occurred from the consumer's error in the design of software or hardware
  - The failure occurred from the error of power source and the defect of the connector
  - The failure occurred from the force majeure (fire, flood, gas disaster, earthquake, etc.)
  - The product was modified or repaired at the discretion of the consumer in the place other than our Distributor or the Service Center.
  - The name plate provided by LS is not attached on the product
  - The product was used in an improper way or beyond the operating range.
- Repair Warranty Period for the Discontinued Model
  - For the product discontinued, the repair service will be provided with charge for five years from the date discontinued.

### ■ Waiver of the warranty for the mechanical loss, etc.

LSIS Co., Ltd. doesn't bear any responsibility to indemnify indirect, special, incidental, or consequential loss (including the indemnification of sales loss, loss profit, etc.





• **HEAD OFFICE**

Address: (HoGye-Dong) 127, LS-ro, DongAn-Gu,  
AnYang-Si, GyeongGi-Do, Korea  
<http://www.lsis.com>

• **LSIS Europe B.V >> Amsterdam, Netherland**

Address: 1st FL., Tupolevlaan 48, 1119NZ Schiphol-Rijk,  
The Nether lands  
Tel: 31-20-654-1420 Fax: 31-20-654-1429

• **LSIS (Middle East) FZE Office >> Dubai, UAE**

Address: LOB 19-205, JAFZA View Tower, Jebel Ali Free Zone,  
Dubai, United Arab Emirates  
Tel: 971-4-886-5360 Fax: 971-4-886-5361

• **Dalian LSIS Co., Ltd. >> Dalian, China**

Address: No. 15 Liaohexi 3-Road, Economic and Technical  
Development Zone, Dalian 116600, China  
Tel: 86-411-8730-7510 Fax: 86-411-8730-7560

• **LSIS Wuxi Co., Ltd. >> Wuxi, China**

Address: No.1 Lexing Road, Wuxi National High&New Tech  
Industrial Development Area, Wuxi214028, Jiangsu, P.T.China  
Tel: 86-510-8534-6666 Fax: 86-510-522-4078

• **LSIS-VINA Co., Ltd. >> Hanoi, Vietnam**

Address: Nguyen Khe, Dong Anh, Ha Noi, Vietnam  
Tel: 84-4-6275-8055 Fax: 84-4-3882-0220

• **LSIS Co., Ltd. Rep. Office >> Hochiminh, Vietnam**

Address: Gema Dept Tower 18F, 6 Le Thanh Ton,  
District 1, HCM, Vietnam  
Tel: 84-8-3823-7890 Fax:

• **LSIS Tokyo Office >> Tokyo, Japan**

Address: Tokyo Club Building 13F, 2-6, Kasumigaseki 3-chome,  
Chiyoda-ku, Tokyo, 100-0013  
Tel: 81-3-6268-8241 Fax: 81-3-6268-8240

• **LSIS Shanghai Office >> Shanghai, China**

Address: 32nd Floor, International Corporate City, No.3000  
NorthZhongshan Road, Putuo District, Shanghai, China, 200063  
Tel: 86-21-5237-9977 (609) Fax: 86-21-5237-7189

• **LSIS Beijing Office >> Beijing, China**

Address: Room 2306, Building B Landgent Center,  
No.24 Middle Road, East 3rd Ring Road,  
Chaoyang District, Beijing, P.R. China  
Tel: 86-10-5761-3127, 7 Fax: 86-10-5761-3128

• **LSIS Guangzhou Office >> Guangzhou, China**

Address: Room 1818-1820, Xinyuan Building, NO.898  
Tianhe North Road, Tianhe District, Guangzhou, P.R. China  
Tel: 86-20-8326-6784 Fax: 86-20-8326-6287

• **LSIS Chengdu Office >> Chengdu, China**

Address: Room1710, 17/F Huamin Empire Plaza,  
NO.1 Fuxin Road, Chengdu, P.R. China  
Tel: 86-28-8670-3200 Fax: 86-28-8670-3203

• **LSIS Qingdao Office >> Qingdao, China**

Address: Room2001, Galaxy Building, 29 ShanDong Road,  
ShiNan District, QingDao, ShanDong, P.R. China  
Tel: 86-532-8501-6058 Fax: 86-532-8501-6057

10310001254

• **Disclaimer of Liability**

LSIS has reviewed the information in this publication to ensure consistency with the hardware and software described. However, LSIS cannot guarantee full consistency, nor be responsible for any damages or compensation, since variance cannot be precluded entirely. Please check again the version of this publication before you use the product.